

Track 7



Inteligencia Artificial Aplicada

13. Motion Classification, Anomaly Detection & Hands-On

Prof. Marcelo José Rovai
rovai@unifei.edu.br

UNIFEI - Universidade Federal de Itajubá, Brazil



Vision



Sound



Vibration



Predict and classify common Elephant behavior






Aggressive



Standing



Sleeping

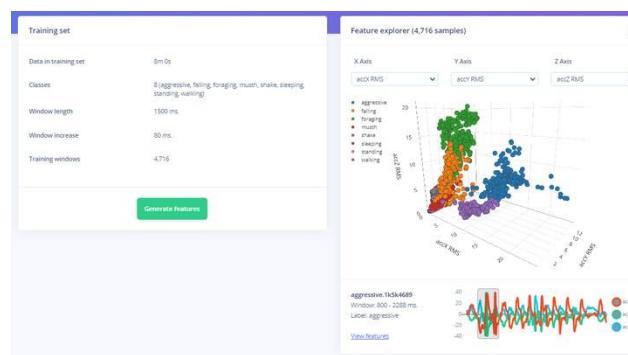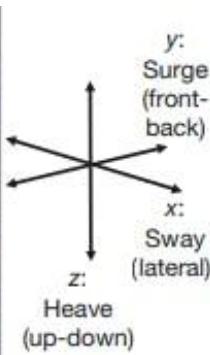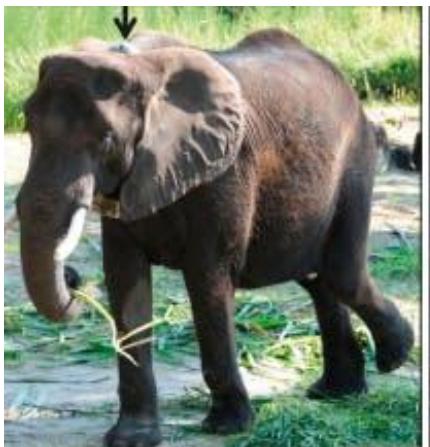


https://www.hackster.io/dhruvsheth_electet-tinyml-and-iot-based-smart-wildlife-tracker-c03e5a



Motion Classification




Case Study: Mechanical Stresses in Transport

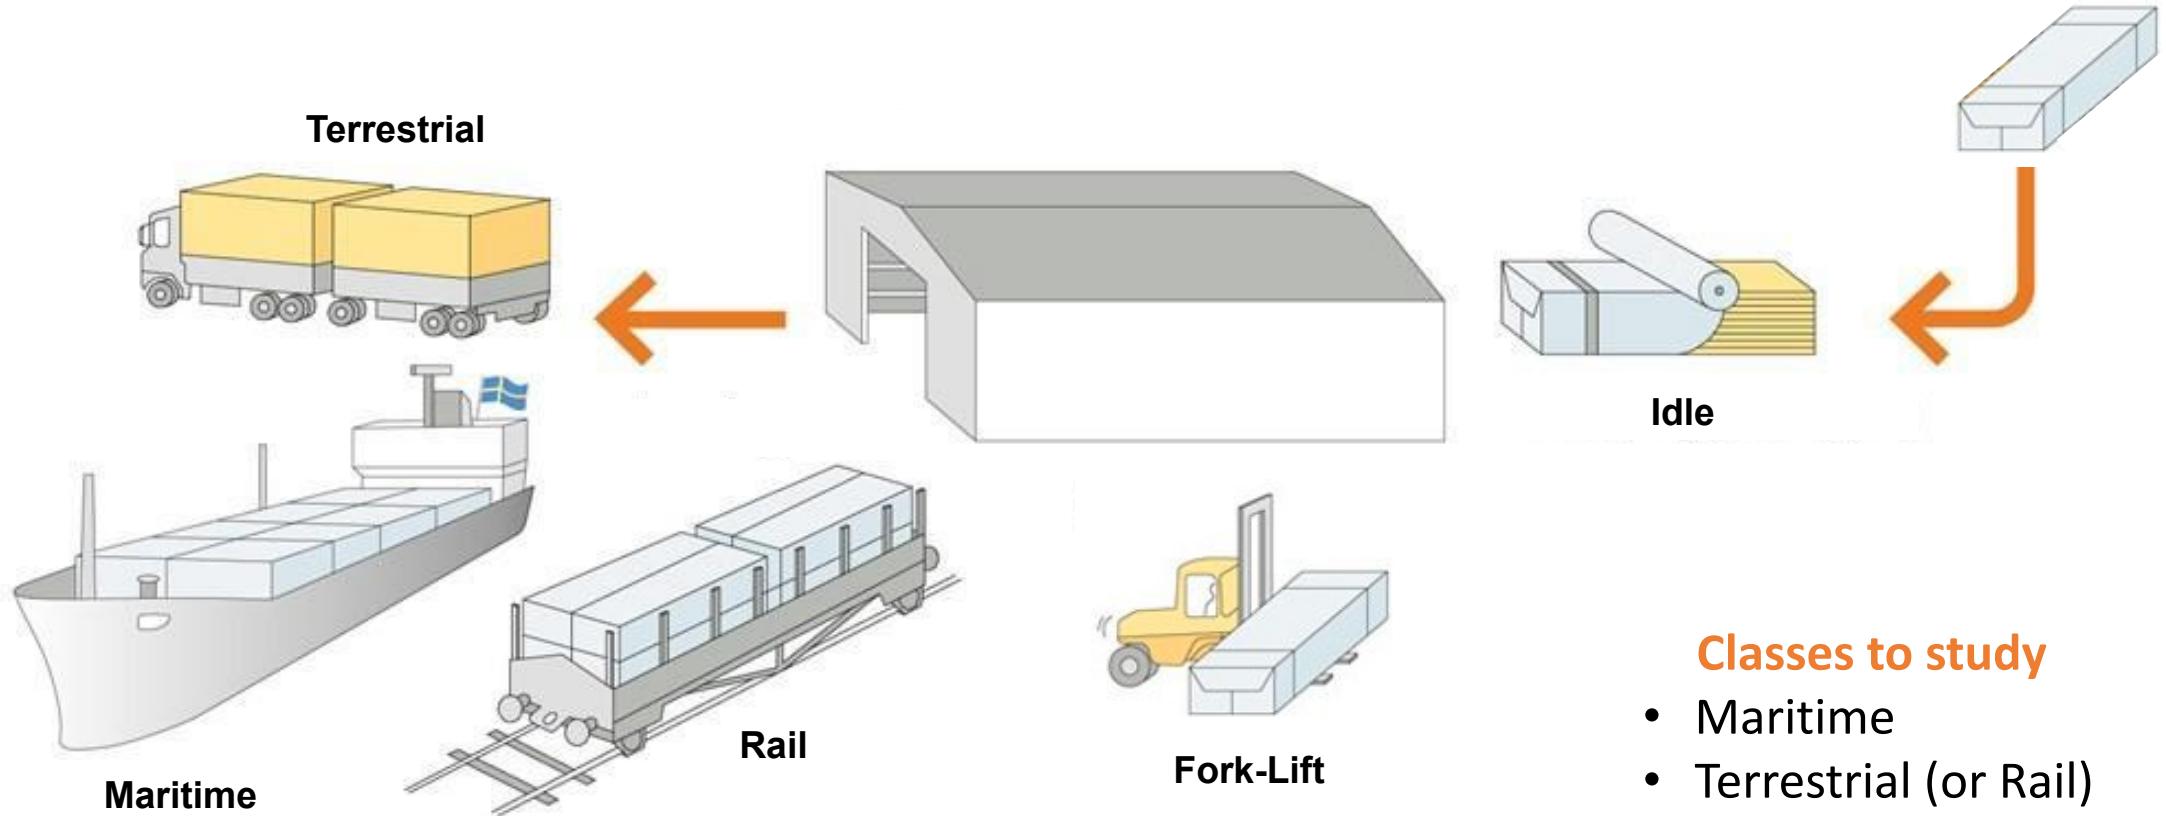



Classes to study

- Maritime
- Terrestrial (or Rail)
- Lift
- Idle






Data Pre-Processing

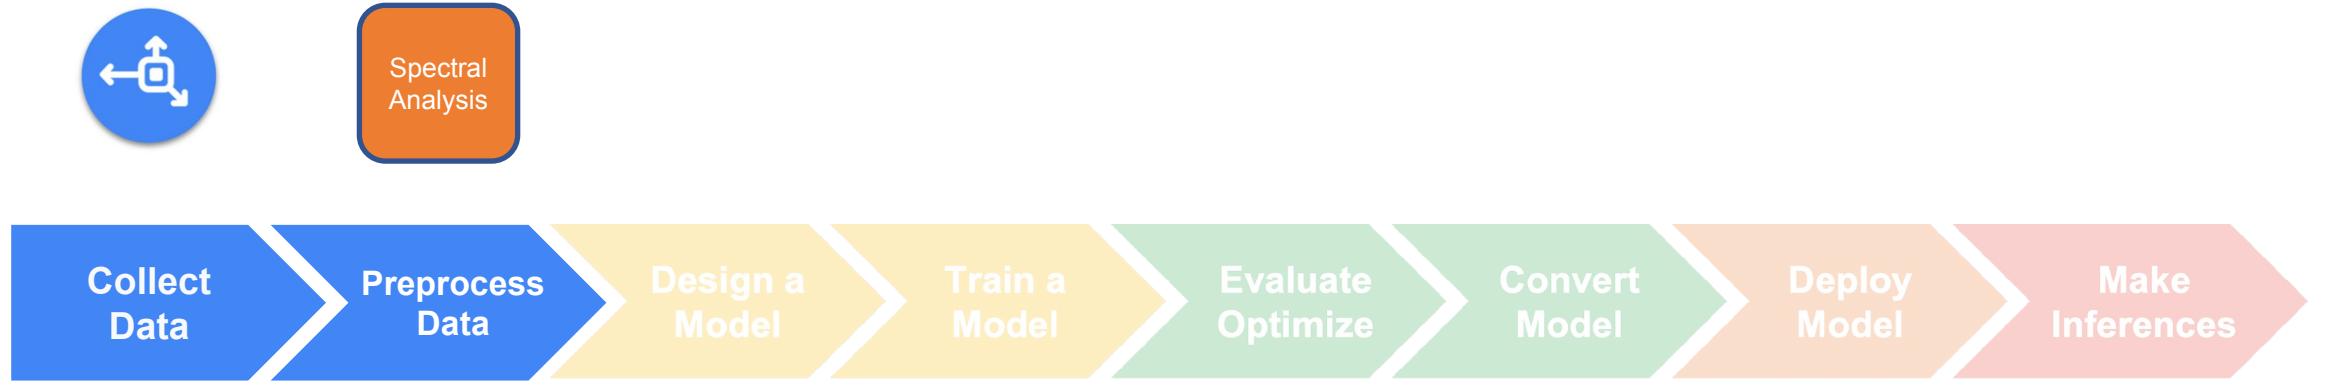



Collect
Data

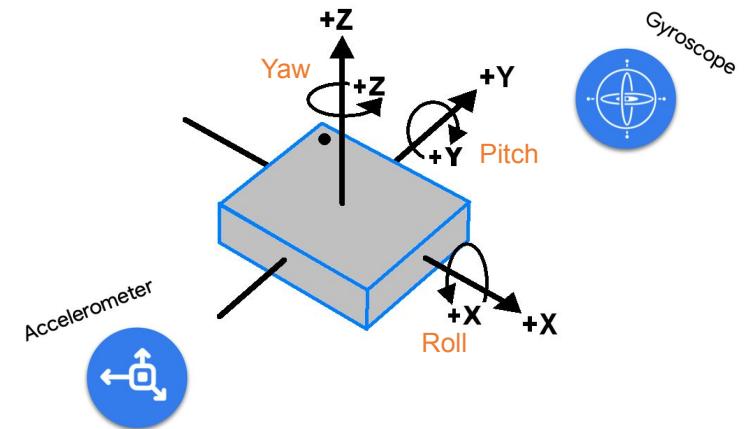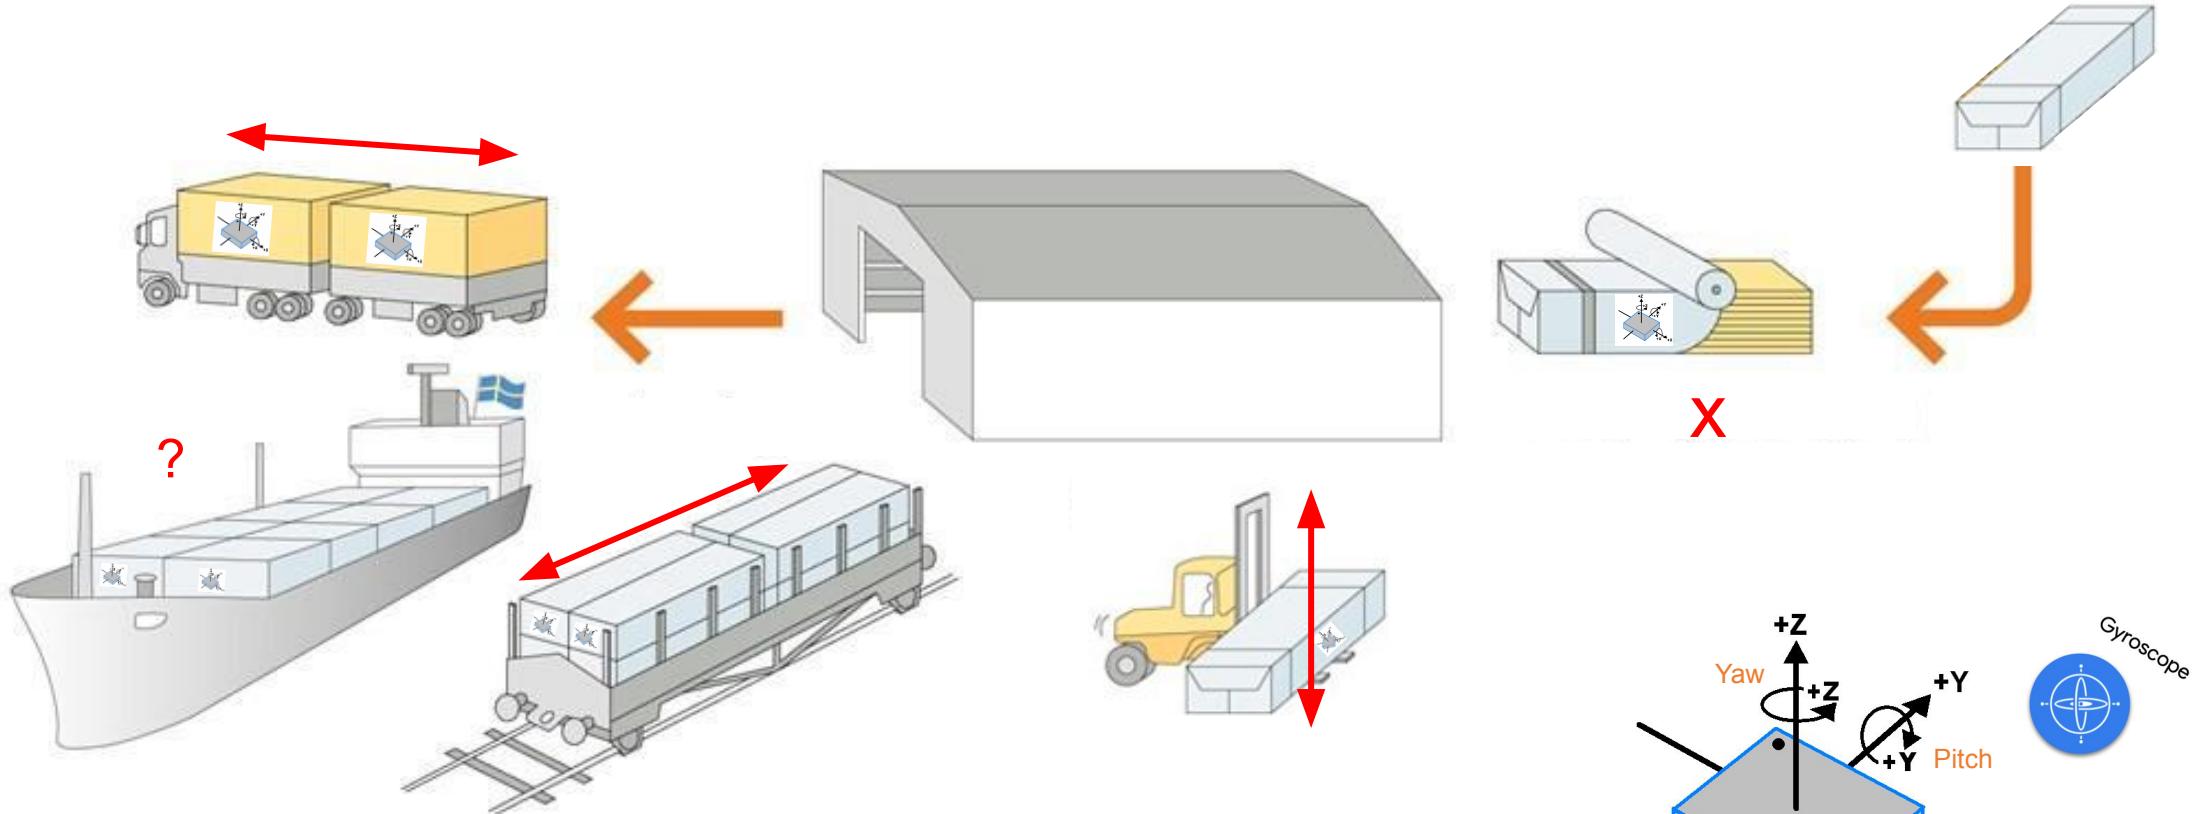



Mechanical Stresses in Maritime Transport

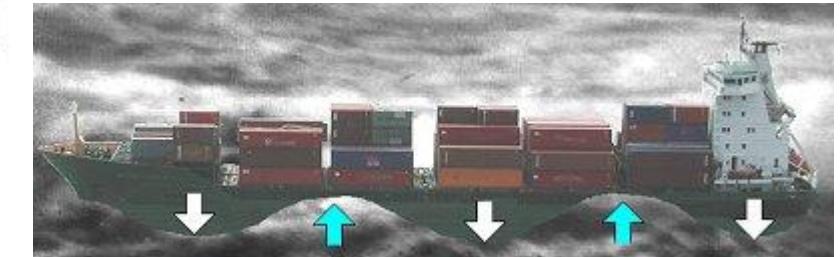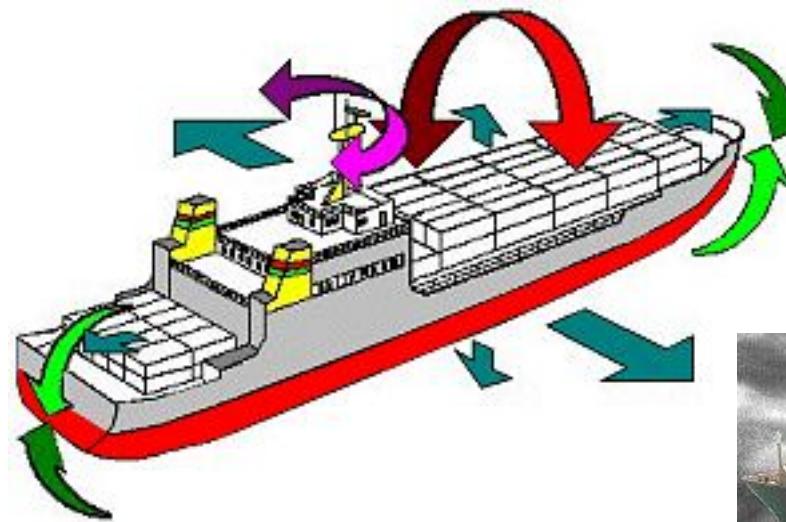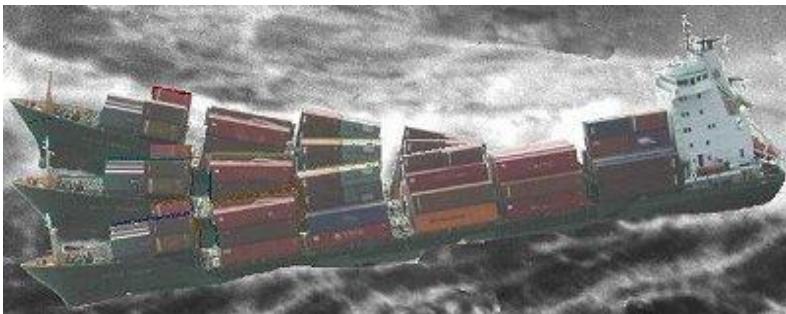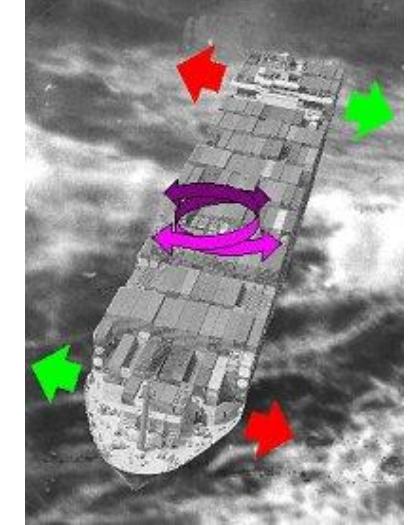
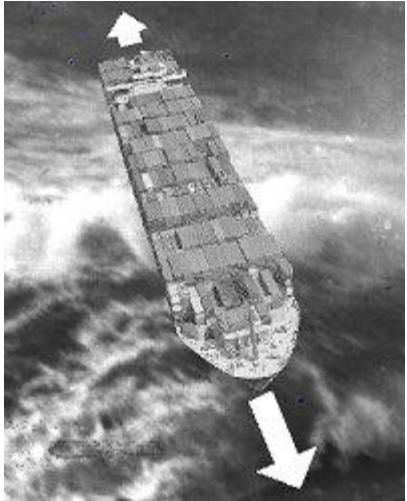




Mechanical Stresses in Maritime Transport

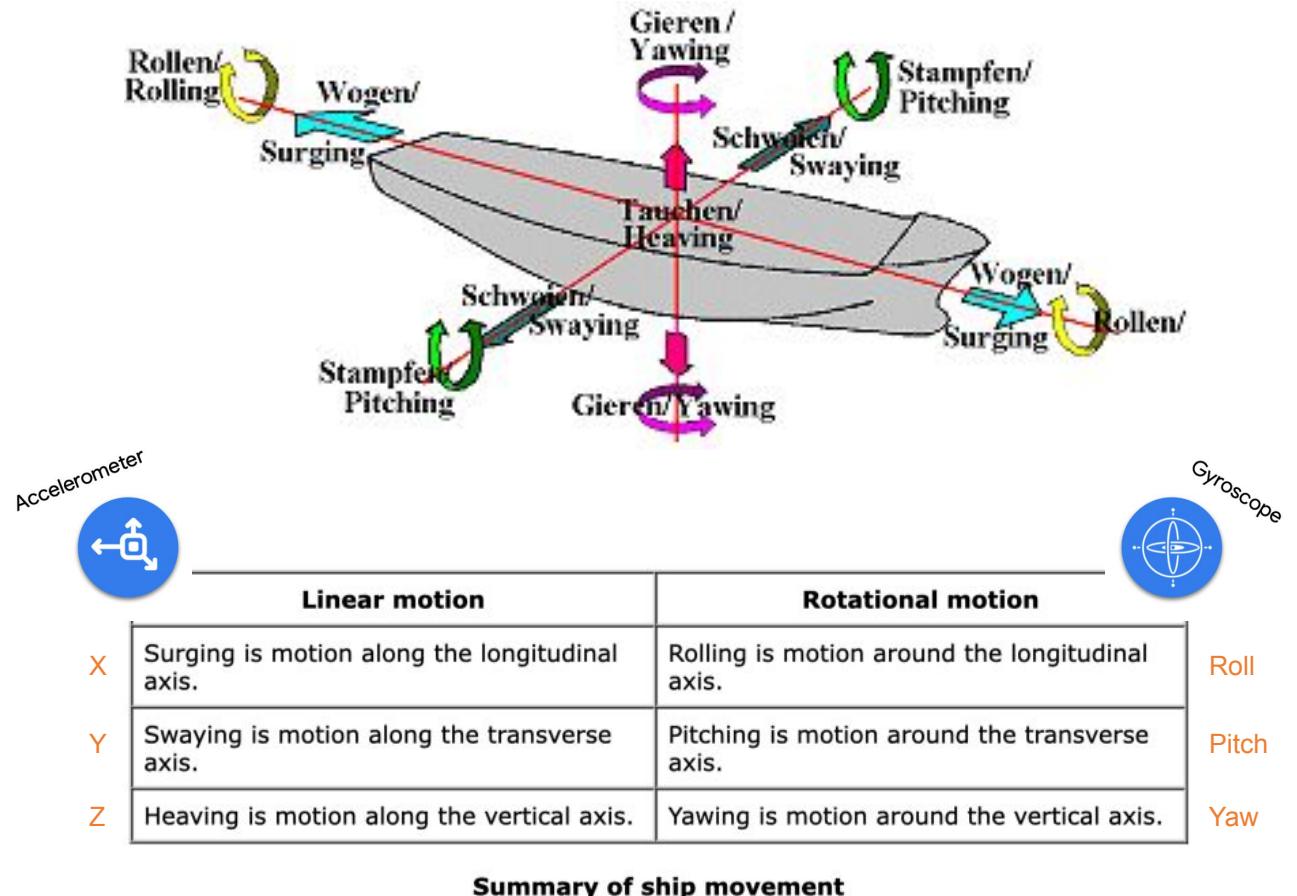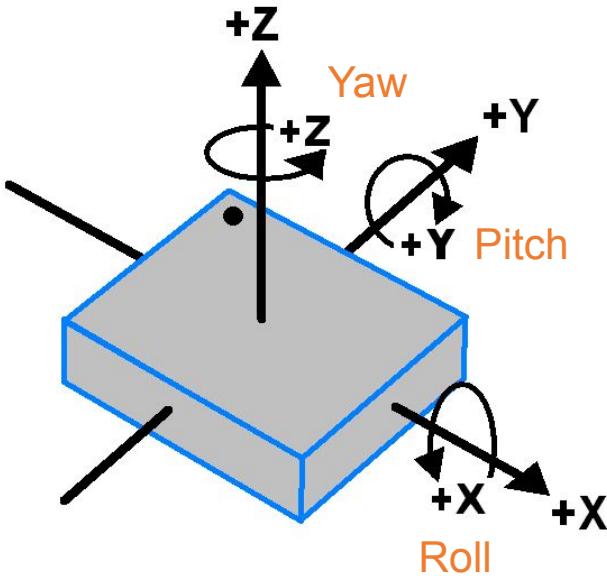

Example: 10 seconds of accelerometer data, captured with a sample rate: 62.5 Hz

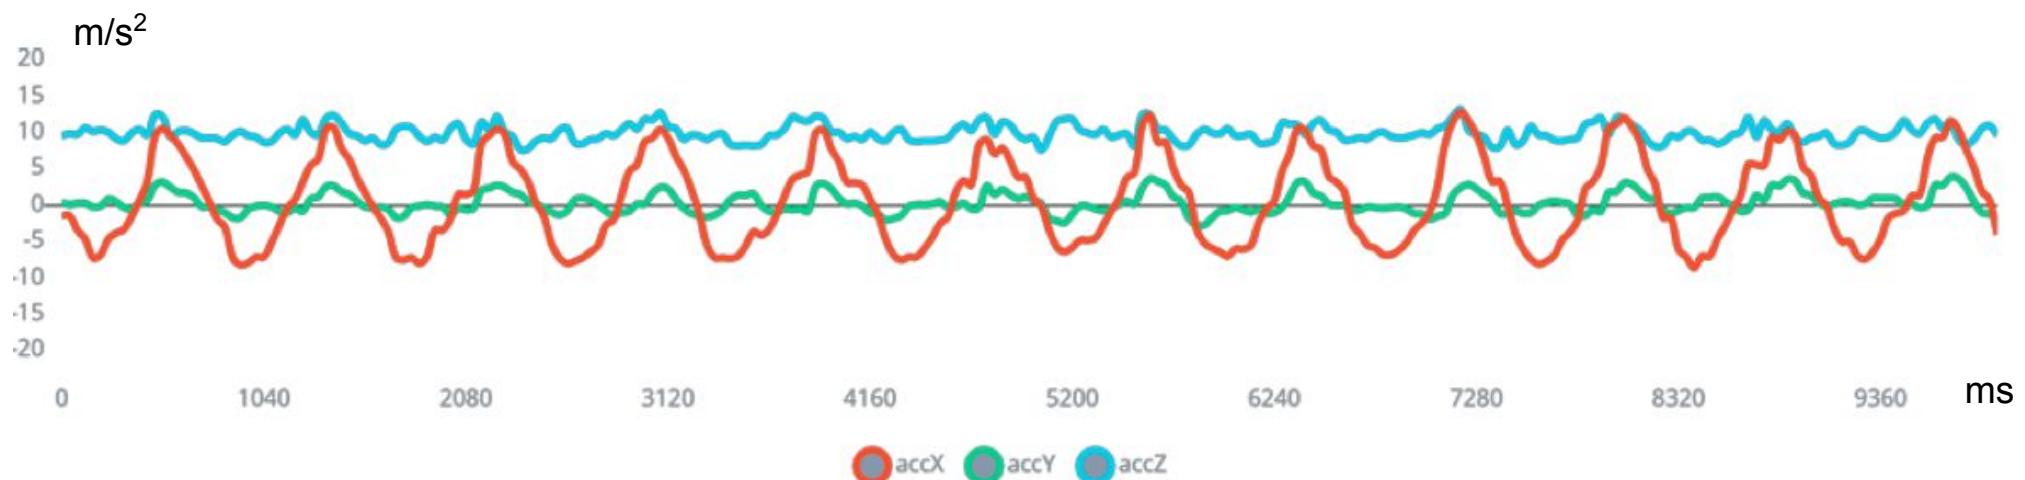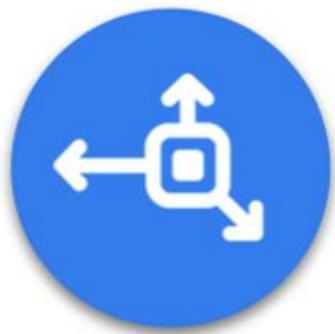

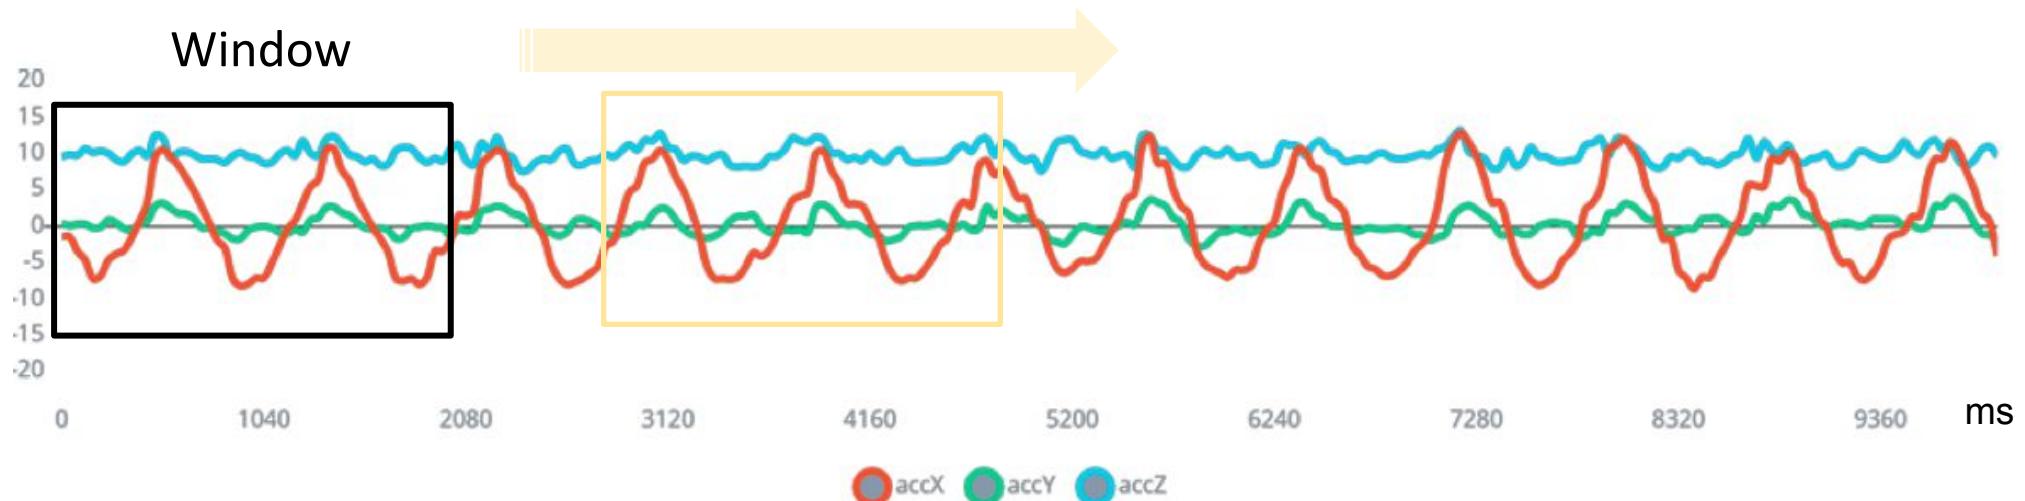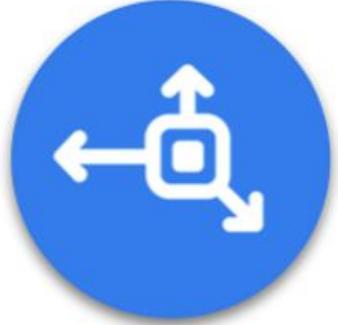

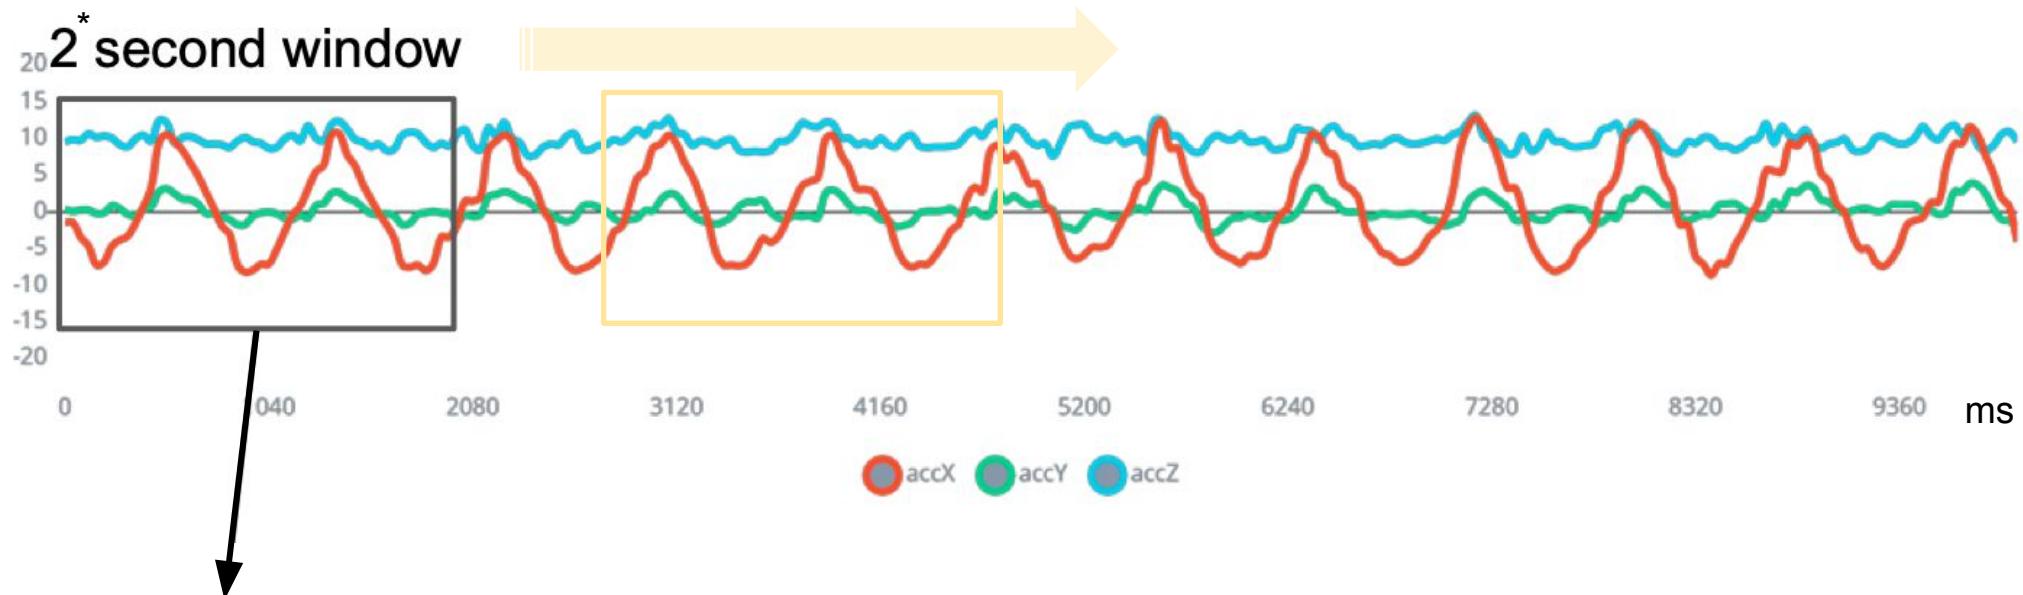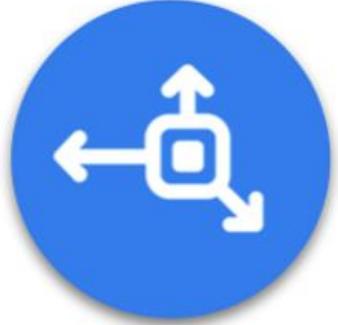


Raw Features as a window

- 125** samples for each axis (62.5Hz x 2s)
- 375 total features (125 x 3 axis)

* 2 seconds is needed to capture 1 or 2 cycles of movement

** 2 seconds at sample rate of 62.5 Hz -> 125 samples

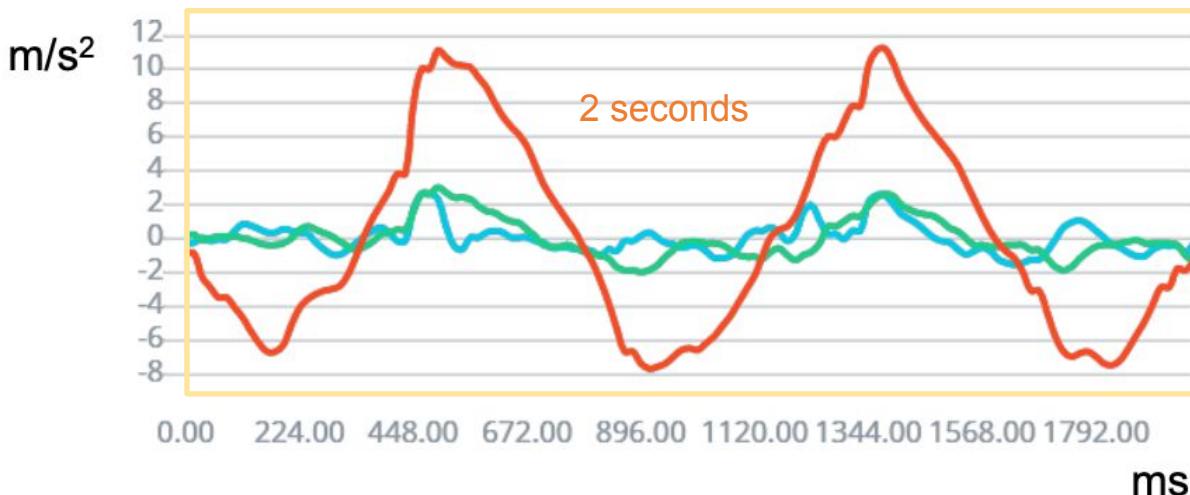


Manual Feature Extraction

- 3 RMS (Root Mean Square) values
- one for each axis (x, y, z)



$$x_{\text{RMS}} = \sqrt{\frac{1}{n} (x_1^2 + x_2^2 + \dots + x_n^2)}.$$

→ 125


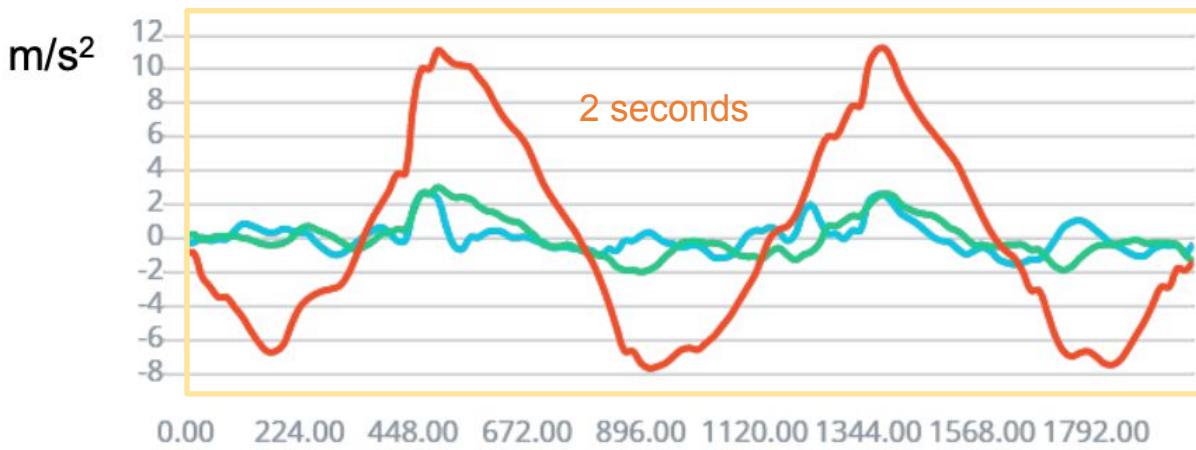


Manual Feature Extraction

3 RMS

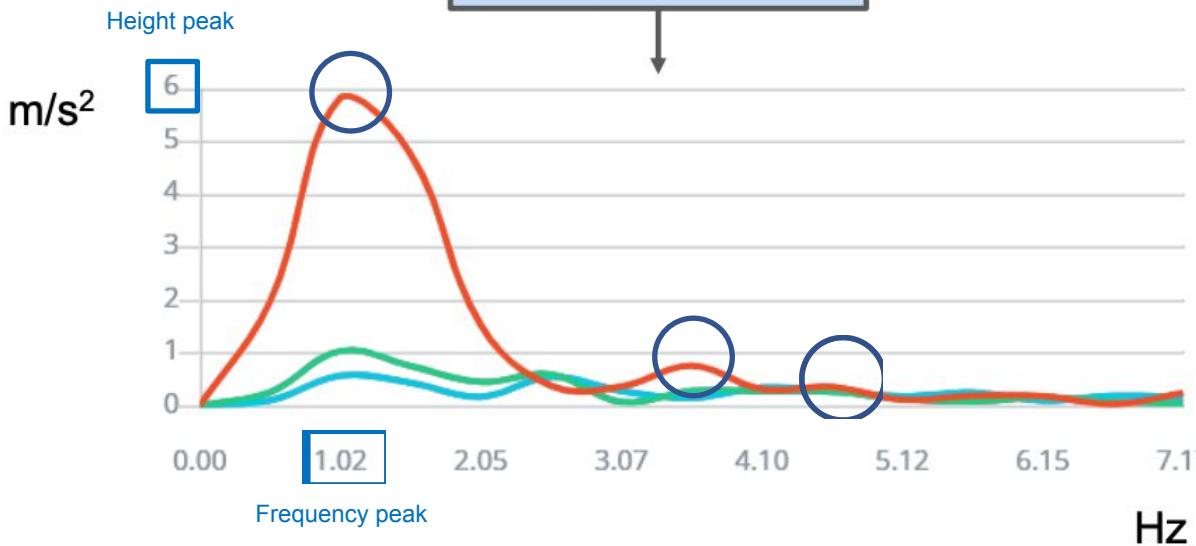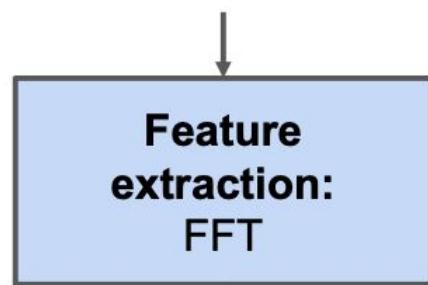

9 Height + 9 Freq. peak values

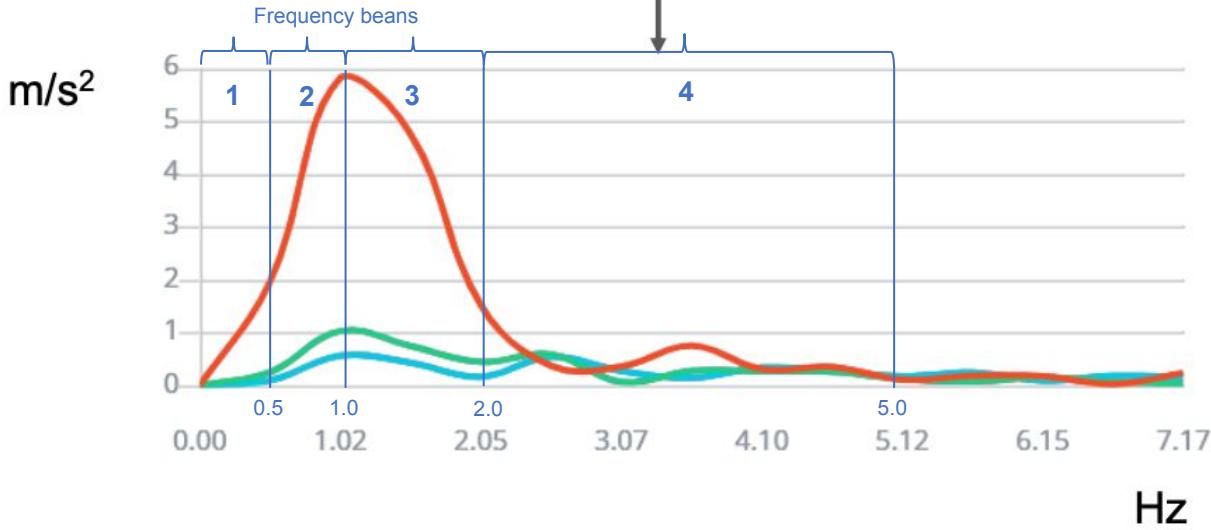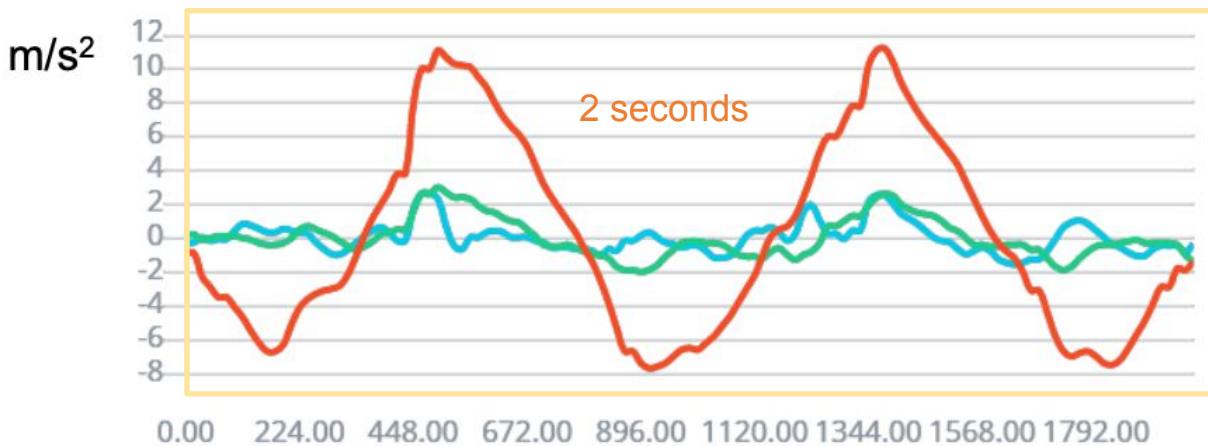


Manual Feature Extraction

→ **3 RMS + 9 HP + 9 FP + 12 PSD values**



Power Spectral Density (PSD)



4 Frequency bins per axis

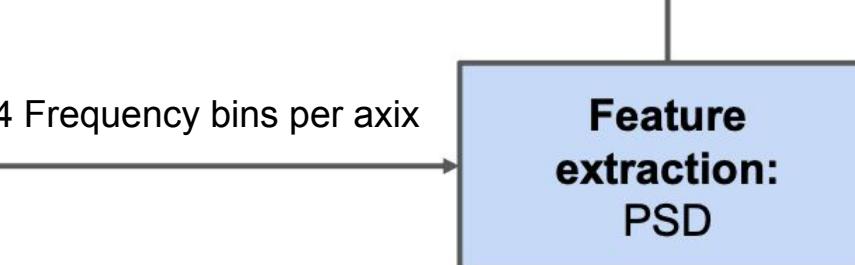

<https://blog.endaq.com/why-the-power-spectral-density-psd-is-the-gold-standard-of-vibration-analysis>

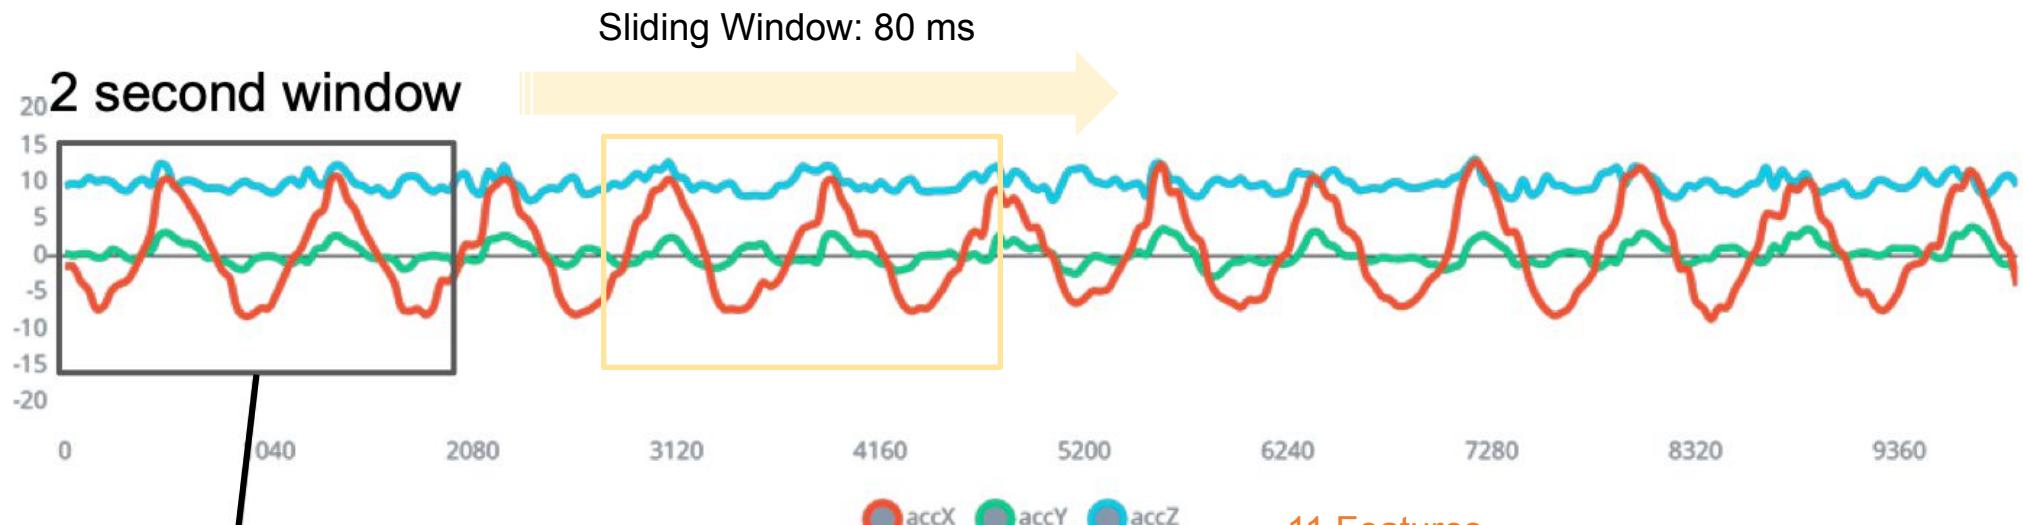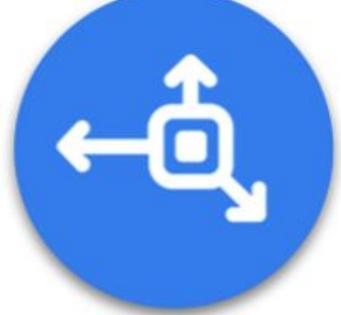

375 Raw Features

- Raw Data from sensor

Manual Feature Extraction


Spectral Analysis

11 Features


11 Features

11 Features

accX RMS	accY RMS
accX Peak	accY Peak
accX Spec	accY Spec
accZ RMS	accZ Peak 1 Freq
accZ Peak 1 Height	accZ Peak 2 Freq
accZ Peak 2 Height	accZ Peak 3 Freq
accZ Peak 3 Height	accZ Peak 3 Height
accZ Spectral Power 0.1 - 0.5	accZ Spectral Power 0.5 - 1.0
accZ Spectral Power 0.5 - 1.0	accZ Spectral Power 1.0 - 2.0
accZ Spectral Power 1.0 - 2.0	accZ Spectral Power 2.0 - 5.0
accZ Spectral Power 2.0 - 5.0	

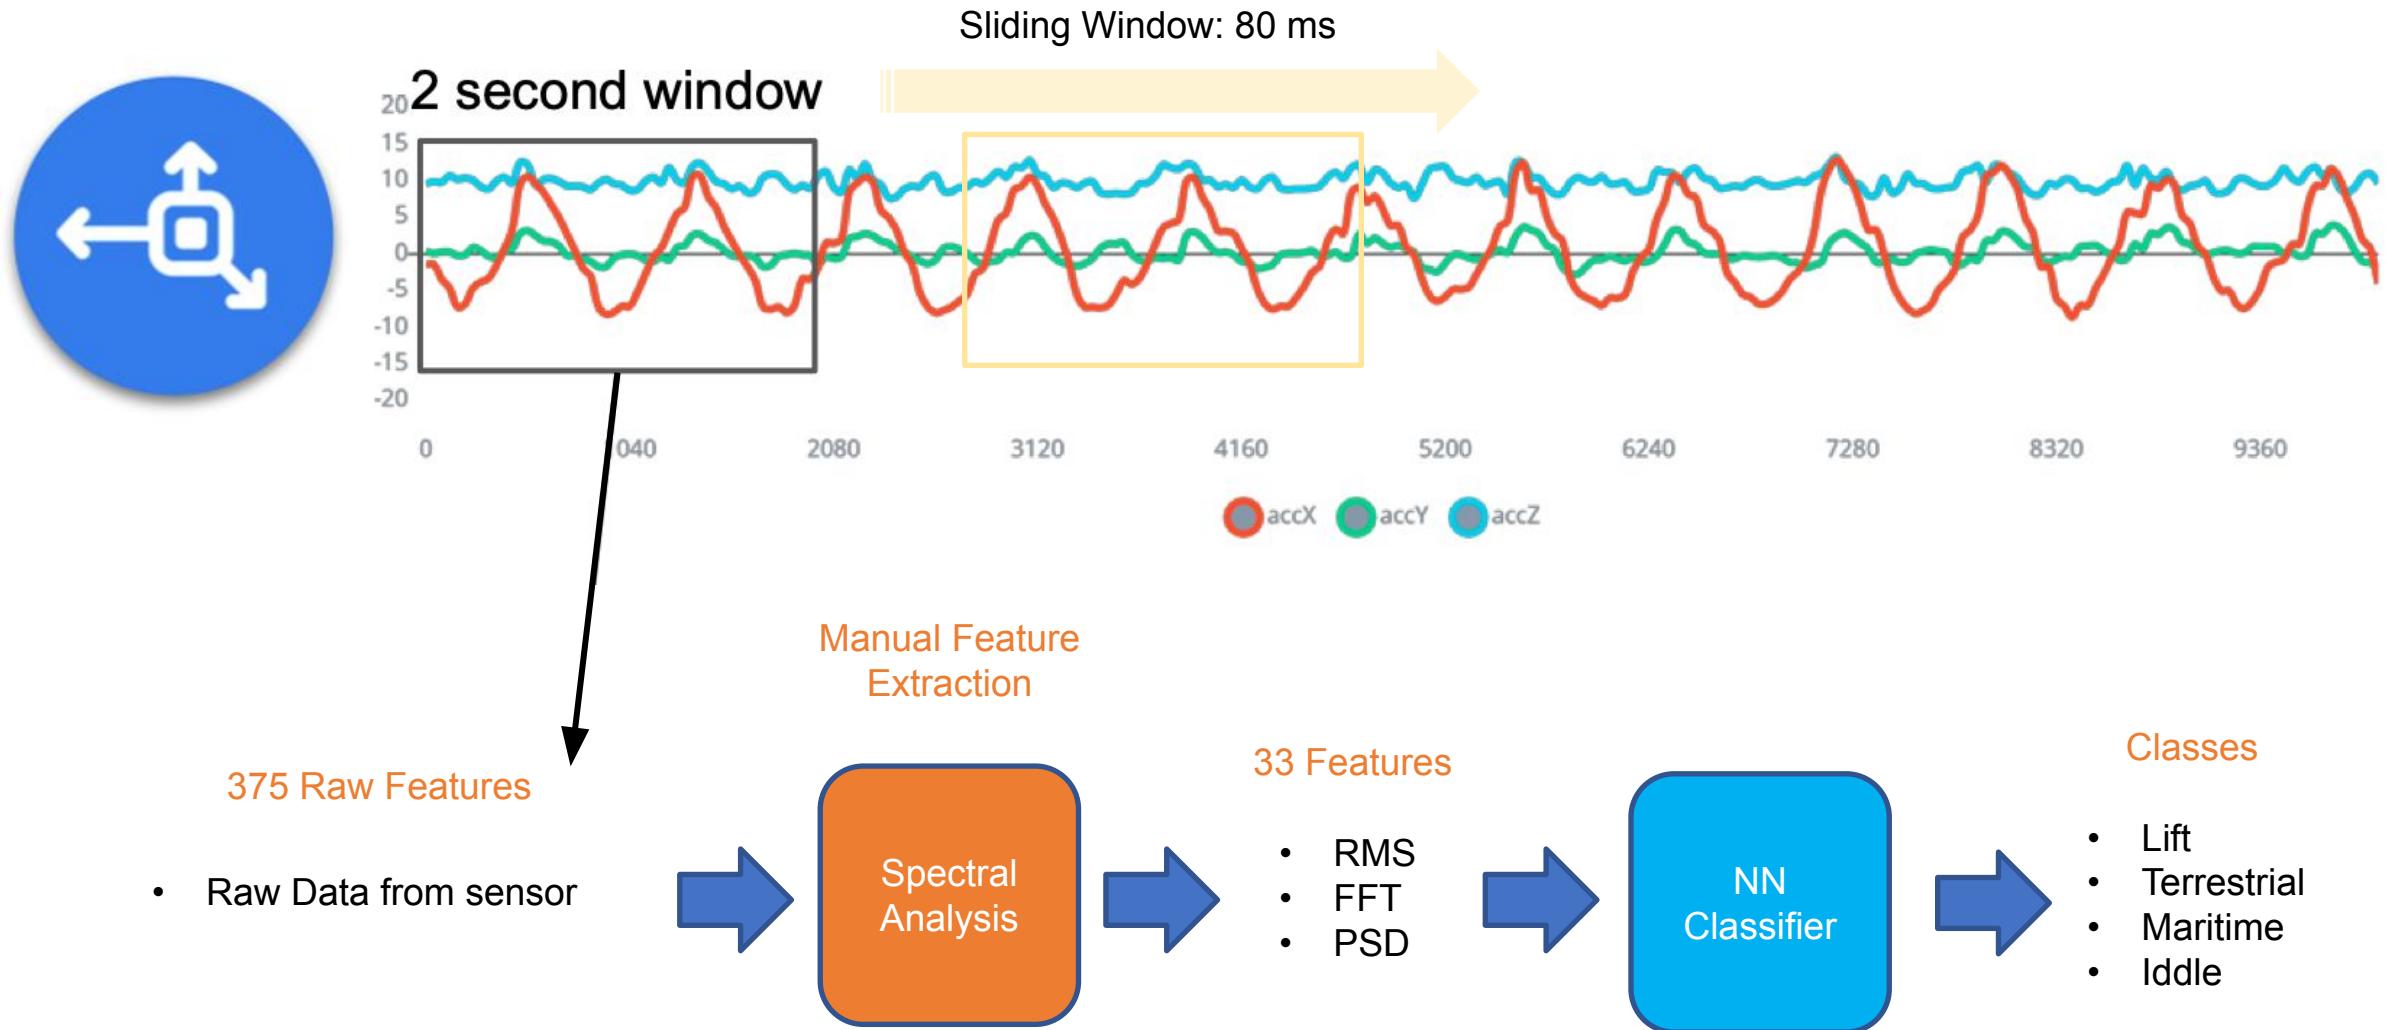


Model Design (NN Classifier)

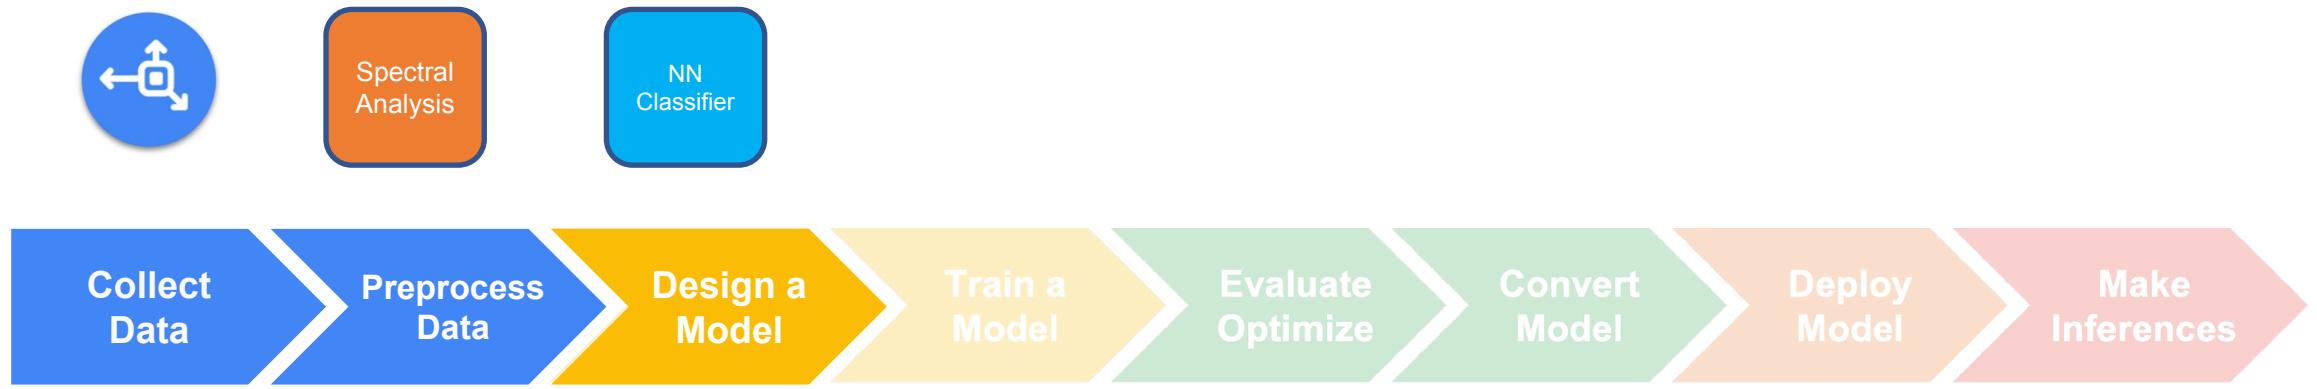


Model Design (NN Classifier)





Model Design (DNN Classifier)

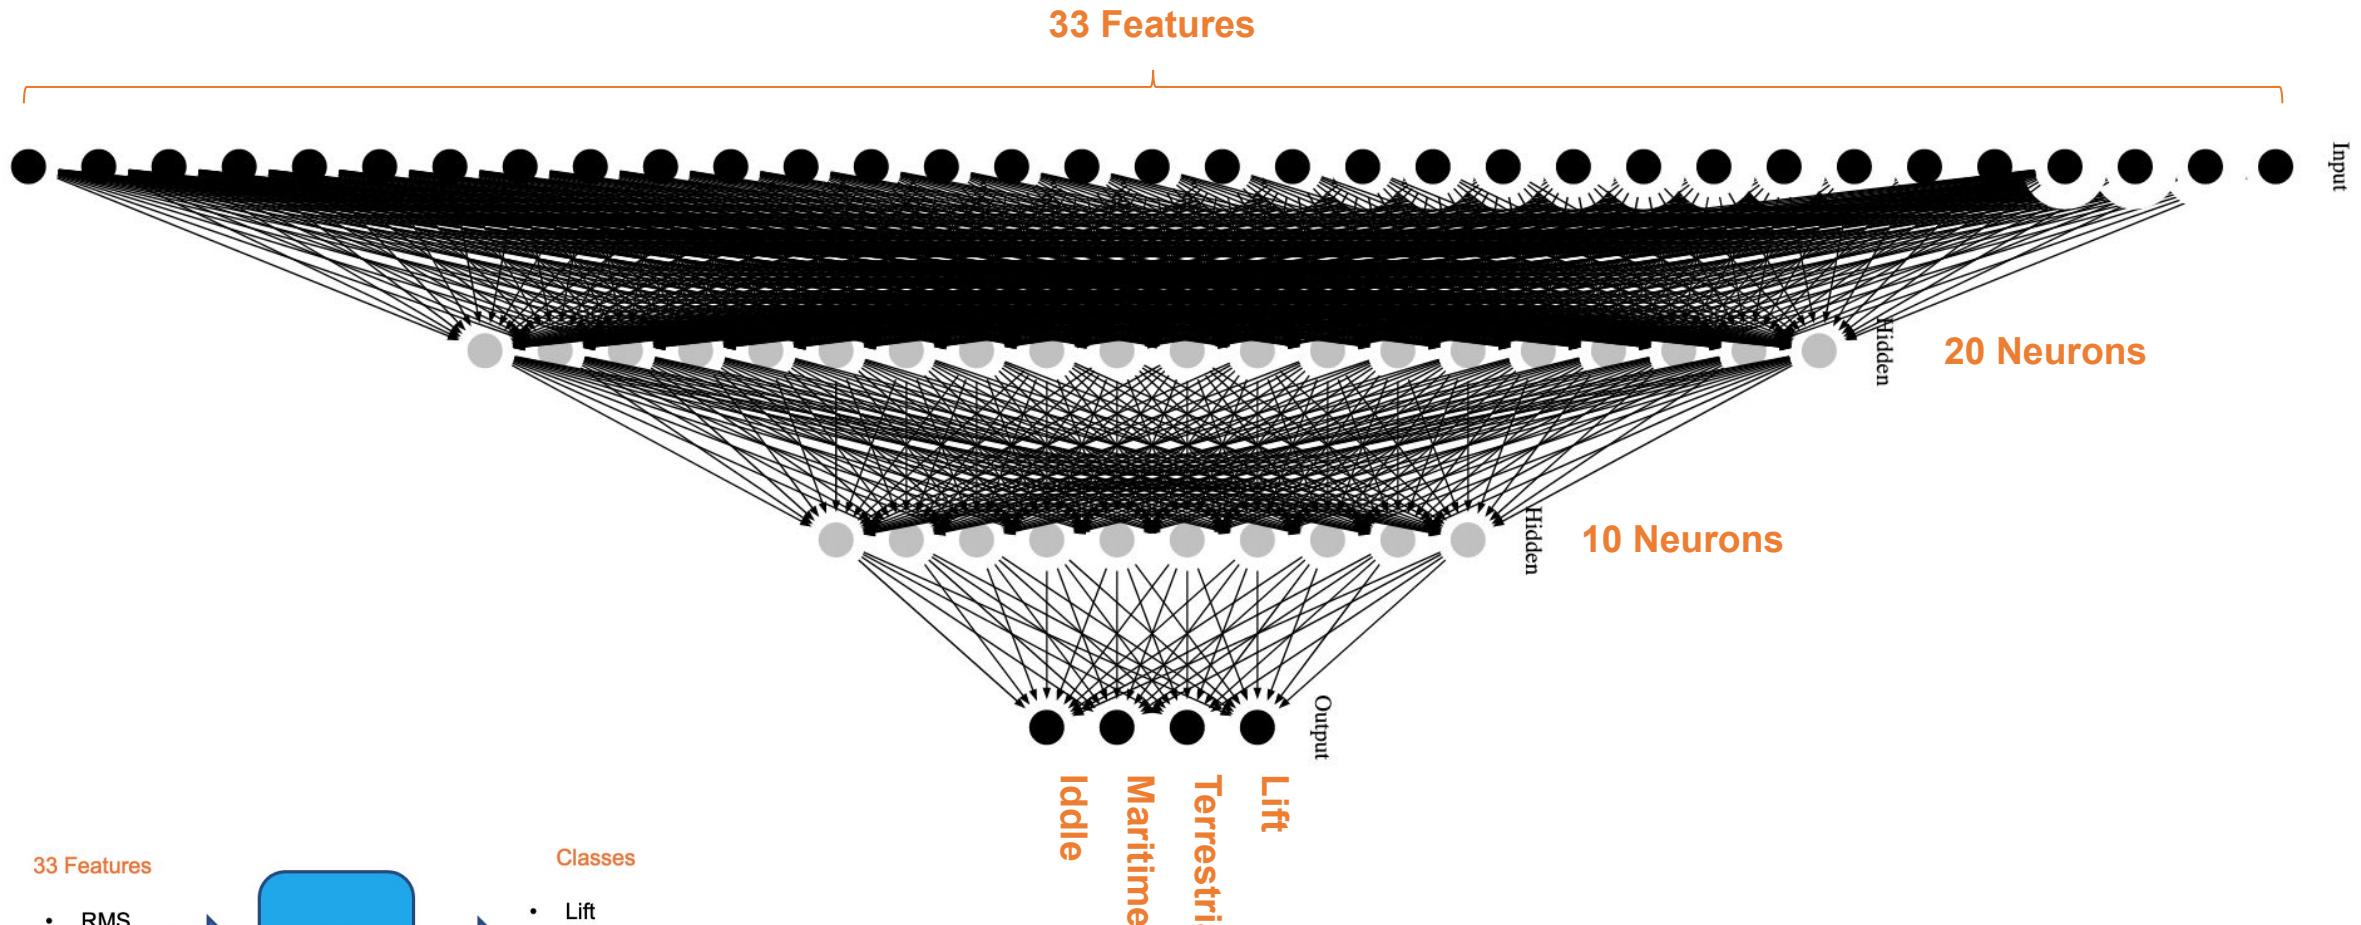


Model Design (DNN Classifier)

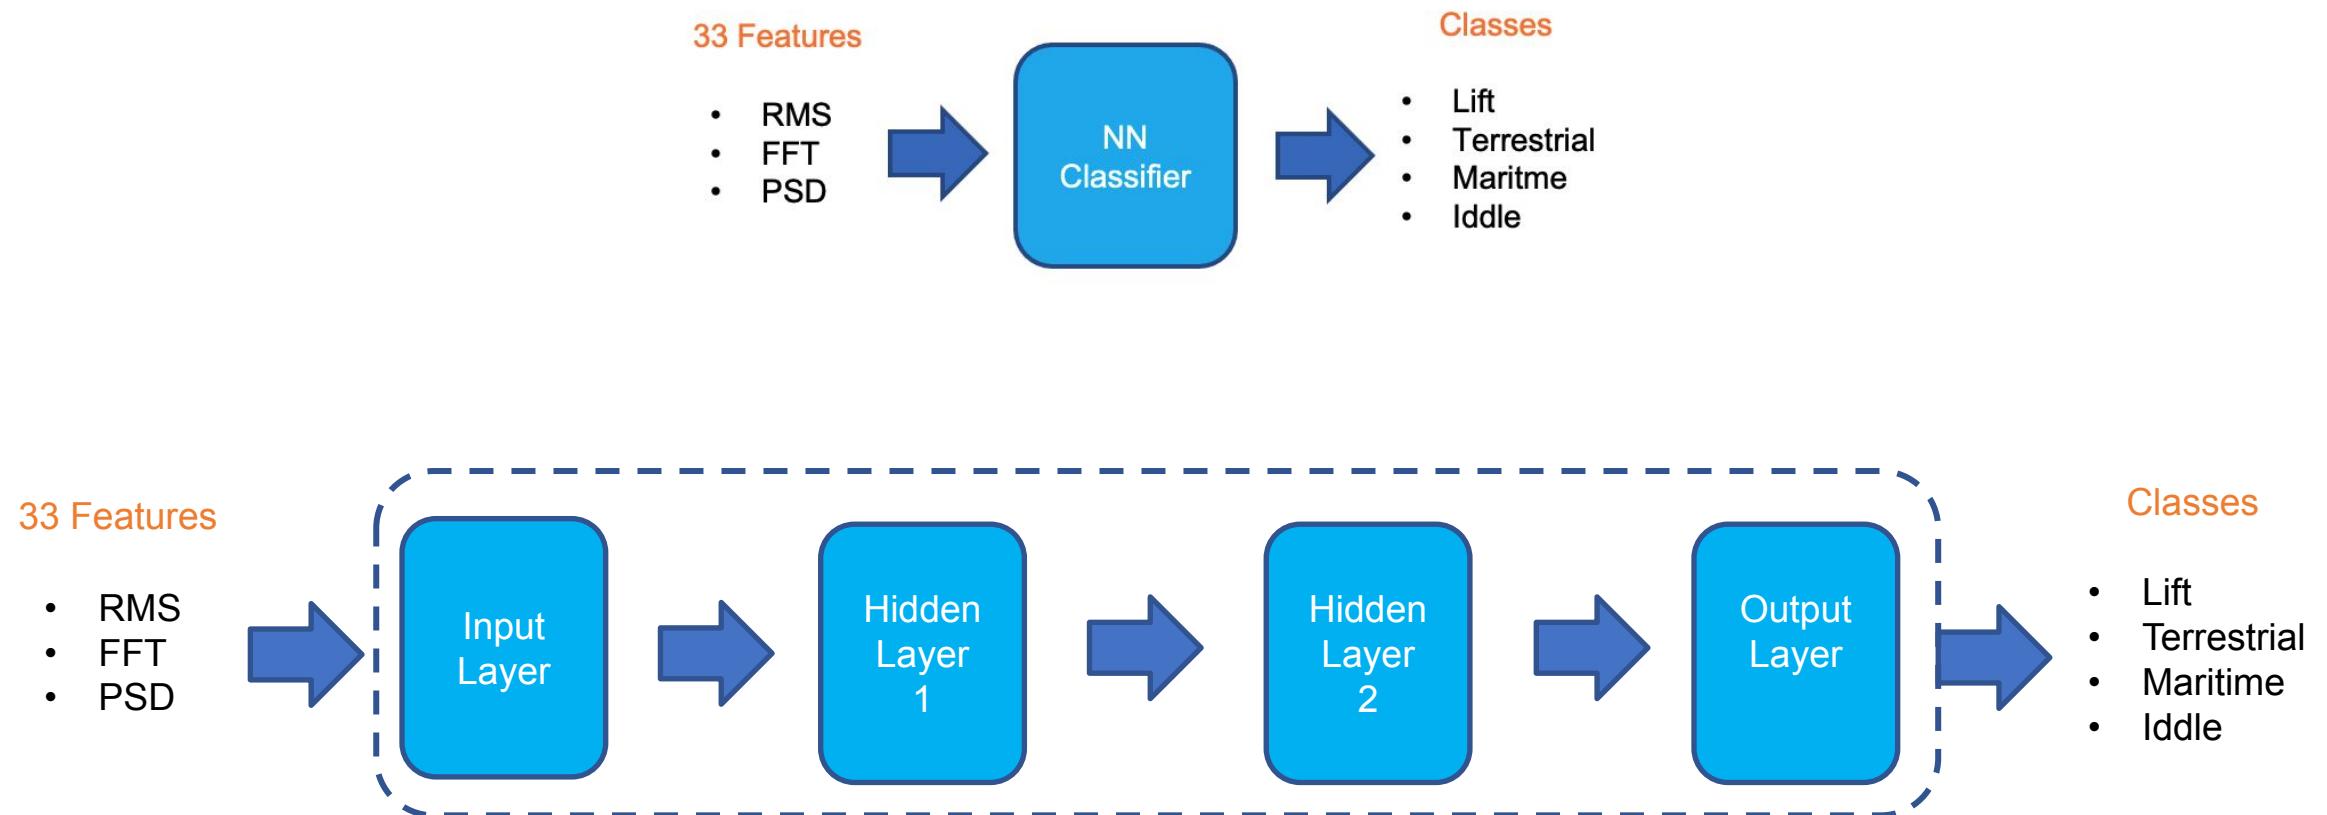

Model Design (DNN Classifier)

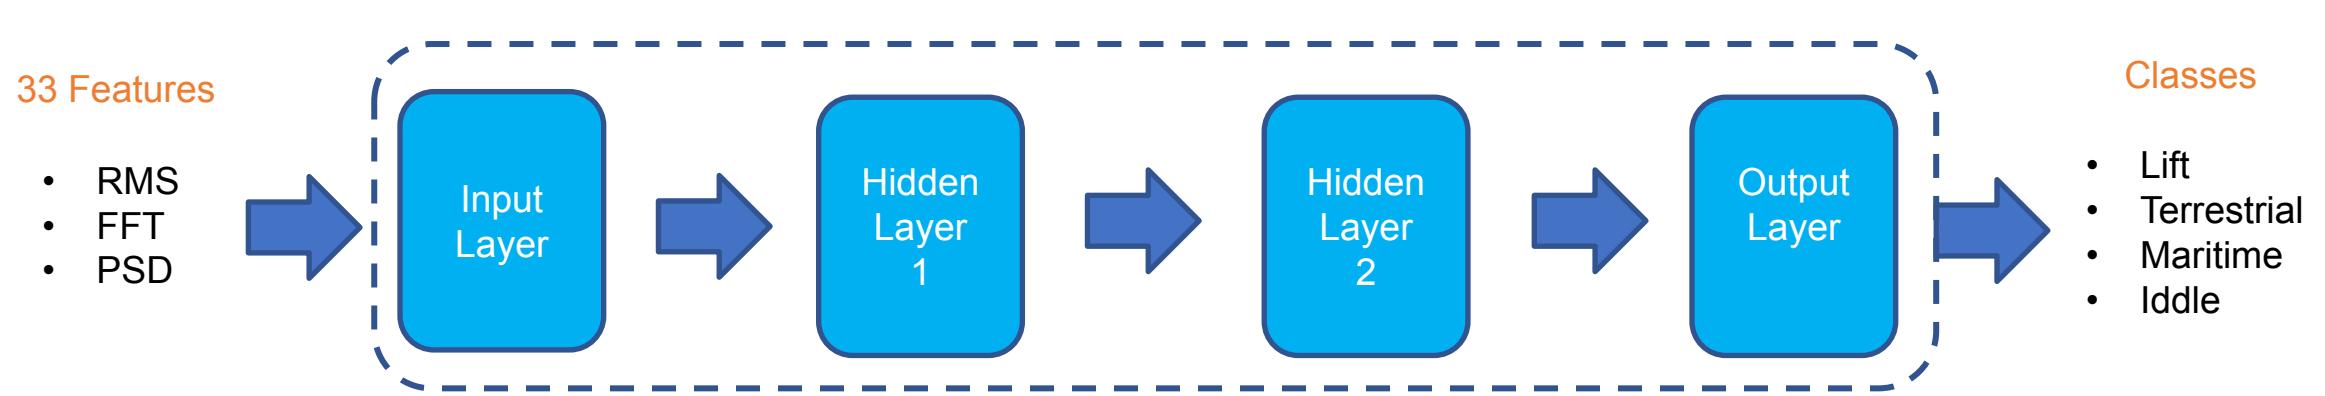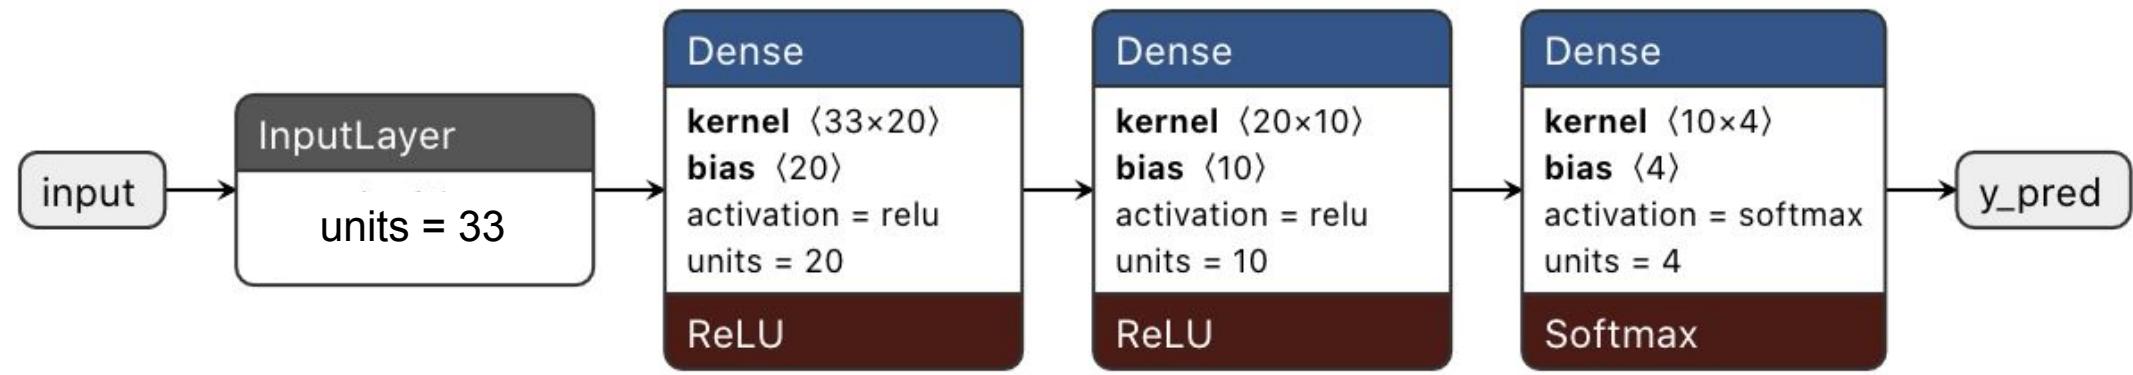

Train, Evaluate, Convert, Deploy the Model

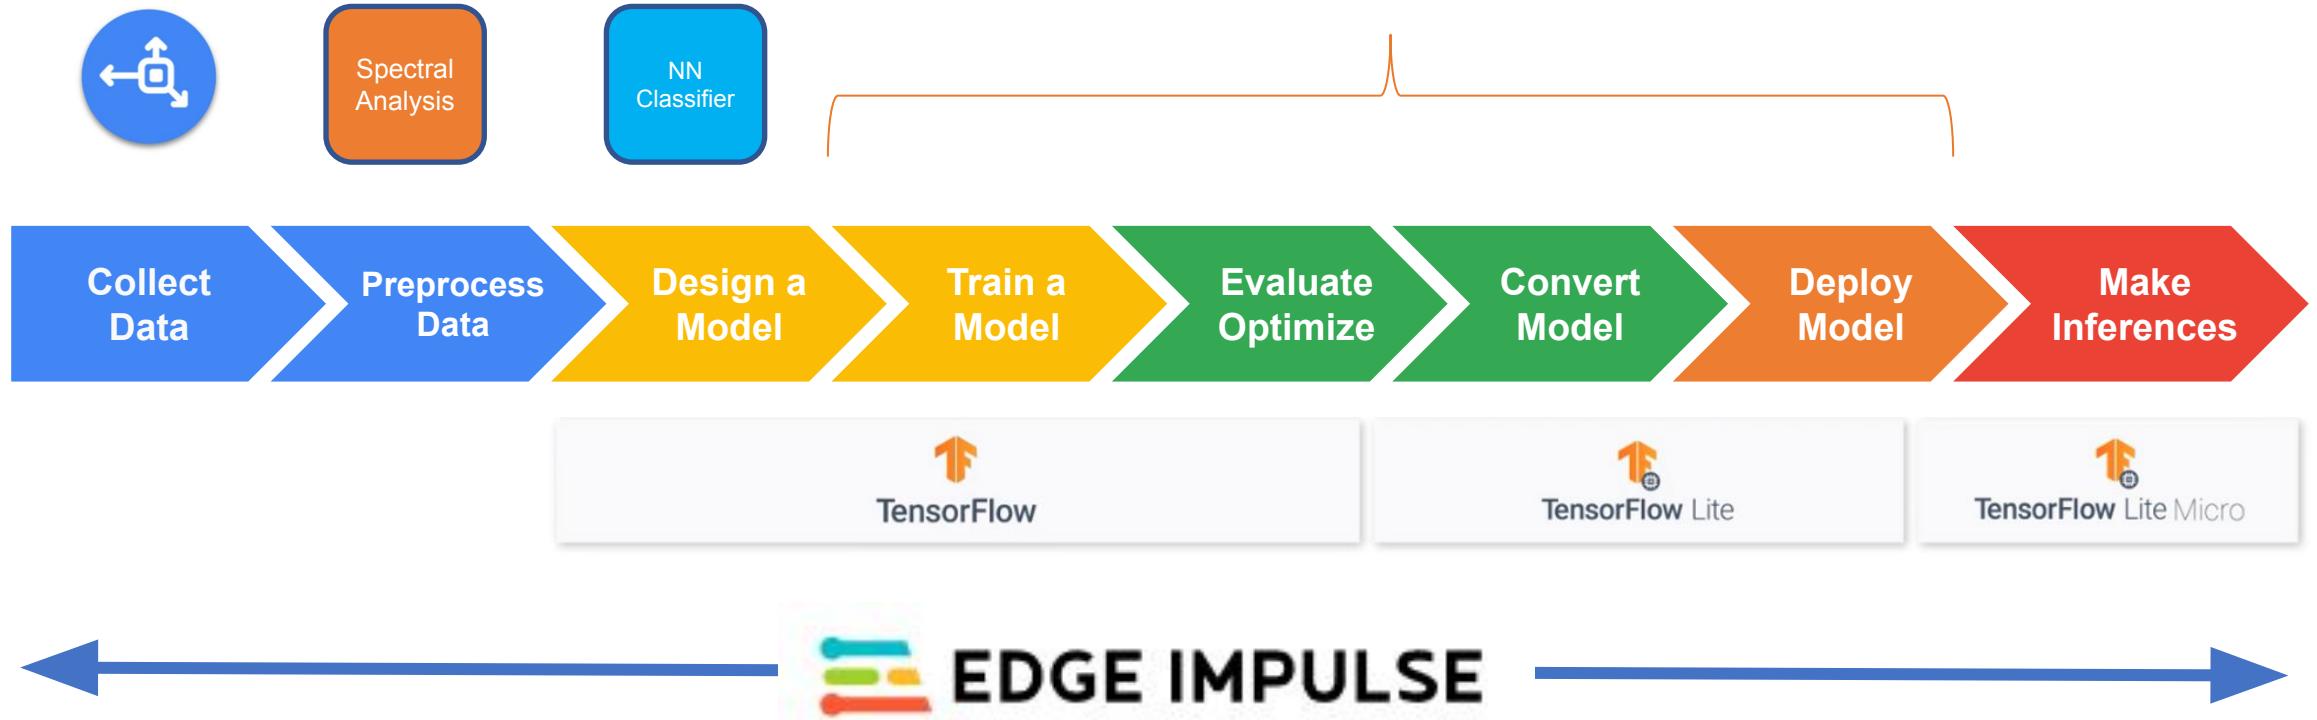

Motion Classification

Hands-On


<https://studio.edgeimpulse.com/public/139905/latest>



Motion Classification

Transportation Classes


- **lift** (up-down)
- **terrestrial** (left-right)
- **maritime** (zig-zag, etc.)
- **idle**

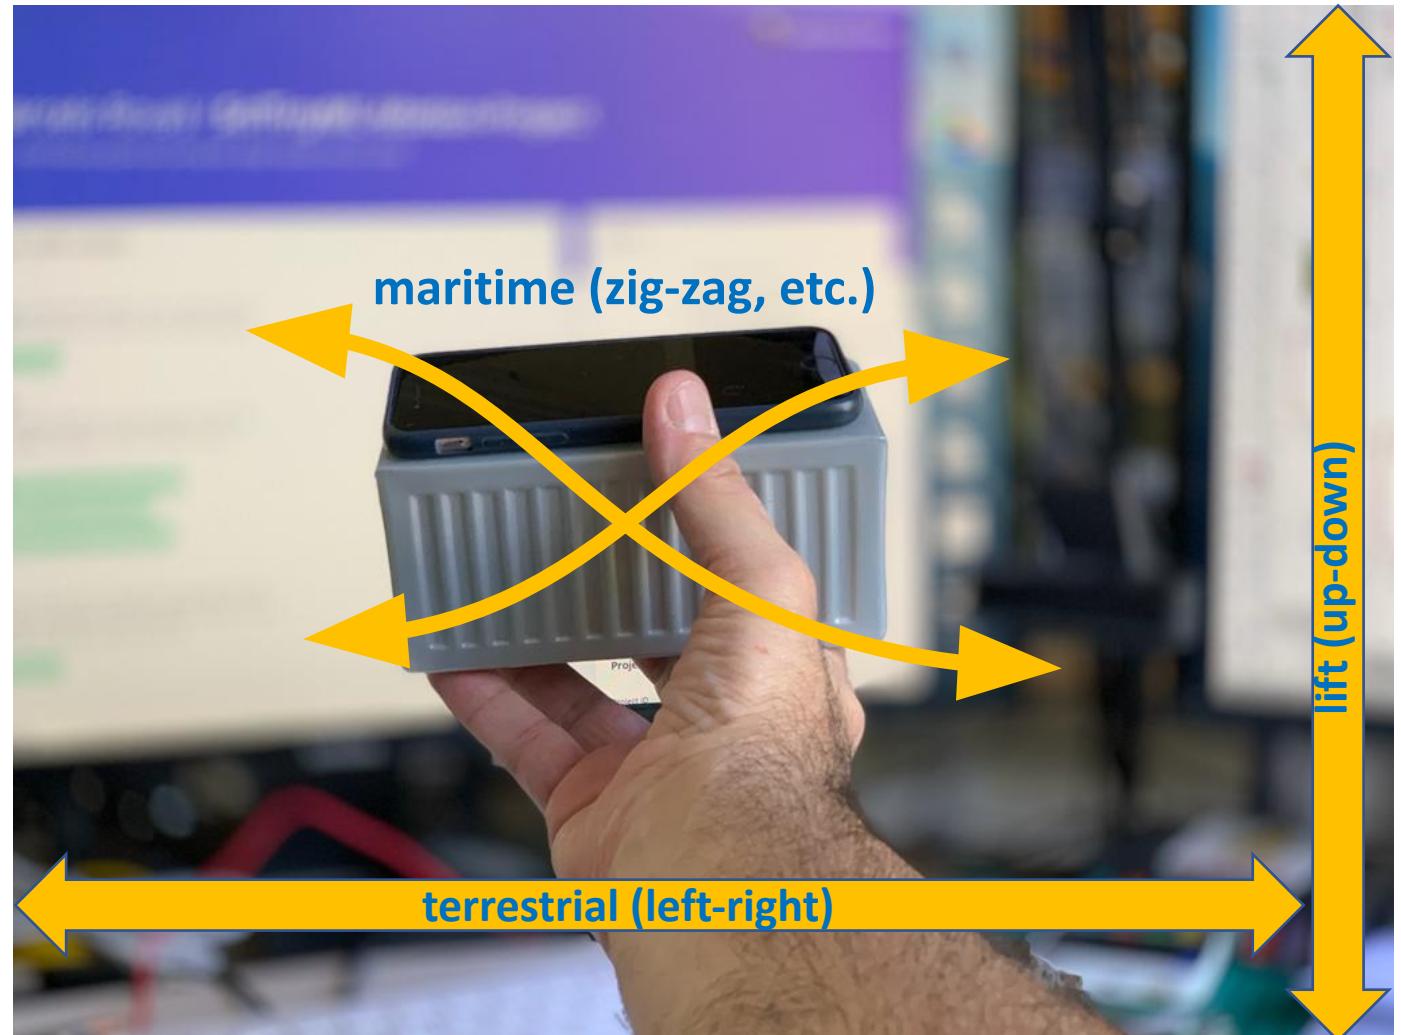


Motion Classification


Transportation Classes

- **lift** (up-down)
- **terrestrial** (left-right)
- **maritime** (zig-zag, etc.)
- **idle**

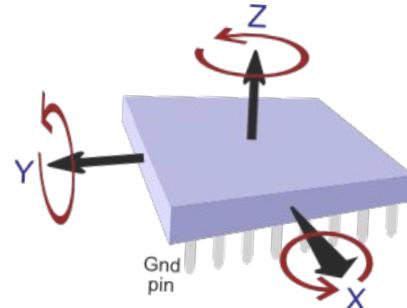

Data: collect & test using
accelerometer as sensor

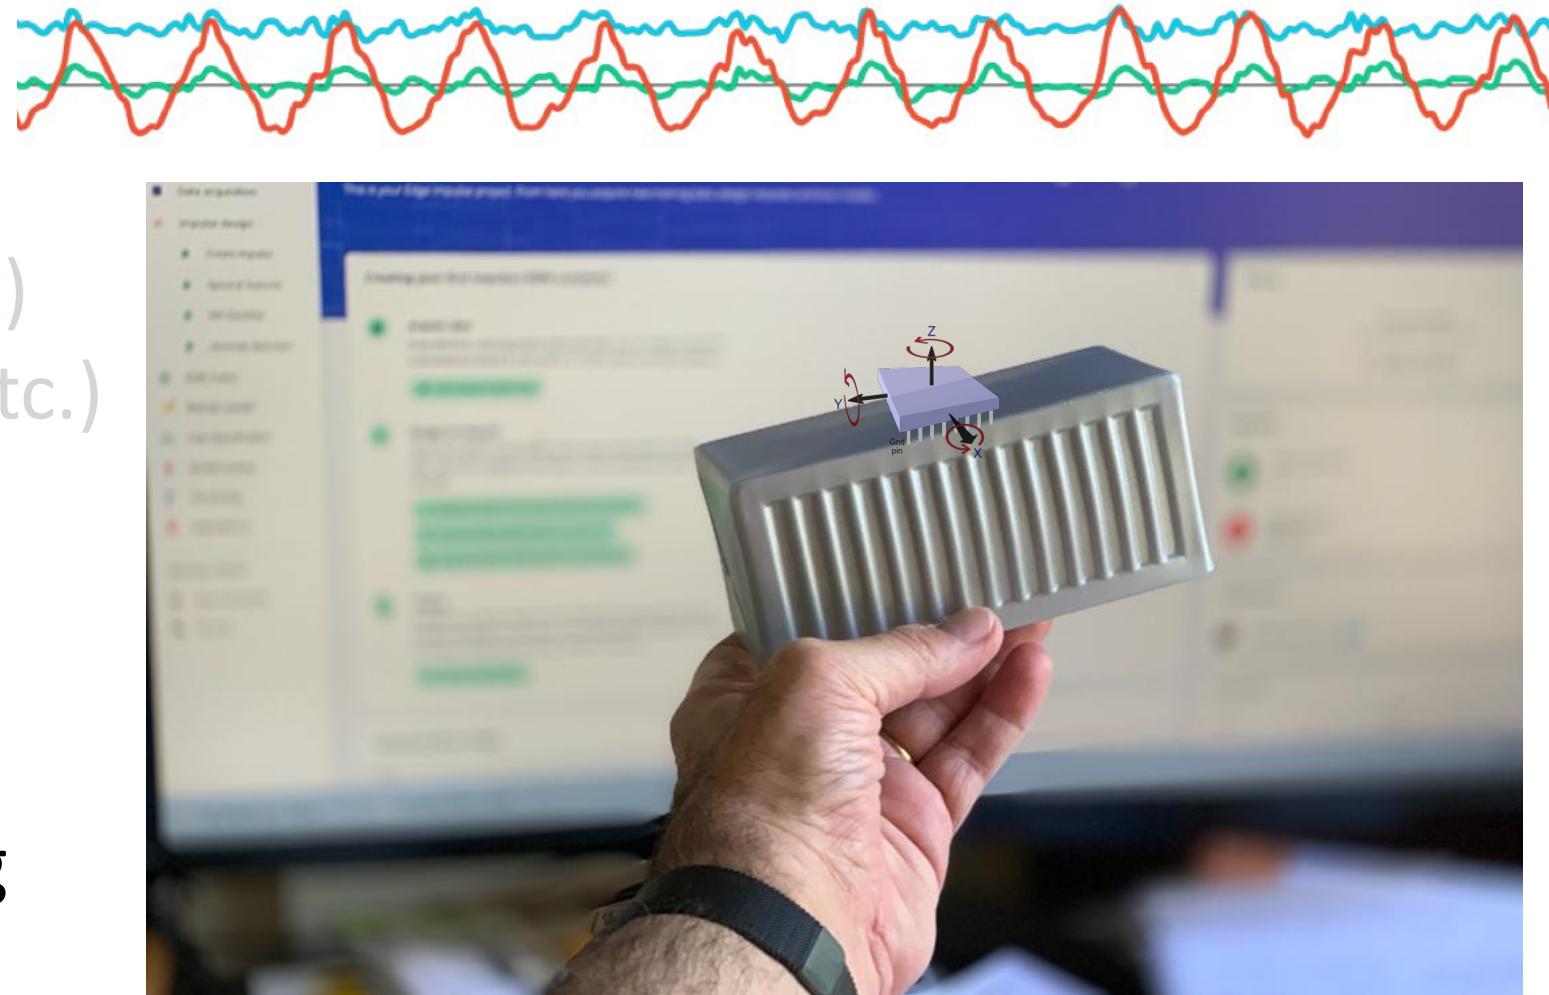

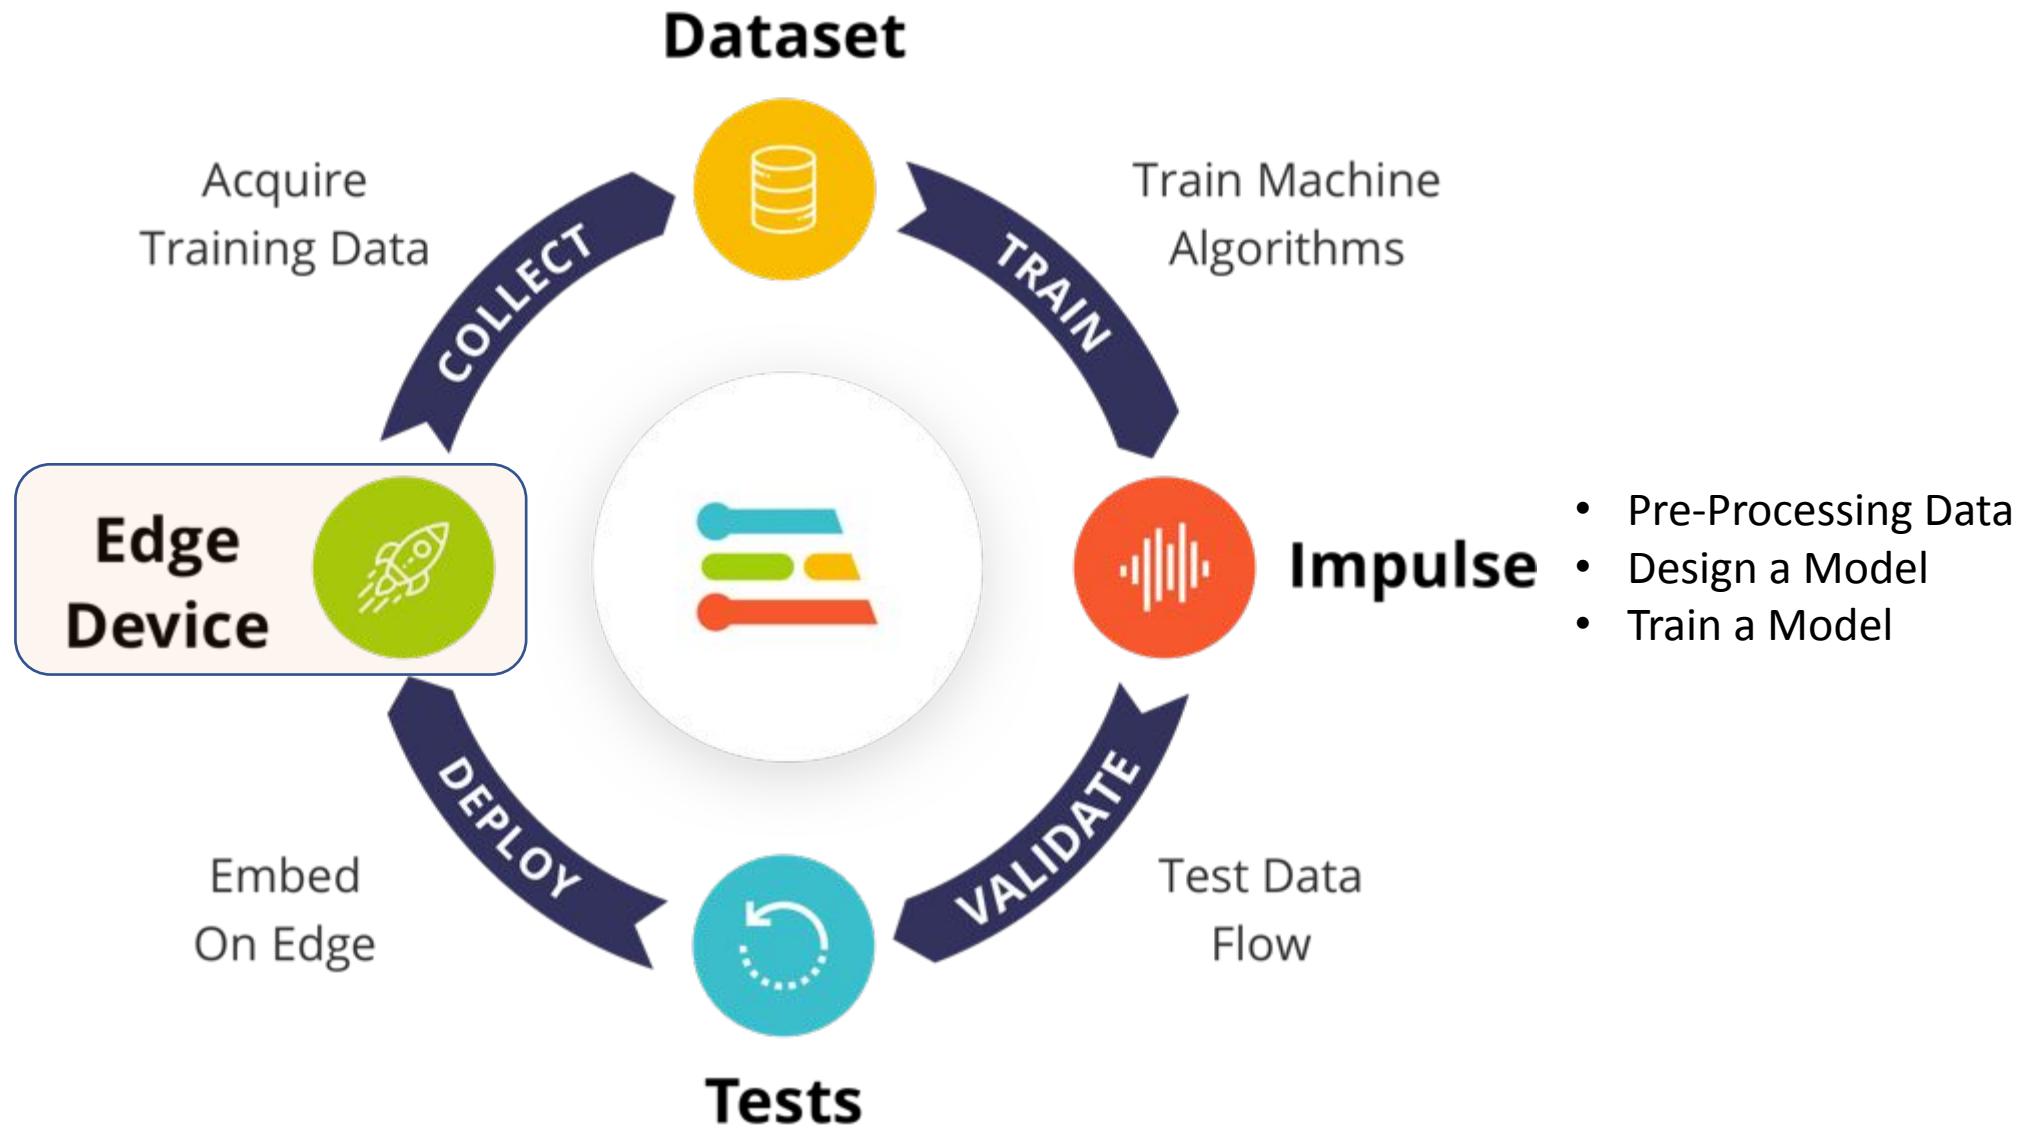

Devices - TinyML4D - Project

studio.edgeimpulse.com/studio/49268/devices

EDGE IMPULSE

Dashboard

Devices

Data acquisition

Impulse design

Create impulse

Retrain model

Live classification

Model testing

Versioning

Deployment

GETTING STARTED

Documentation

Forums

DEVICES (TINYML4D - PROJECT SETUP)

Your devices

Collect data

These are the ways you can collect data:

You can collect data from development boards, from your own devices, or by uploading an existing dataset.

Connect a fully supported development board

Get started with real hardware from a wide range of silicon vendors - fully supported by Edge Impulse.

Use your mobile phone

Use your mobile phone to capture movement, audio or images, and even run your trained model locally. No app required.

Show QR code

Use your computer

Capture audio or images from your webcam or microphone, or from an external audio device.

Collect data

Data from any device with the data forwarder

Capture data from any device or development board over a serial connection, in 10 lines of code.

Show docs

Upload data

Already have data? You can upload your existing datasets directly in WAV, JPG, PNG, CBOR, CSV or JSON format.

Go to the uploader

Integrate with your cloud

The enterprise version of Edge Impulse integrates directly with the data stored in your cloud platform.

Contact us

+ Connect a new device

Marcelo Rovai

© 2021 Edge Impulse Inc. All rights reserved.

Devices - TinyML4D - Project

studio.edgeimpulse.com/studio/49268/devices

EDGE IMPULSE

DEVICES (TINYML4D - PROJECT SETUP)

Your devices

+ Connect a new device

These are devices that are connected to the Edge Impulse remote management API, or have posted data to the ingestion SDK.

Collect data

You can collect data from any smartphone. From your smartphone go to [this URL](#), or scan the QR code below.



© 2021 Ed

Devices

Dashboard

Data acquisition

Impulse design

Create impulse

Retrain model

Live classification

Model testing

Versioning

Deployment

GETTING STARTED



Documentation

Forums

Marcelo Rovai

WEBSITE QR CODE
Open "edgeimpulse.com" in Safari



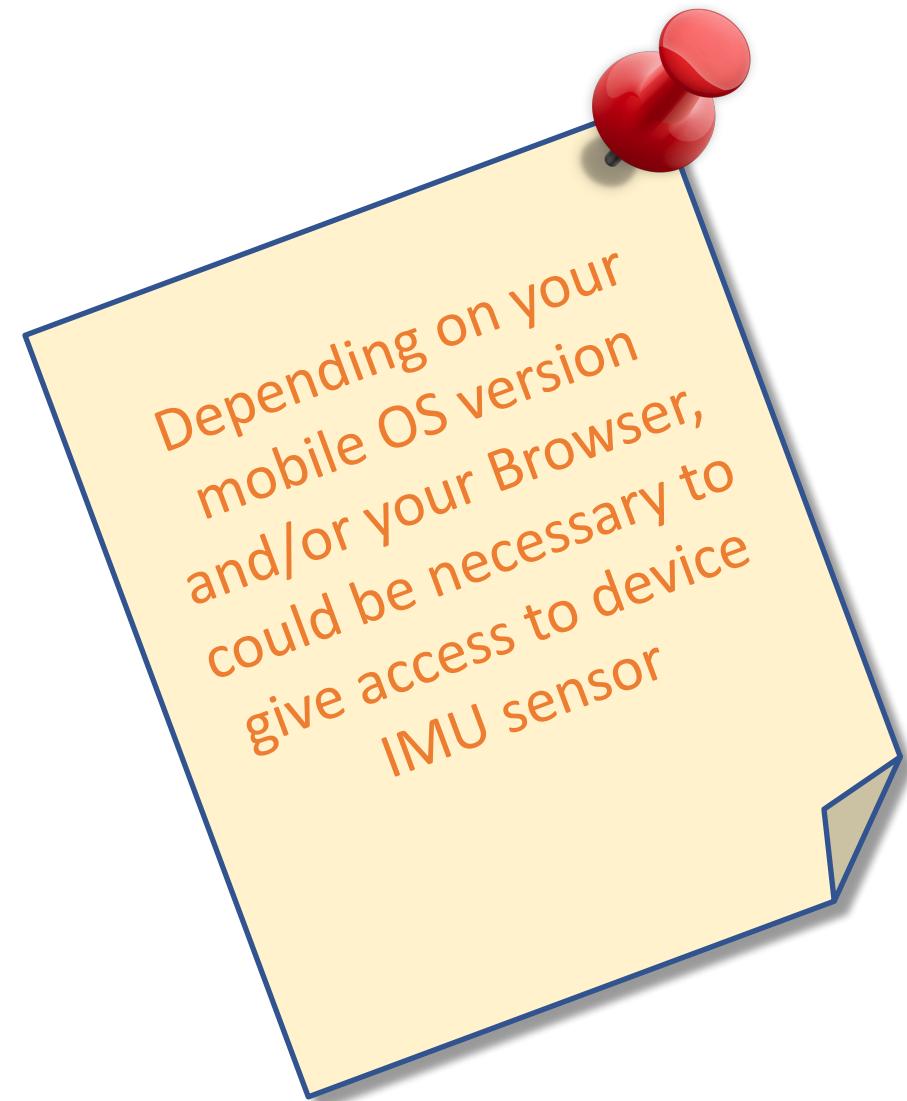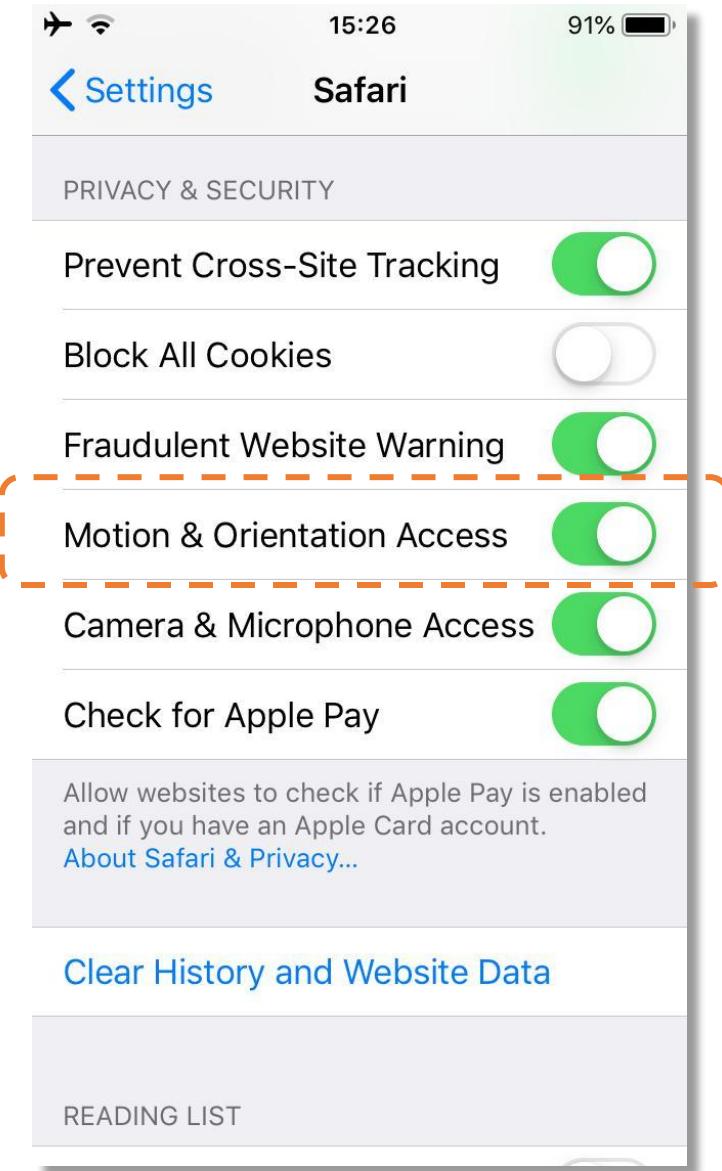

Devices - TinyML4D - Project

studio.edgeimpulse.com/studio/49268/devices

EDGE IMPULSE

Dashboard

Devices

Data acquisition

Impulse design

- Create impulse
- Retrain model
- Live classification
- Model testing
- Versioning
- Deployment

GETTING STARTED

Documentation

Forums

DEVICES (TINYML4D - PROJECT SETUP)

Marcelo Rovai

Your devices

+ Connect a new device

These are devices that are connected to the Edge Impulse remote management API, or have posted data to the ingestion SDK.

NAME	ID	TYPE	SENSORS	REMO...	LAST SEEN
phone_kq6ray4k	phone_kq6ray4k	MOBILE CLIENT	Accelerometer, Microphone	ONLINE	Today, 12:06:04

Collect data

Device phone_kq6ray4k is now connected


Get started!

smartphone.edgeimpulse.com 12:07 22% Camera WiFi

Data collection

Connected as phone_kq6ray4k

You can collect data from this

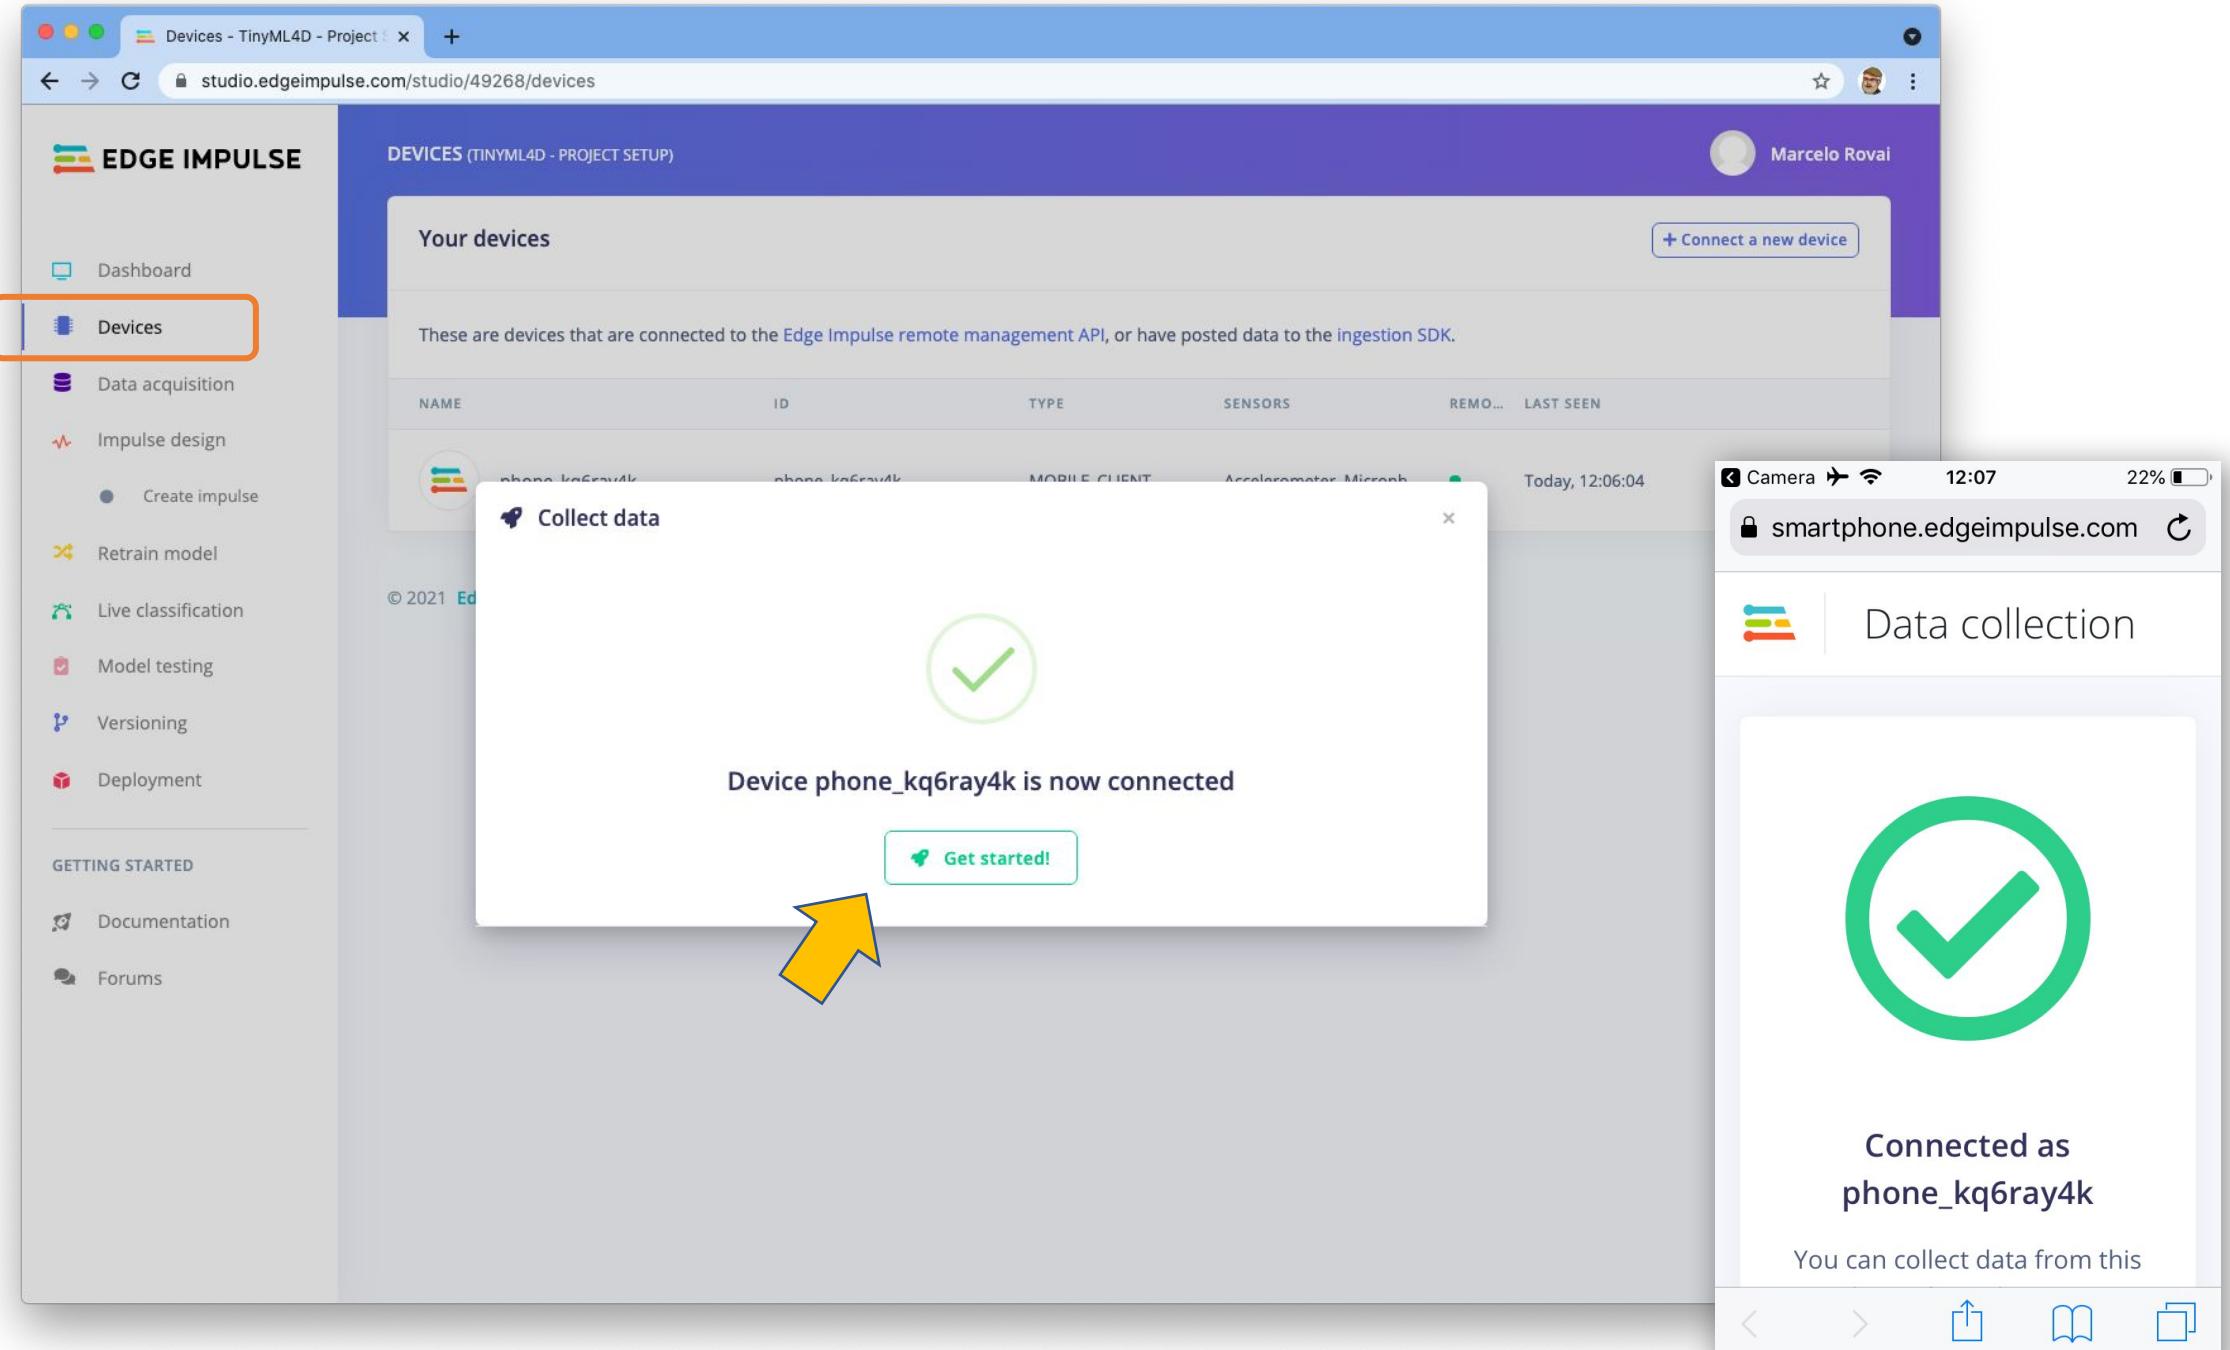

Devices - TinyML4D - Project

studio.edgeimpulse.com/studio/49268/devices

EDGE IMPULSE

Dashboard

Devices

Data acquisition

Impulse design

- Create impulse
- Retrain model
- Live classification
- Model testing
- Versioning
- Deployment

GETTING STARTED

Documentation

Forums

DEVICES (TINYML4D - PROJECT SETUP)

Marcelo Rovai

Your devices

+ Connect a new device

These are devices that are connected to the Edge Impulse remote management API, or have posted data to the ingestion SDK.

NAME	ID	TYPE	SENSORS	REMO...	LAST SEEN
phone_kq6ray4k	phone_kq6ray4k	MOBILE_CLIENT	Accelerometer, Microph...	●	Today, 12:06:04

© 2021 EdgeImpulse Inc. All rights reserved

smartphone.edgeimpulse.com 12:07 22% Camera WiFi

Data collection

Connected as phone_kq6ray4k

You can collect data from this

A yellow arrow points from the 'phone_kq6ray4k' device row in the Edge Impulse studio to the smartphone screen on the right, indicating a connection between the two.


The screenshot shows the Edge Impulse Data Acquisition interface for a project titled "TinyML4D". The left sidebar includes options like Dashboard, Devices, Data acquisition (which is selected and highlighted with an orange box), Impulse design, Create impulse, Retrain model, Live classification, Model testing, Versioning, Deployment, Documentation, and Forums.

The main area is titled "DATA ACQUISITION (TINYML4D - PROJECT SETUP)". It has tabs for "Training data" and "Test data". A message box says, "Did you know? You can capture data from any device or development board, or upload your existing datasets - Show options".

The "Data Collected" section shows 0 samples and 0 labels. The "Collected data" section displays "No data collected yet" and a button labeled "Let's collect some data".

The "Record new data" section has fields for "Device" (with a note "No devices connected" highlighted with an orange box), "Label" (set to "up_down"), and "Sensor". A "RAW DATA" section at the bottom says "Click on a sample to load...".

A large yellow arrow points to the top right corner of the screen, where a smartphone interface is shown. The smartphone screen displays the URL "smartphone.edgeimpulse.com" and a "Data collection" section with a large red "X" icon and the text "Not connected". A refresh button is also visible on the smartphone screen.

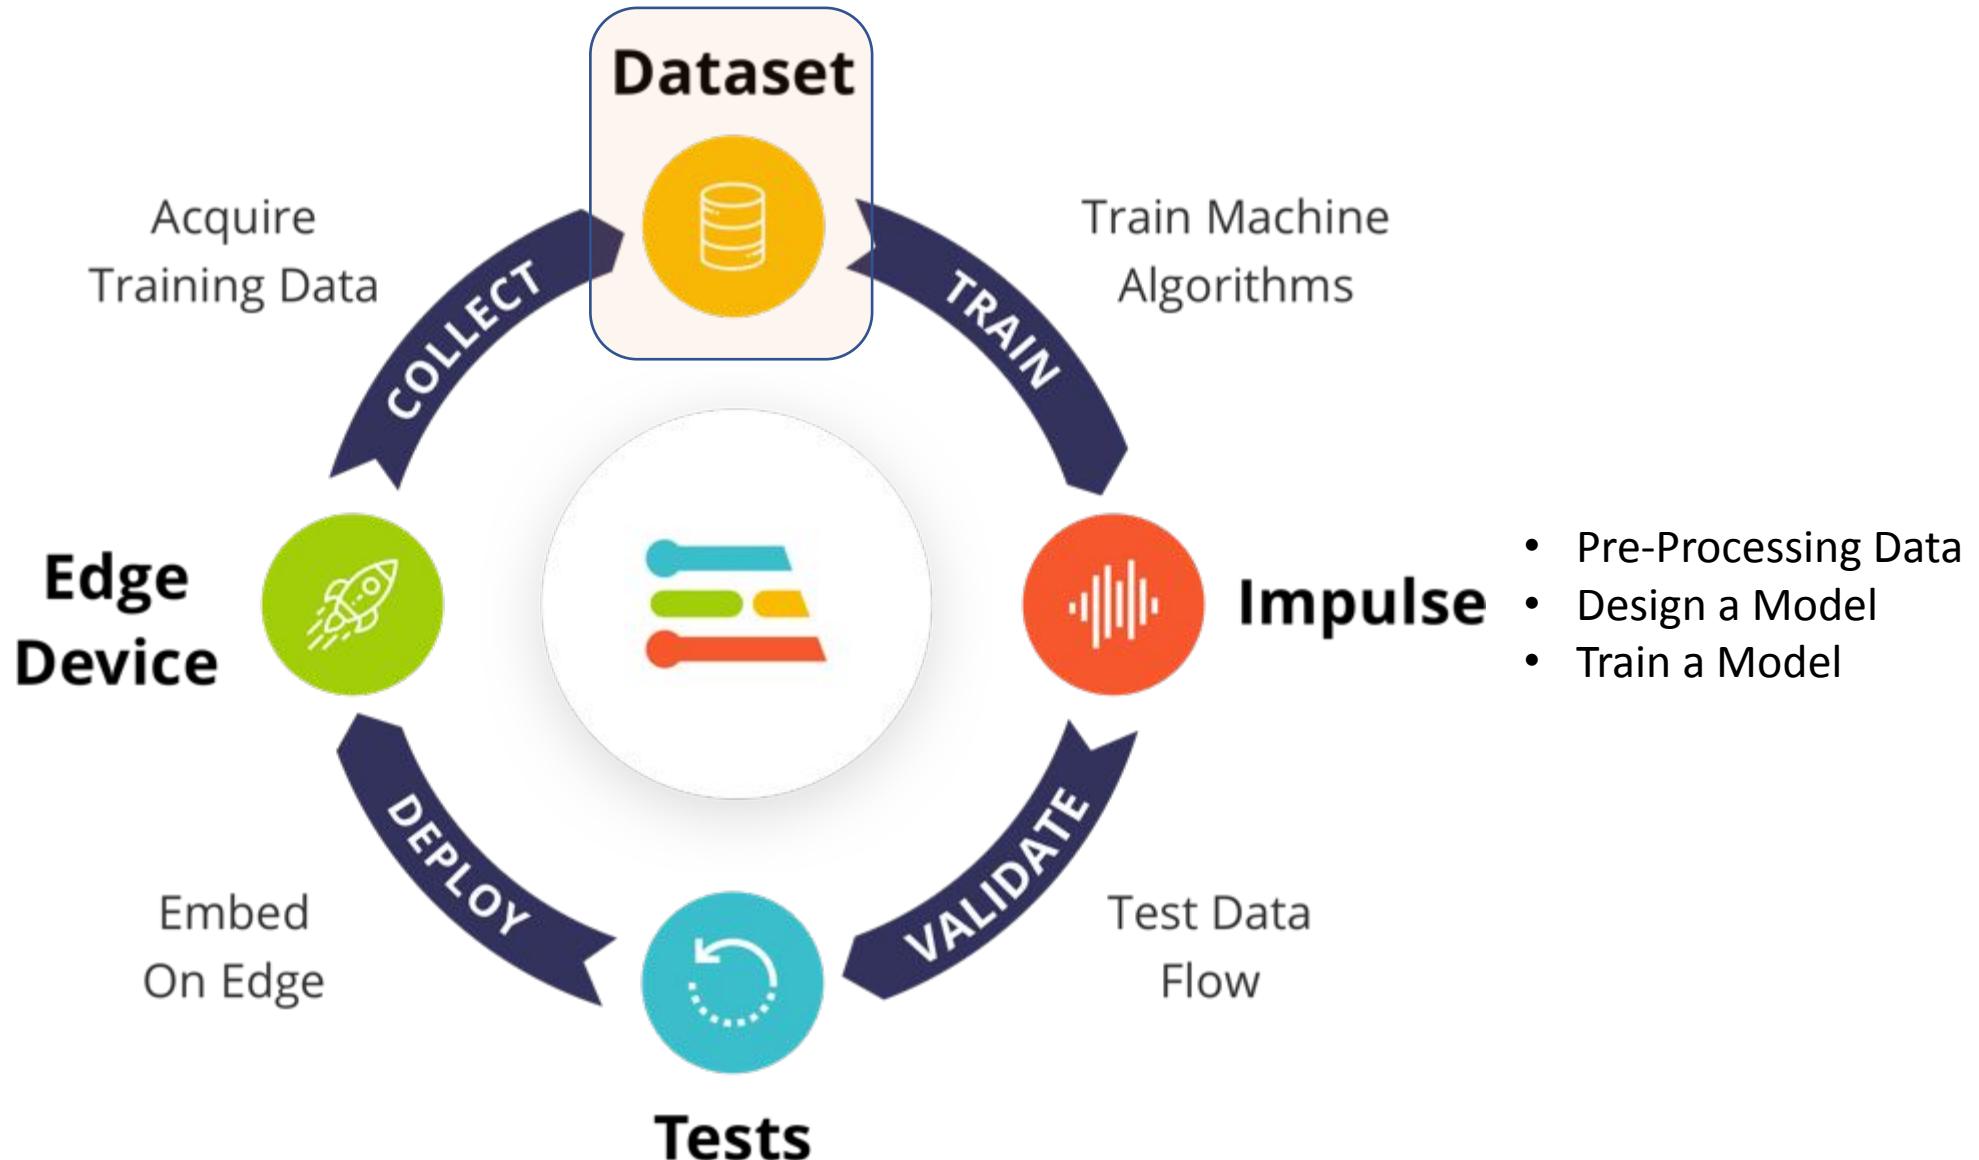

Collect Data

The screenshot shows the Edge Impulse Data acquisition interface. On the left, a sidebar menu is open with the 'Data acquisition' option highlighted by a blue arrow. The main area displays a summary of collected data: 5m 13s total duration, 80% Train / 20% Test split. Below this is a table of 'Collected data' samples, including their names, labels, addition dates, and lengths. To the right, the 'Record new data' section is active, showing fields for 'Device' (set to 'phone_kq6ray4k'), 'Label' ('maritime'), 'Sample length (ms.)' (10000), 'Sensor' (set to 'Accelerometer'), and 'Frequency' (62.5Hz). A large orange box highlights the 'Label' field, and another orange box highlights the 'Start sampling' button. A yellow arrow points from the 'Start sampling' button towards the 'Data collection' panel on the right. The bottom right corner shows a circular progress bar with the number '4s'.

DATA ACQUISITION (SCITINYML-MOTION-PROJECT)

Training data Test data

Did you know? You can capture data from any device or development board, or upload your existing datasets - Show options

DATA COLLECTED
5m 13s

TRAIN / TEST SPLIT
80% / 20%

Collected data

SAMPLE NAME	LABEL	ADDED	LENGTH
idle.2hstvpk2	idle	Oct 14 2021, 17:54:22	10s
idle.2hstuaut	idle	Oct 14 2021, 17:53:34	10s
idle.2hstt0q3	idle	Oct 14 2021, 17:53:16	10s
idle.2hstt9dk	idle	Oct 14 2021, 17:53:00	10s
idle.2hstp4a	idle	Oct 14 2021, 17:52:43	10s
idle.2hstrkad	idle	Oct 14 2021, 17:52:06	10s
idle.2hstr3kf	idle	Oct 14 2021, 17:51:49	10s
idle.2hstqaj	idle	Oct 14 2021, 17:51:32	10s
maritime.2hstpku3	maritime	Oct 14 2021, 17:51:01	10s
maritime.2hsto9ki	maritime	Oct 14 2021, 17:50:16	10s
maritime.2hstnnqu	maritime	Oct 14 2021, 17:49:58	10s
maritime.2hstn60c	maritime	Oct 14 2021, 17:49:40	10s

Record new data

Device: phone_kq6ray4k

Label: maritime

Sample length (ms.): 10000

Sensor: Accelerometer

Frequency: 62.5Hz

Start sampling

Sensor: Accelerometer (selected)

Data collection

4s

Recording data

Collect Data

The screenshot shows the Edge Impulse Data Acquisition interface on a web browser. A large blue arrow on the left points towards the 'Data acquisition' section. A yellow arrow points from the 'Data acquisition' section to the 'Collected data' table. A red box highlights the 'DATA COLLECTED' summary at the top.

DATA ACQUISITION (SCITINYML-MOTION-PROJECT)

Training data **Test data**

Did you know? You can capture data from any device or development board, or upload your existing datasets - [Show options](#)

DATA COLLECTED **5m 13s** **TRAIN / TEST SPLIT** **80% / 20%**

Collected data

SAMPLE NAME	LABEL	ADDED	LENGTH	⋮
idle.2hstvpk2	idle	Oct 14 2021, 17:54:22	10s	⋮
idle.2hstuaut	idle	Oct 14 2021, 17:53:34	10s	⋮
idle.2hstt0q3	idle	Oct 14 2021, 17:53:16	10s	⋮
idle.2hstt9dk	idle	Oct 14 2021, 17:53:00	10s	⋮
idle.2hstp4a	idle	Oct 14 2021, 17:52:43	10s	⋮
idle.2hstrkad	idle	Oct 14 2021, 17:52:06	10s	⋮
idle.2hstr3kf	idle	Oct 14 2021, 17:51:49	10s	⋮
idle.2hstqaj	idle	Oct 14 2021, 17:51:32	10s	⋮
maritime.2hstpk3	maritime	Oct 14 2021, 17:51:01	10s	⋮
maritime.2hsto9ki	maritime	Oct 14 2021, 17:50:16	10s	⋮
maritime.2hstnnqu	maritime	Oct 14 2021, 17:49:58	10s	⋮
maritime.2hstn60c	maritime	Oct 14 2021, 17:49:40	10s	⋮

Record new data

Device phone_kq6ray4k


Label **Sample length (ms.)**


Sensor Accelerometer **Frequency** 62.5Hz

Start sampling

RAW DATA **maritime.2hstpk3**

The chart displays three data series: accX (red), accY (green), and accZ (blue). The x-axis represents time in milliseconds (ms) from 0 to 9075, with major ticks at 1008, 2016, 3025, 4033, 5041, 6050, 7058, 8067, and 9075. The y-axis ranges from -20 to 20. The data shows periodic, high-frequency oscillations characteristic of maritime motion.

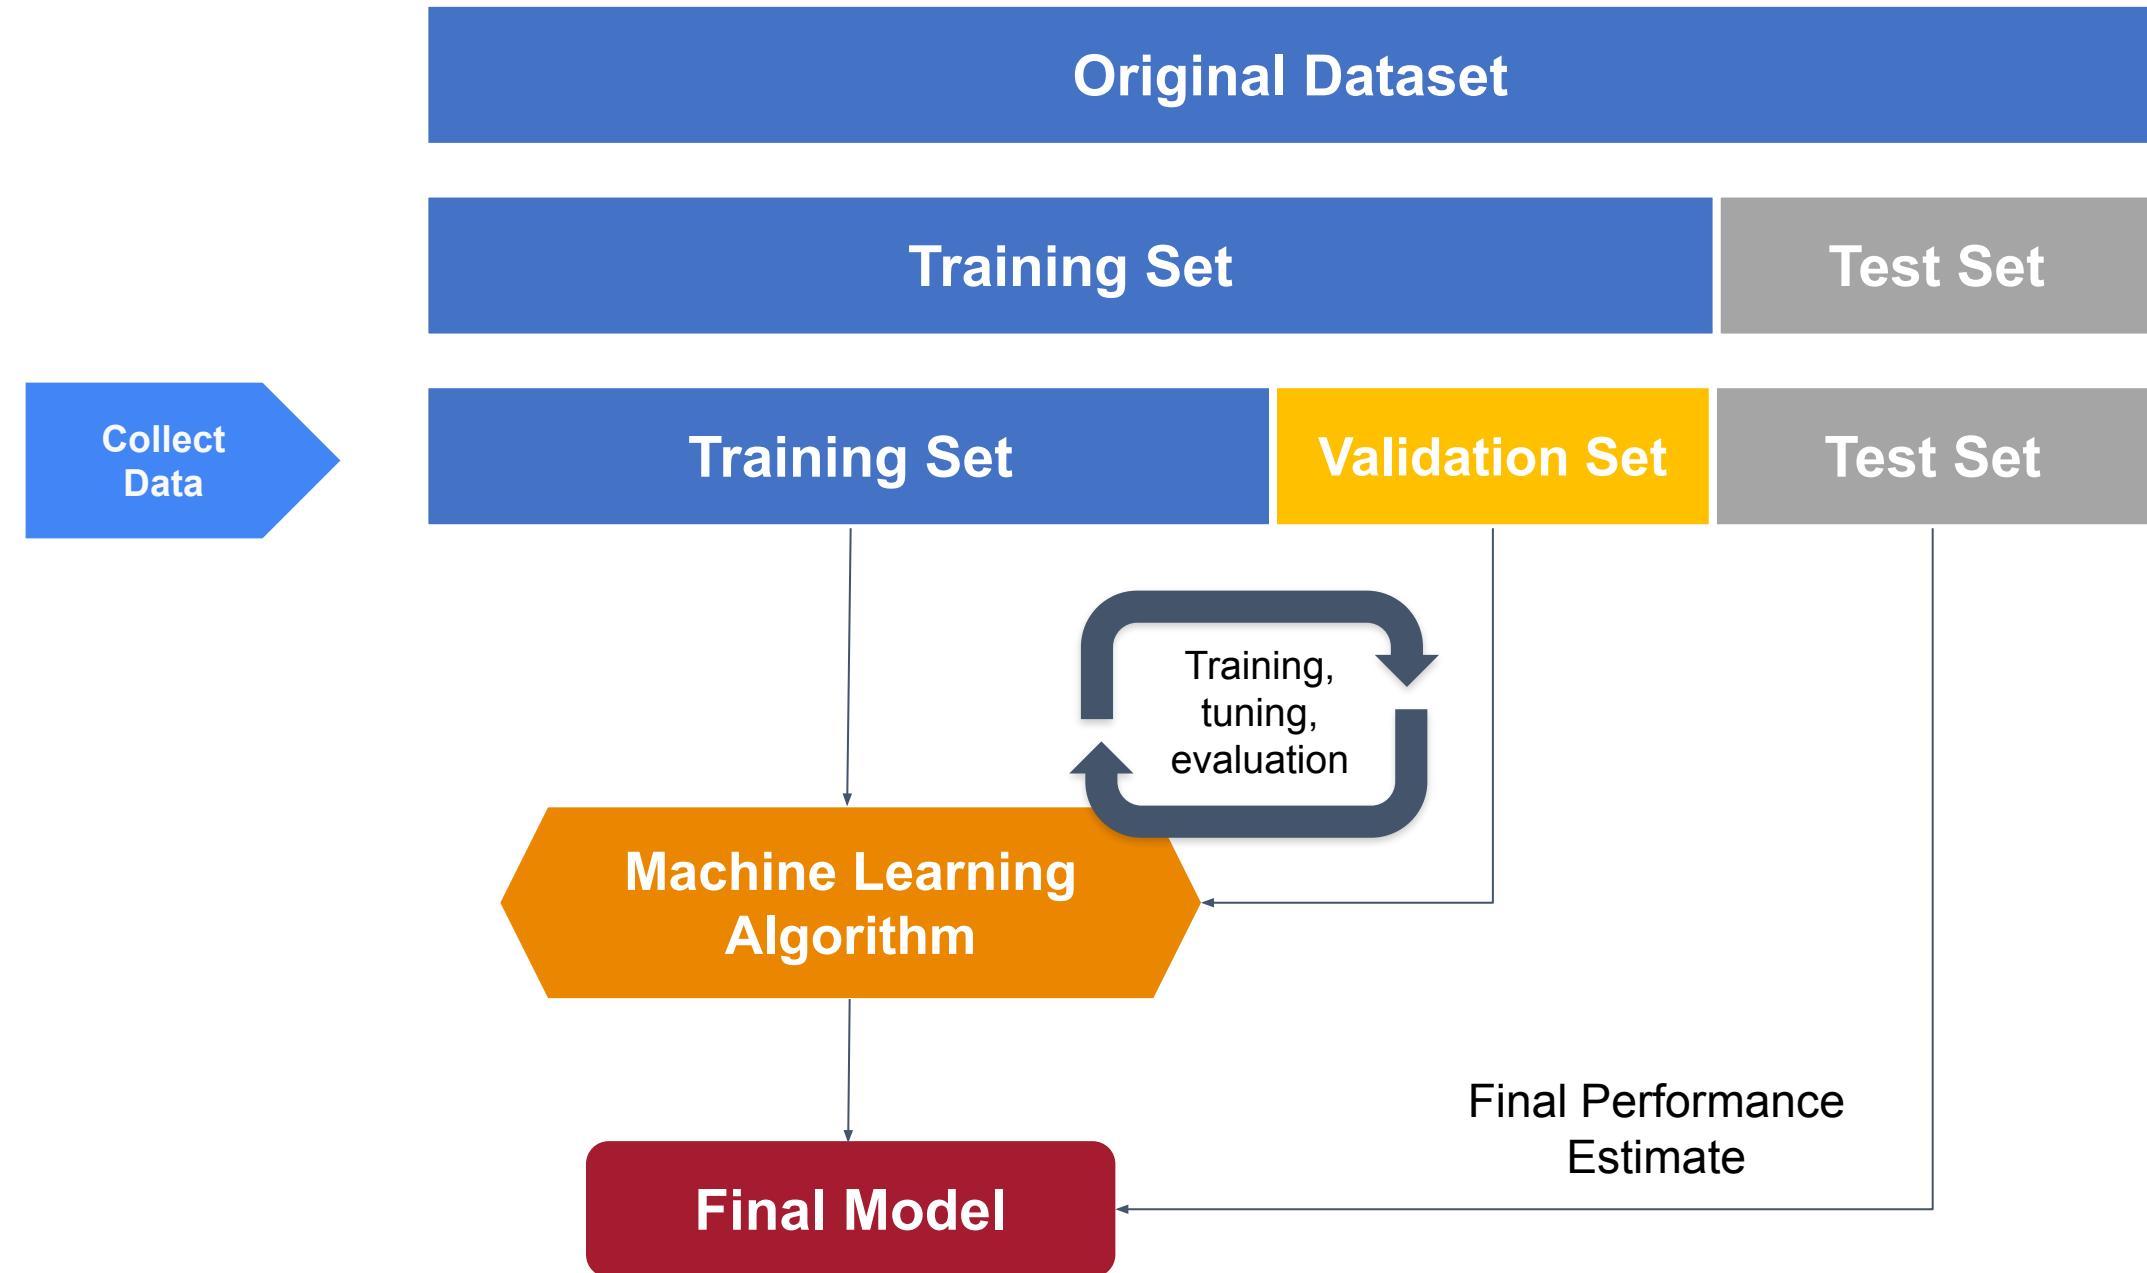

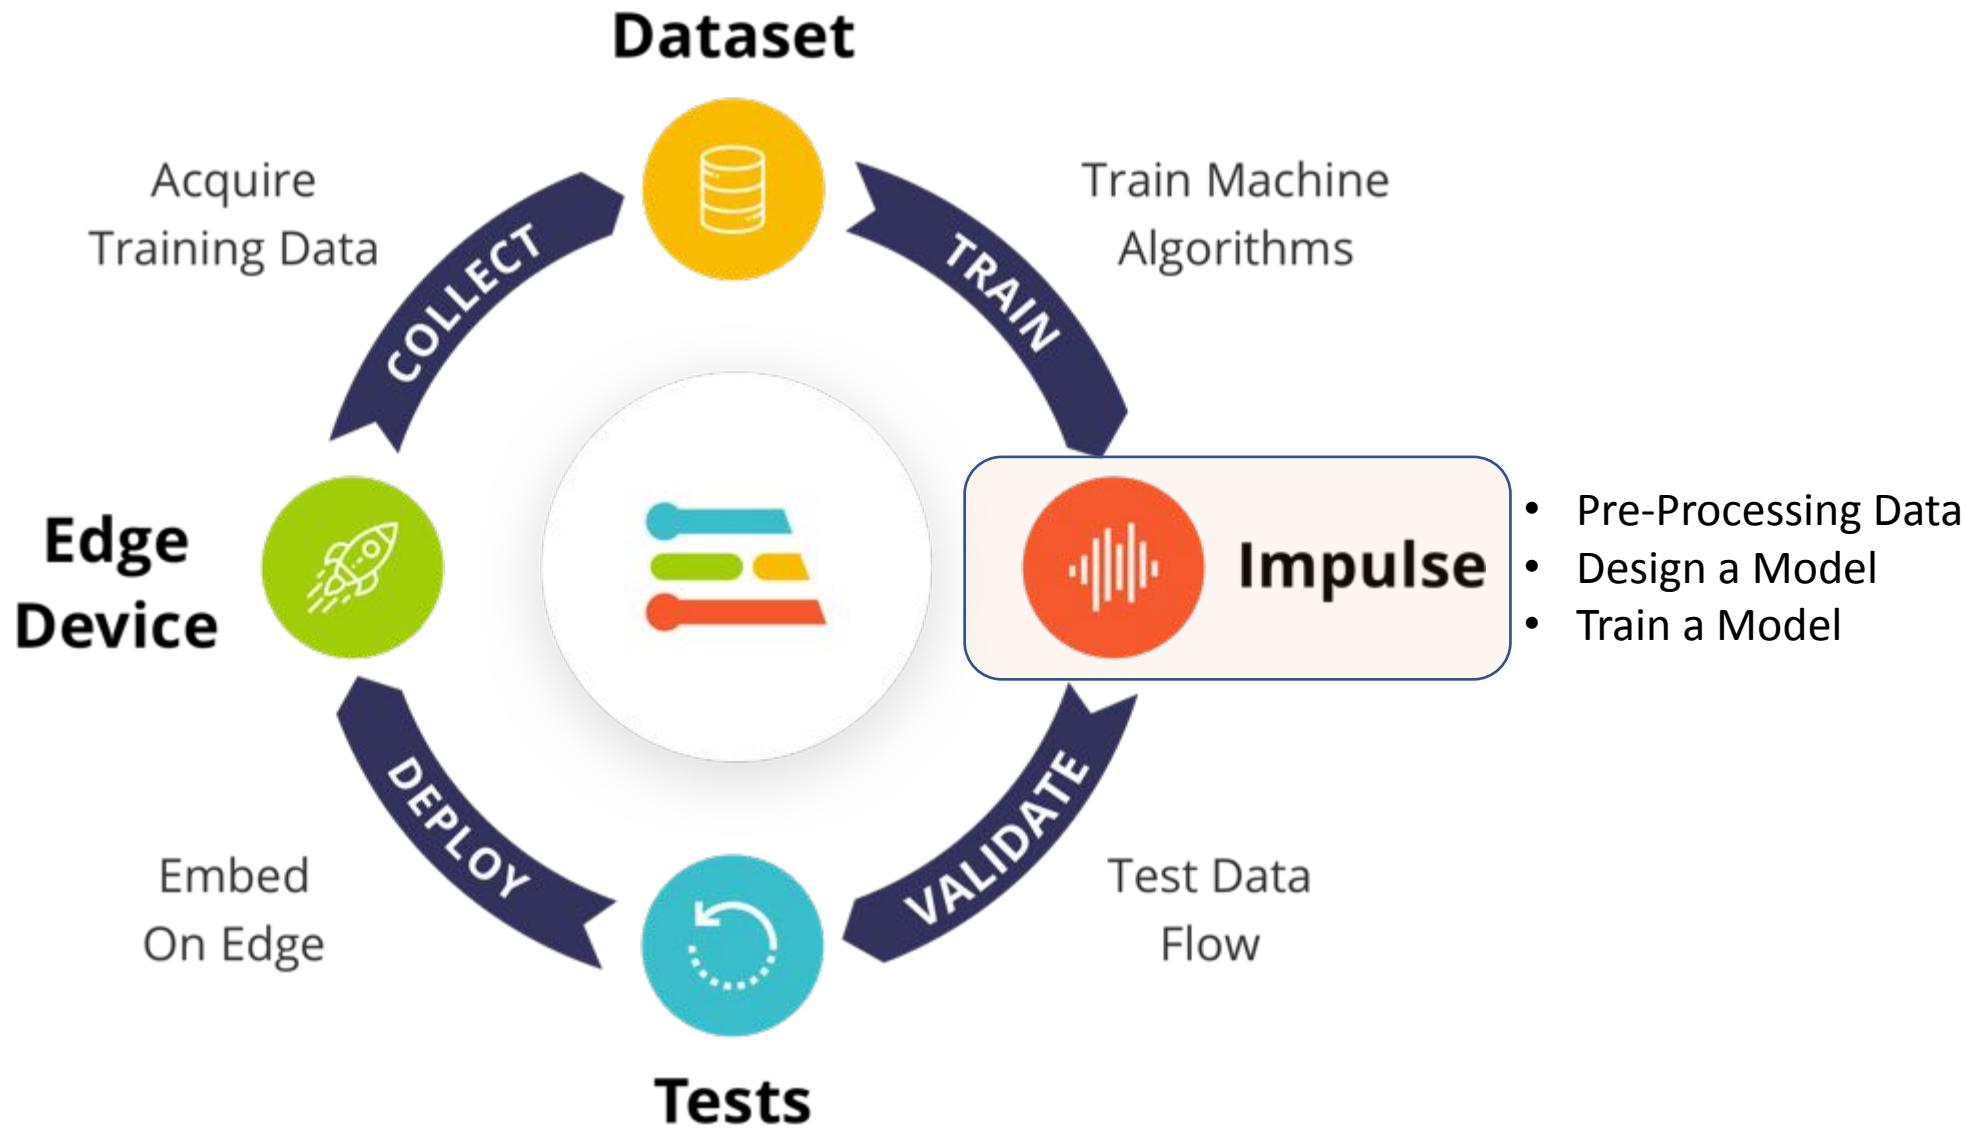

Time series data



Axes
accX, accY, accZ

Window size

2000 ms.

Window increase

80 ms.

Frequency (Hz)
62.5

Zero-pad data

Spectral Analysis



Name
Spectral Analysis

Input axes
 accX
 accY
 accZ

Neural Network (Keras)



Name
Neural Network (Keras)

Input features
 Spectral Analysis

Output features
4 (idle, lift, maritime, terrestrial)

Output features



4 (idle, lift, maritime, terrestrial)

Save Impulse



Classes

- Lift
- Terrestrial
- Maritime
- Idle

Preprocess Data

Spectral Analysis - SciTinyML - [+](#)

studio.edgeimpulse.com/studio/51797/dsp/spectral-analysis/11

Raw data

maritime.2hstrnnqu (maritime)

EDGE IMPULSE

Dashboard Devices Data acquisition Impulse design Create impulse Spectral Analysis Neural Network (Ke...) EON Tuner Retrain model Live classification Model testing Versioning Deployment GETTING STARTED Documentation Forums

Raw features

375 Raw Features

Parameters Scaling Scale axes 1

Filter Type low Cut-off frequency 3 Order 6

Spectral power FFT length 128 No. of peaks 3 Peaks threshold 0.1 Power edges 0.1, 0.5, 1.0, 2.0, 5.0

RMS FFT PSD

Save parameters

DSP result

After filter

Frequency domain

Spectral power

Processed features

On-device performance

PROCESSING TIME 8 ms. PEAK RAM USAGE 5 KB

The screenshot shows the Edge Impulse Studio interface for a project titled "Spectral Analysis - SciTinyML". On the left, a sidebar lists various tools and documentation. The main area displays raw sensor data (accX, accY, accZ) over time, followed by a section for "Raw features" which is highlighted with an orange box. Below this, "Parameters" for spectral analysis are set, including scaling, a low-pass filter, and specific settings for "Spectral power" like FFT length and peak detection. To the right, the "DSP result" section shows the filtered signal and its frequency spectrum. A large orange bracket groups the "Raw features" and "Processed features" sections, indicating the transformation process. The "Processed features" section is also highlighted with an orange box and lists 33 numerical values. At the bottom, performance metrics show an 8 ms processing time and 5 KB peak RAM usage.

Preprocess Data

The screenshot shows the Edge Impulse Studio interface for a project titled "SPECTRAL ANALYSIS (SCITINYML-MOTION-PROJECT) #1 - EON Tuner Primary".

Left Sidebar:

- Dashboard
- Devices
- Data acquisition
- Impulse design
 - Create impulse
 - Spectral Analysis
 - Neural Network (Ke...)
- EON Tuner
- Retrain model
- Live classification
- Model testing
- Versioning
- Deployment

GETTING STARTED

- Documentation
- Forums

Main Content Area:

SPECTRAL ANALYSIS (SCITINYML-MOTION-PROJECT) #1 - EON Tuner Primary

Parameters **Generate features**

Training set

Data in training set	5m 22s
Classes	4 (idle, lift, maritime, terrestrial)
Window length	2000 ms.
Window increase	80 ms.
Training windows	3,230

Feature explorer (3,132 samples)

X Axis: accX RMS
Y Axis: accY RMS
Z Axis: accZ RMS

Legend: idle (blue), lift (orange), maritime (green), terrestrial (red)

3D scatter plot showing data points clustered by class (idle, lift, maritime, terrestrial) based on the selected X, Y, and Z axes.

On-device performance

- PROCESSING TIME: 8 ms.
- PEAK RAM USAGE: 5 KB

Bottom Left: © 2021 EdgeImpulse Inc. All rights reserved

Design a Model

Neural Network (Keras) - SciTI

studio.edgeimpulse.com/studio/51797/learning/keras/12

EDGE IMPULSE

Neural Network settings

Training settings

Number of training cycles ② EPOCHS 30

Learning rate ② Lr 0.0005

Neural network architecture

Input layer (33 features)

Dense layer (20 neurons)

Dense layer (10 neurons)

Add an extra layer

Output layer (4 features)

Start training

Training output

The diagram illustrates a neural network architecture. It starts with an 'input' node at the top, which points down to an 'InputLayer' block. This is followed by a sequence of layers: a 'Dense' layer with 'kernel (33x20)' and 'bias (20)', followed by a 'ReLU' activation block. Another 'Dense' layer with 'kernel (20x10)' and 'bias (10)' is shown, also followed by a 'ReLU' block. The final 'Dense' layer has 'kernel (10x4)' and 'bias (4)', leading to a 'Softmax' block at the bottom. The output of the Softmax block is labeled 'y_pred'. Blue arrows point from the 'InputLayer' and each 'Dense' layer back to their corresponding entries in the 'Neural network architecture' section of the left panel.

Train a Model

Neural Network (Keras) - SciTI

studio.edgeimpulse.com/studio/51797/learning/keras/12

EDGE IMPULSE

Dashboard

Devices

Data acquisition

Impulse design

- Create impulse
- Spectral Analysis
- Neural Network (Keras)**

EON Tuner

Retrain model

Live classification

Model testing

Versioning

Deployment

GETTING STARTED

Documentation

Forums

Neural Network settings

Training settings

Number of training cycles ② EPOCHS 30

Learning rate ② Lr 0.0005

Neural network architecture

- Input layer (33 features)
- Dense layer (20 neurons)
- Dense layer (10 neurons)
- Add an extra layer
- Output layer (4 features)

Start training

Training Set Validation Set

Machine Learning Algorithm

Training, tuning, evaluation

Training output

Model

Model version: ② Quantized (int8)

Last training performance (validation set)

ACCURACY 99.7% LOSS 0.01

Confusion matrix (validation set)

	IDLE	LIFT	MARITIME	TERRESTRIAL
IDLE	100%	0%	0%	0%
LIFT	0%	100%	0%	0%
MARITIME	0%	0.6%	99.4%	0%
TERRESTRIAL	0.6%	0%	0%	99.4%
F1 SCORE	1.00	1.00	1.00	1.00

Feature explorer (full training set) ②

accX RMS accY RMS accZ RMS

- idle - correct
- lift - correct
- maritime - correct
- terrestrial - correct
- maritime - incorrect
- terrestrial - incorrect

On-device performance ②


INFERENCING TIME 1 ms. PEAK RAM USAGE 1.7K FLASH USAGE 19.0K

Evaluate Optimize

The screenshot shows the Edge Impulse web studio interface. On the left, a green arrow points right, labeled "Evaluate Optimize". The main area is divided into two main sections:

- Neural Network settings** (left):
 - Training settings**: Number of training cycles (30), Learning rate (0.0005).
 - Neural network architecture**: Input layer (33 features), Dense layer (20 neurons), Dense layer (10 neurons). A button "Add an extra layer" is available.
 - Start training** button.
- Training output** (right):
 - Model**: Model version: Quantized (int8) (highlighted with an orange box).
 - Last training performance (validation set)**:
 - ACCURACY: 99.7% (highlighted with an orange box).
 - LOSS: 0.01
 - Confusion matrix (validation set)**:

	IDLE	LIFT	MARITIME	TERRESTRIAL
IDLE	100%	0%	0%	0%
LIFT	0%	100%	0%	0%
MARITIME	0%	0.6%	99.4%	0%
TERRESTRIAL	0.6%	0%	0%	99.4%
F1 SCORE	1.00	1.00	1.00	1.00
 - Feature explorer (full training set)**:
 - Options: accX RMS, accY RMS, accZ RMS.
 - Legend: idle - correct (yellow), lift - correct (green), maritime - correct (blue), terrestrial - correct (orange), maritime - incorrect (red), terrestrial - incorrect (purple).
 - 3D scatter plot showing feature distribution.
 - On-device performance** (highlighted with an orange box):
 - Estimate for Arduino Nano 33 BLE Sense (Cortex-M4F 64MHz), compiled with Edge Impulse EON™ compiler.
 - Performance metrics: INFERENCING TIME (1 ms), PEAK RAM USAGE (1.7K), FLASH USAGE (19.0K).

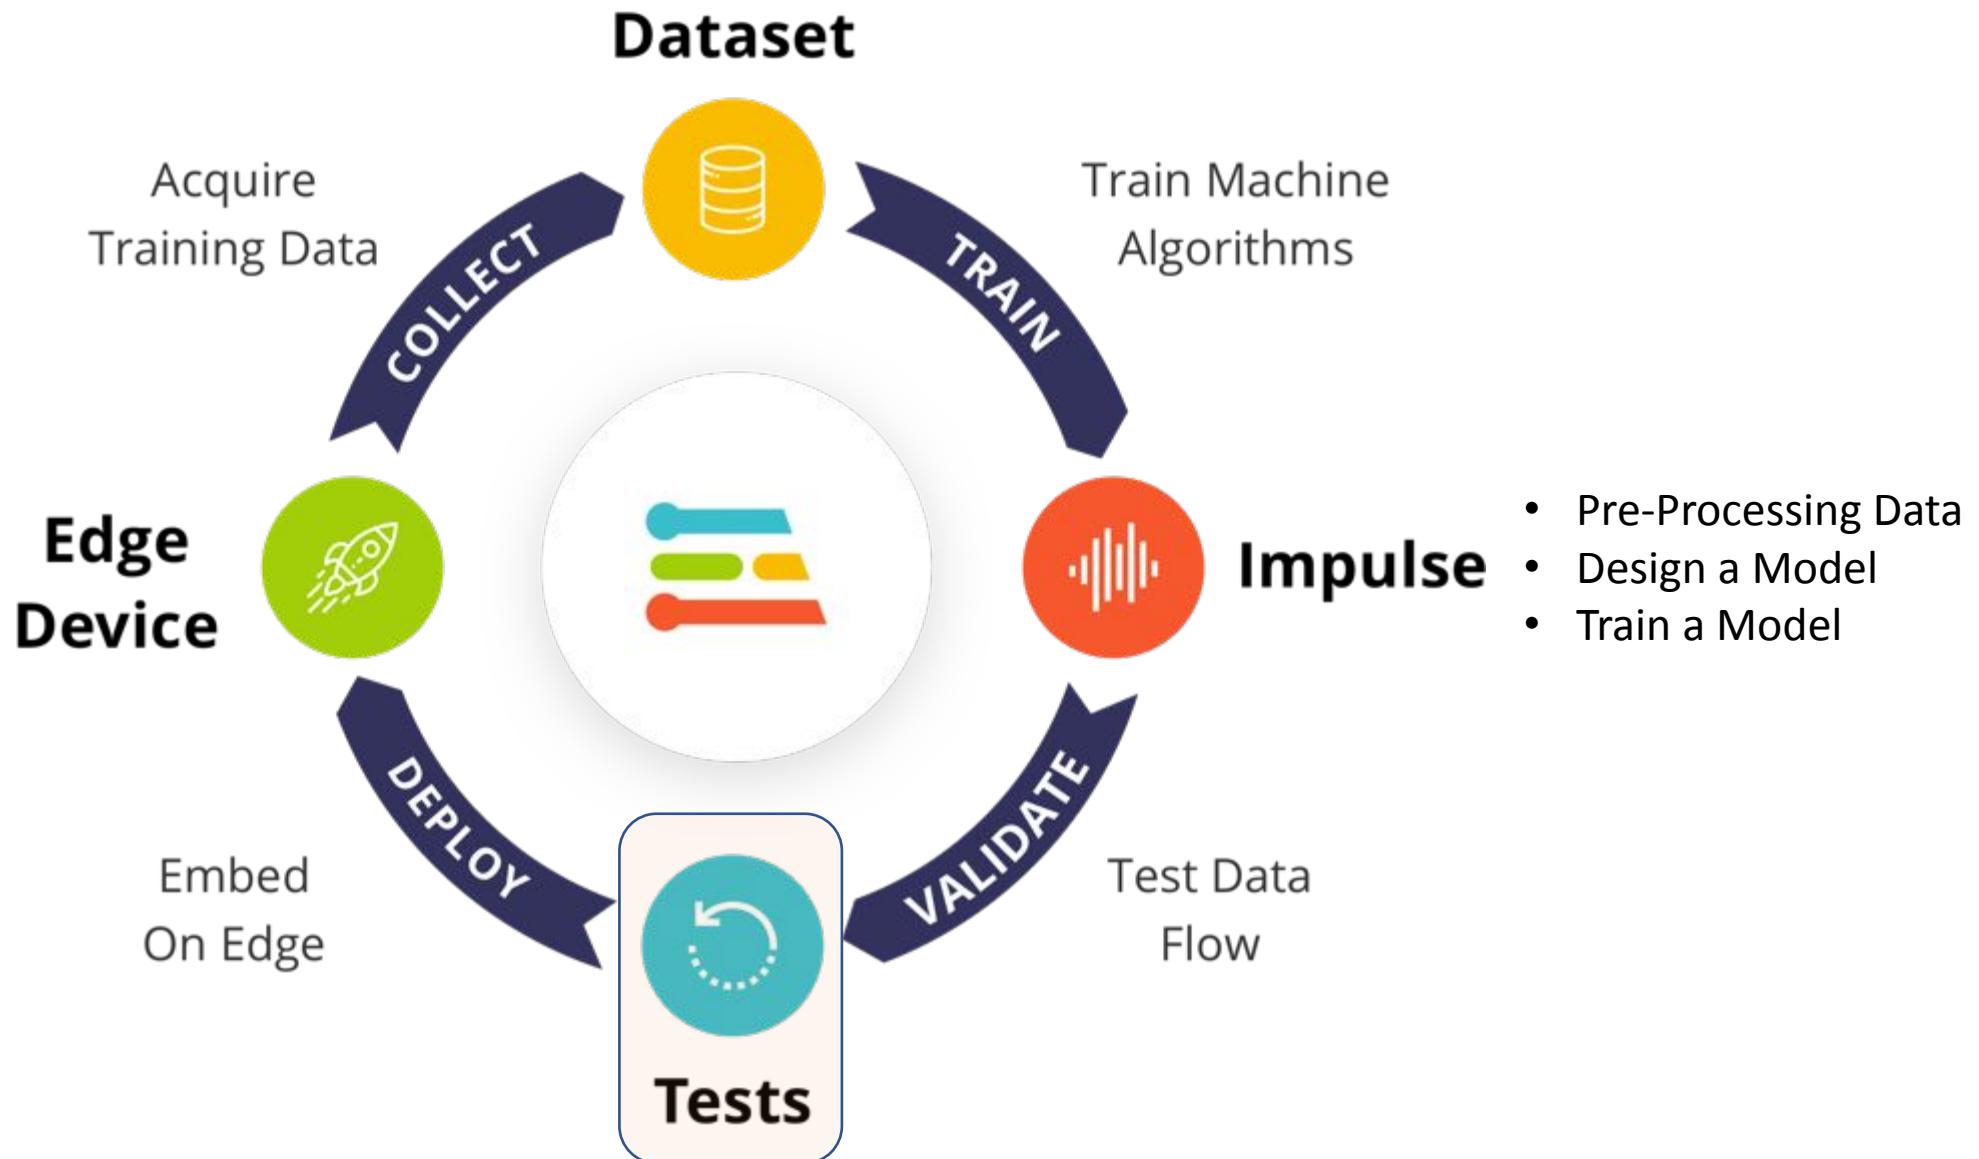

**Evaluate
Optimize**

Model testing - SciTinyML-Motion-Project

studio.edgeimpulse.com/studio/51797/validation

EDGE IMPULSE

MODEL TESTING (SCITINYML-MOTION-PROJECT)

MJRoBot (Marcelo Rovai)

This lists all test data. You can manage this data through Data acquisition.

Test data

Classify all

Set the 'expected outcome' for each sample to the desired outcome to automatically score the impulse.

SAMPLE NAME	EXPECTED OUTCOME	LENGTH	ACCURACY	RESULT
testing.2hvft...	testing	10s		98 testing
terrestrial.2...	terrestrial	10s	100%	98 terrestrial
terrestrial.2...	terrestrial	10s	100%	98 terrestrial
lift.2hssi1t6	lift	10s	100%	98 lift
lift.2hst8tvj	lift	10s	100%	98 lift

Model testing output

Model testing results

ACCURACY **99.74%** %

	IDLE	LIFT	MARITIME	TERRESTRIAL	UNCERTAIN
IDLE	99.5%	0.5%	0%	0%	0%
LIFT	0%	100%	0%	0%	0%
MARITIME	0%	0%	99.5%	0%	0.5%
TERRESTRIAL	0%	0%	0%	100%	0%
F1 SCORE	1.00	1.00	1.00	1.00	

Feature explorer

accX RMS accY RMS accZ RMS

Machine Learning Algorithm

Training Set Validation Set Test Set


Training, tuning, evaluation


Final Performance Estimate

Final Model




idle - correct
lift - correct
maritime - correct
terrestrial - correct
idle - incorrect
maritime - incorrect

3D Scatter Plot: accX RMS, accY RMS, accZ RMS



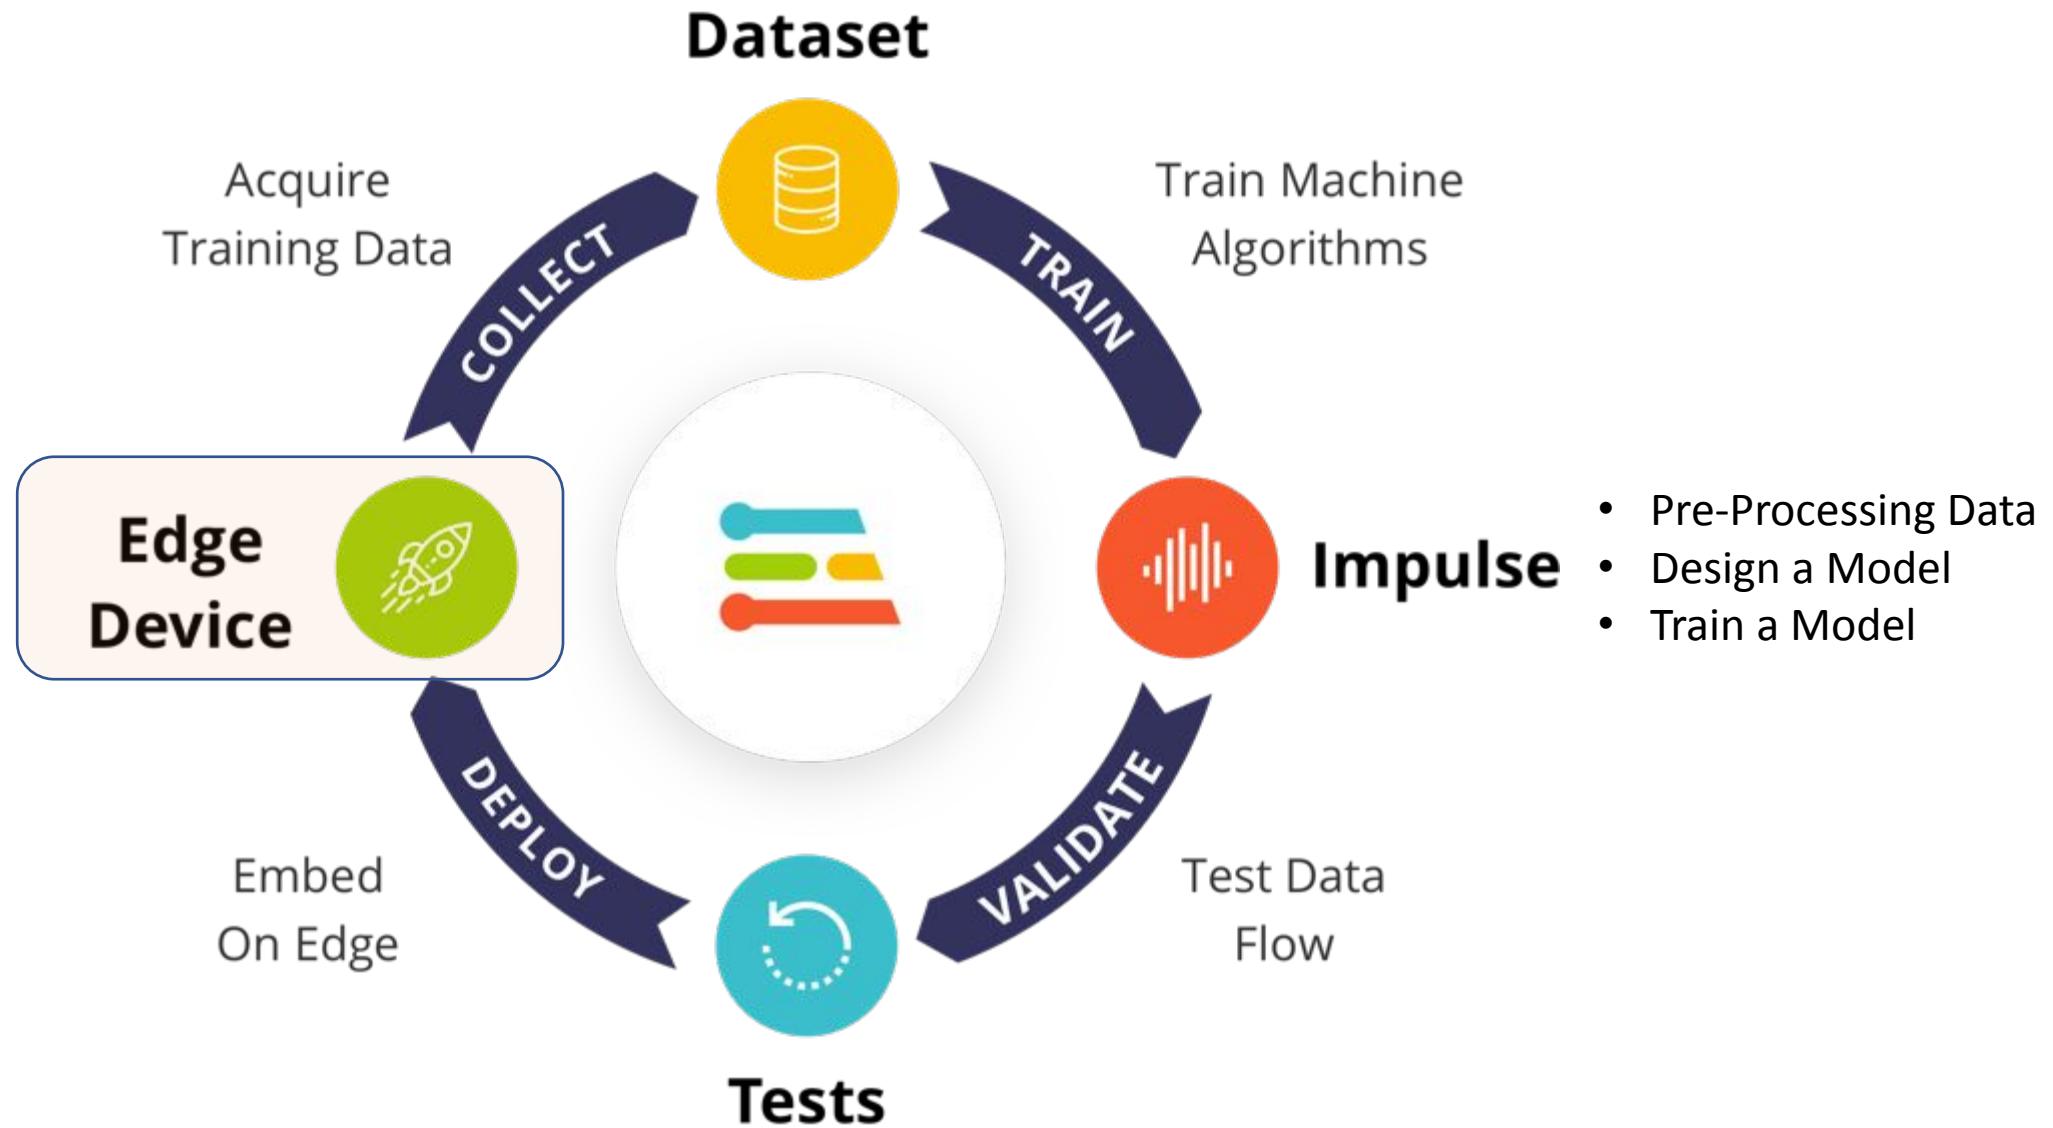


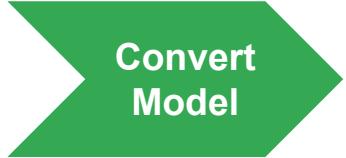


Convert Model

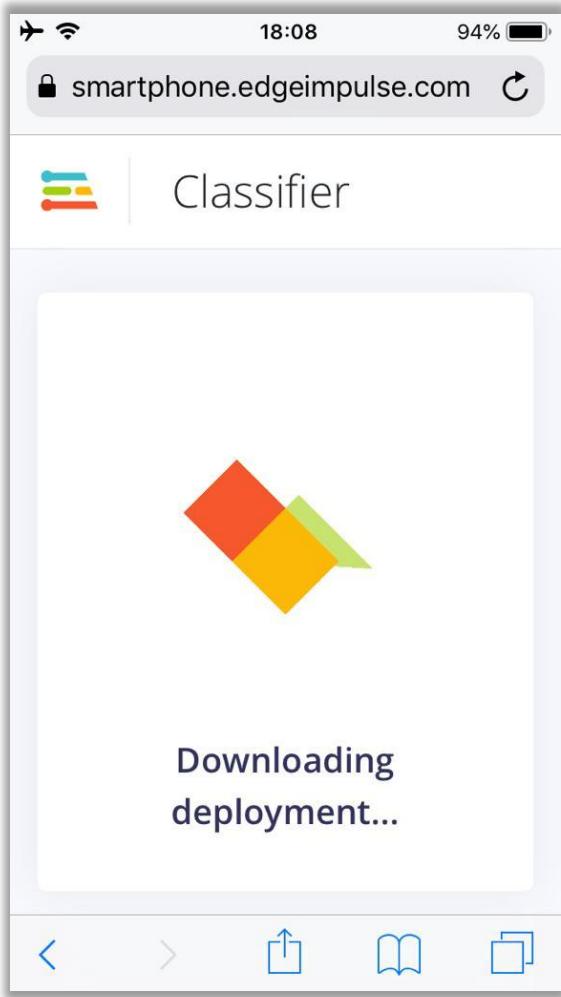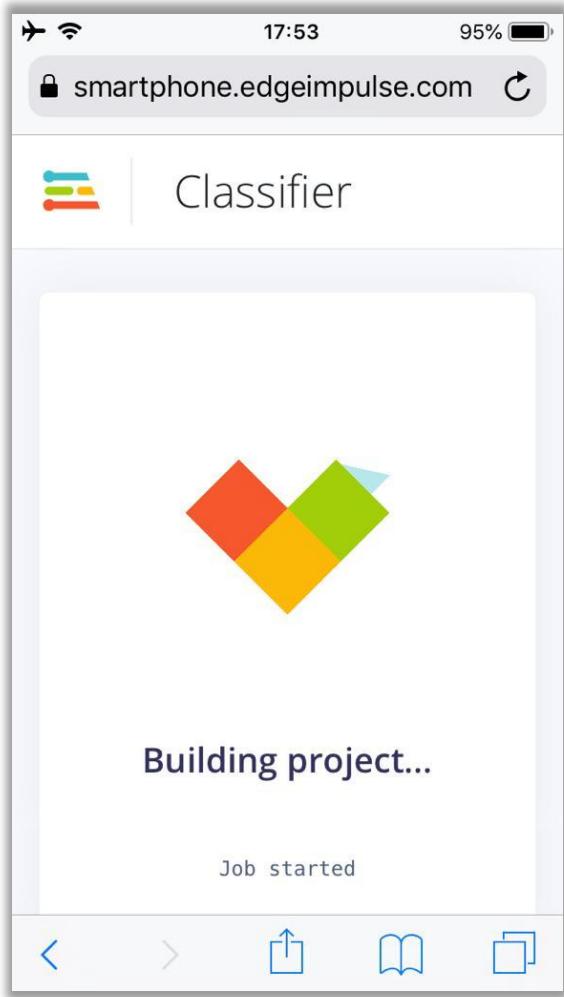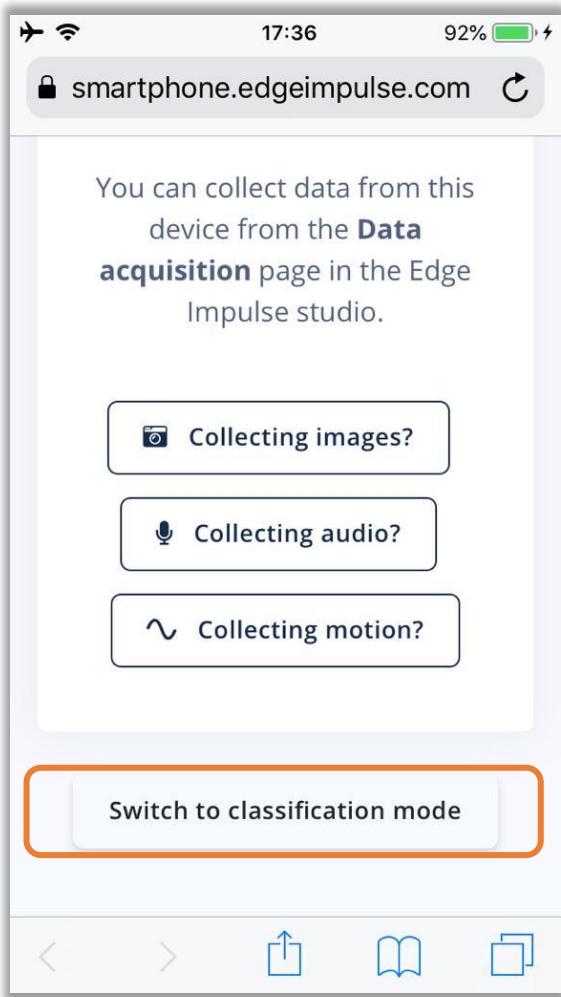

Make
Inferences

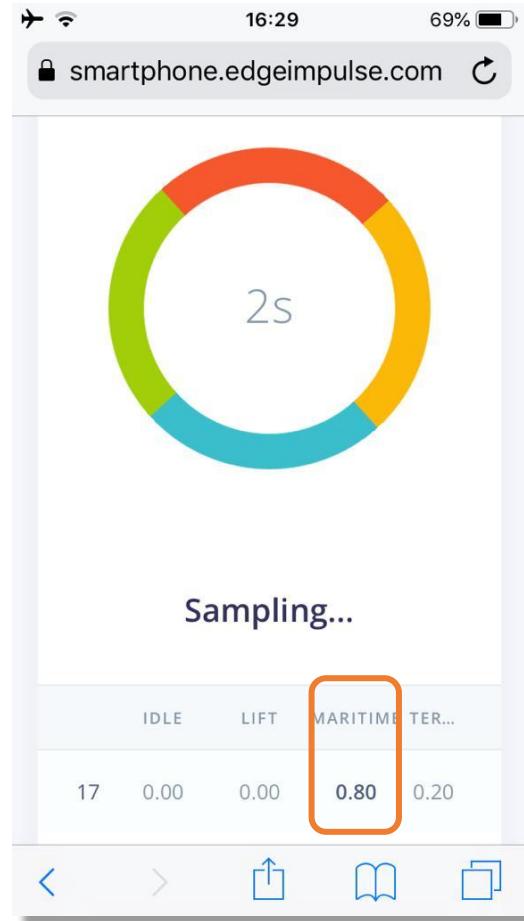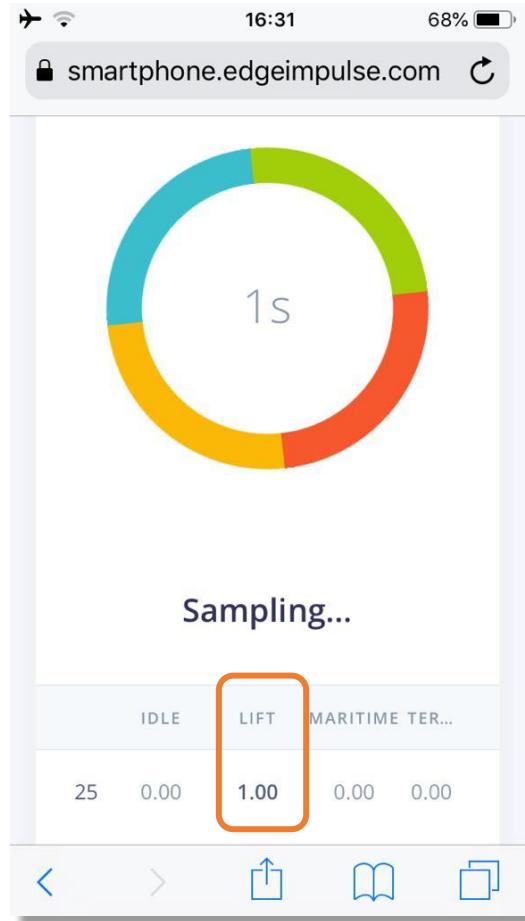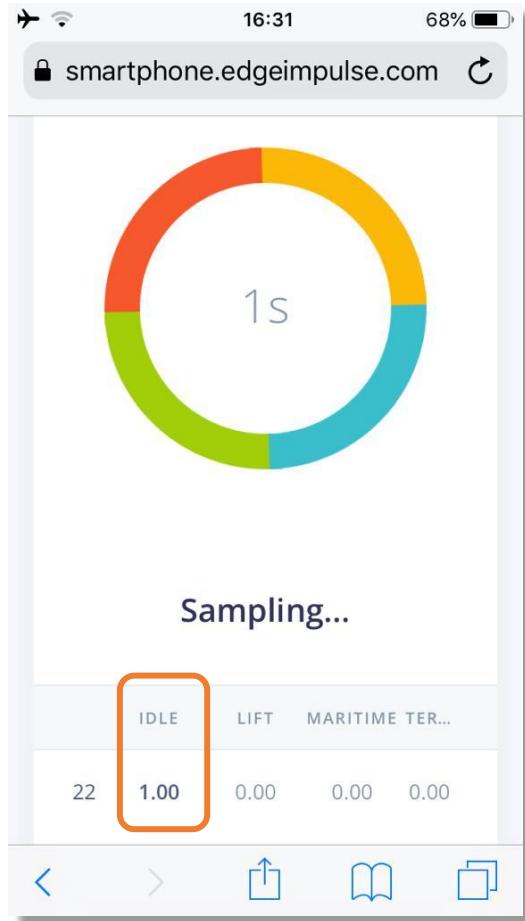

Motion Classification - Summary

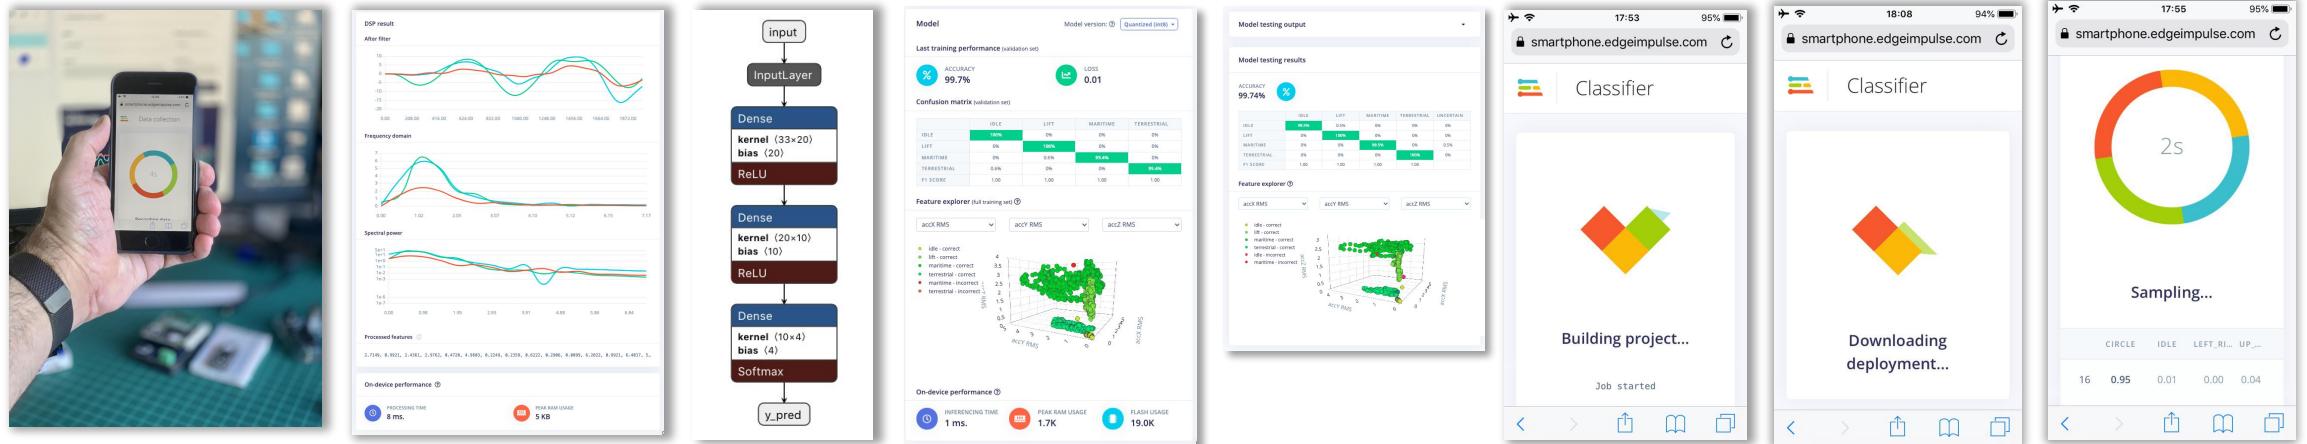


Spectral Analysis



NN Classifier




Anomaly Detection Hands-On

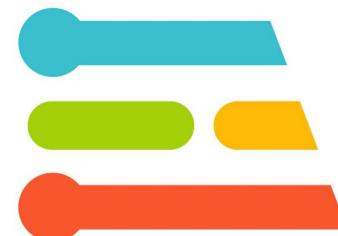



Industrial – Anomaly Detection

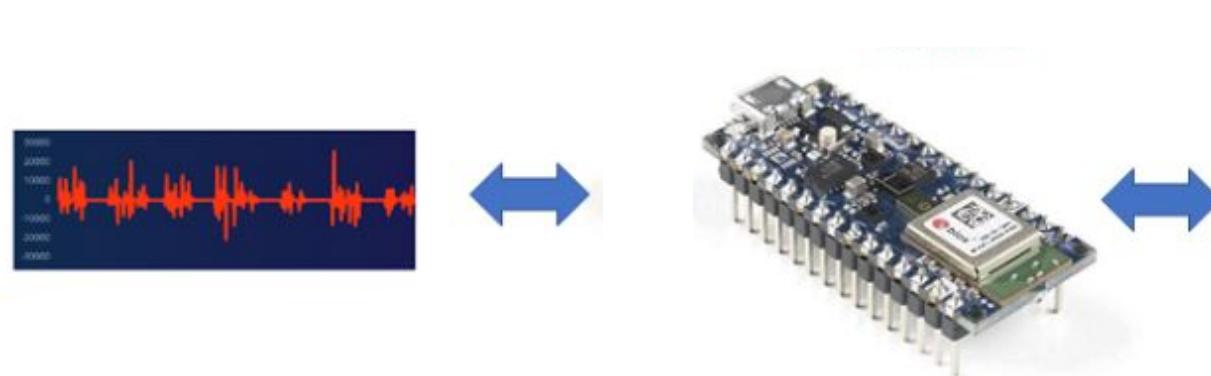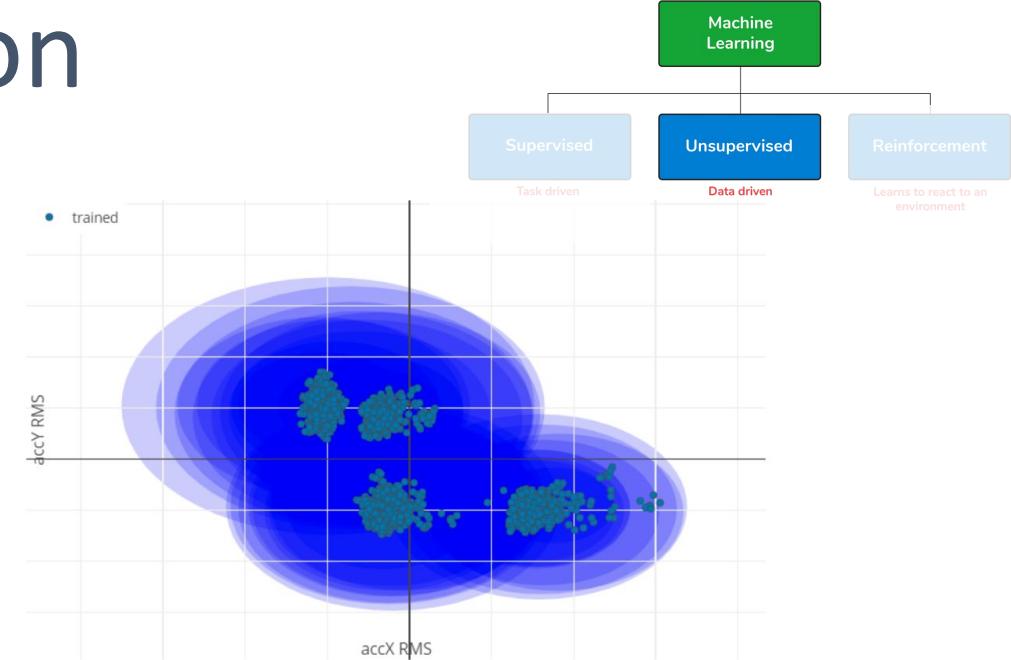



IESTI01 2021.2 - Final Group Project: Bearing Failure Detection

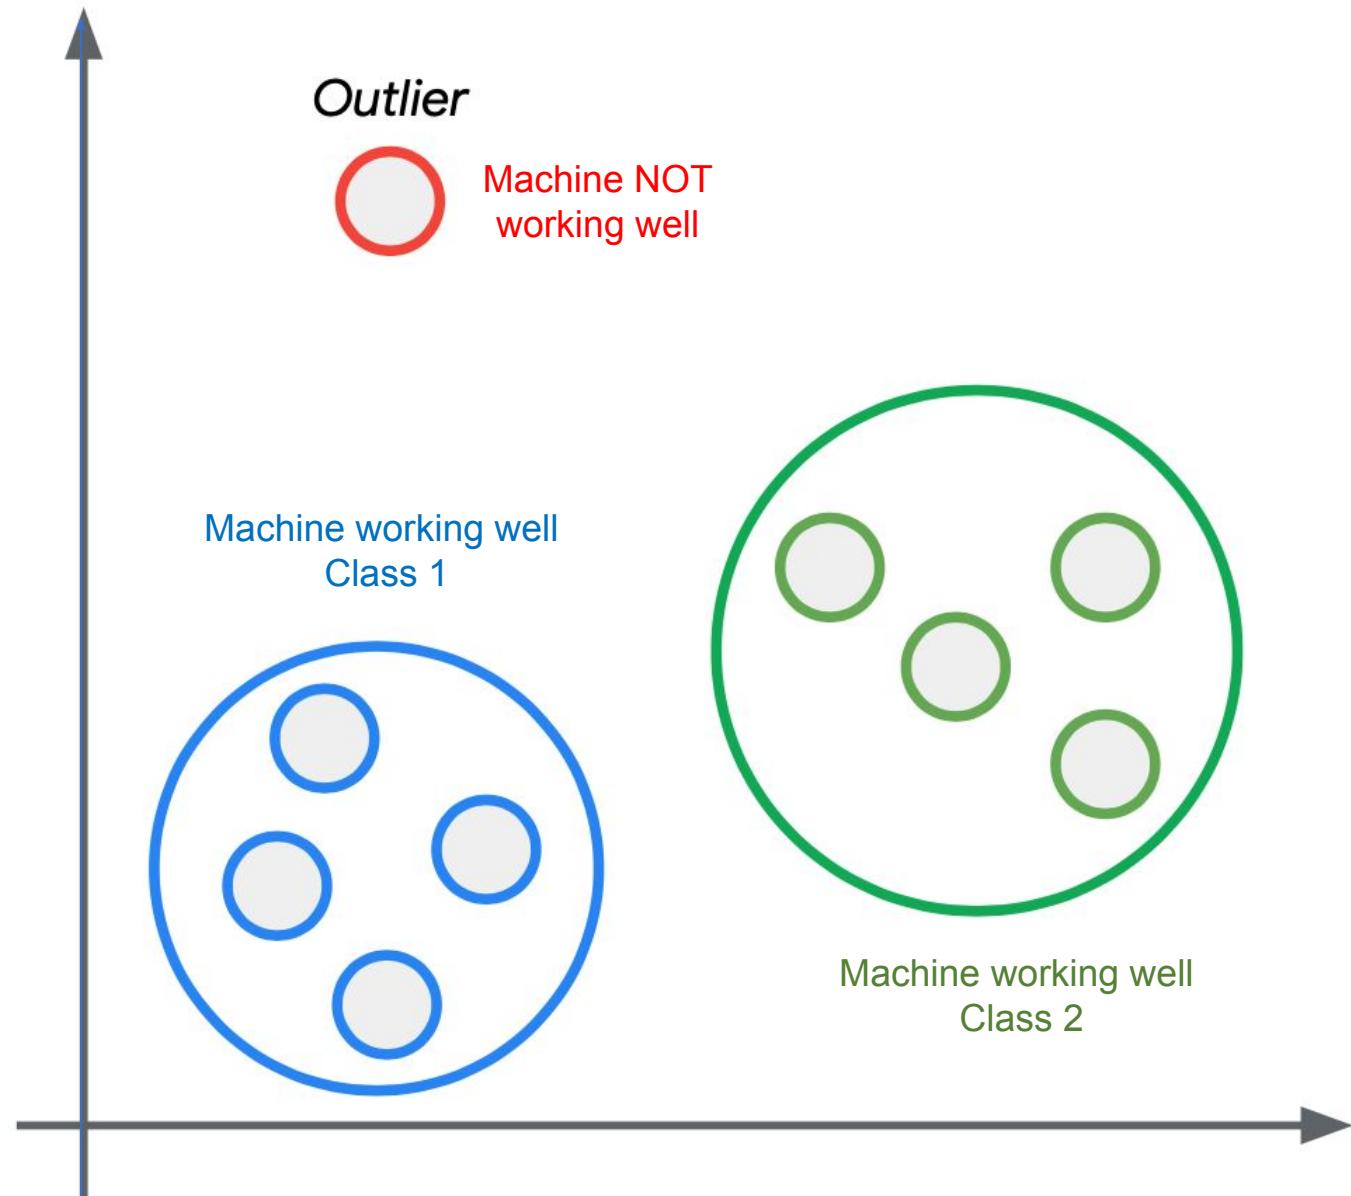

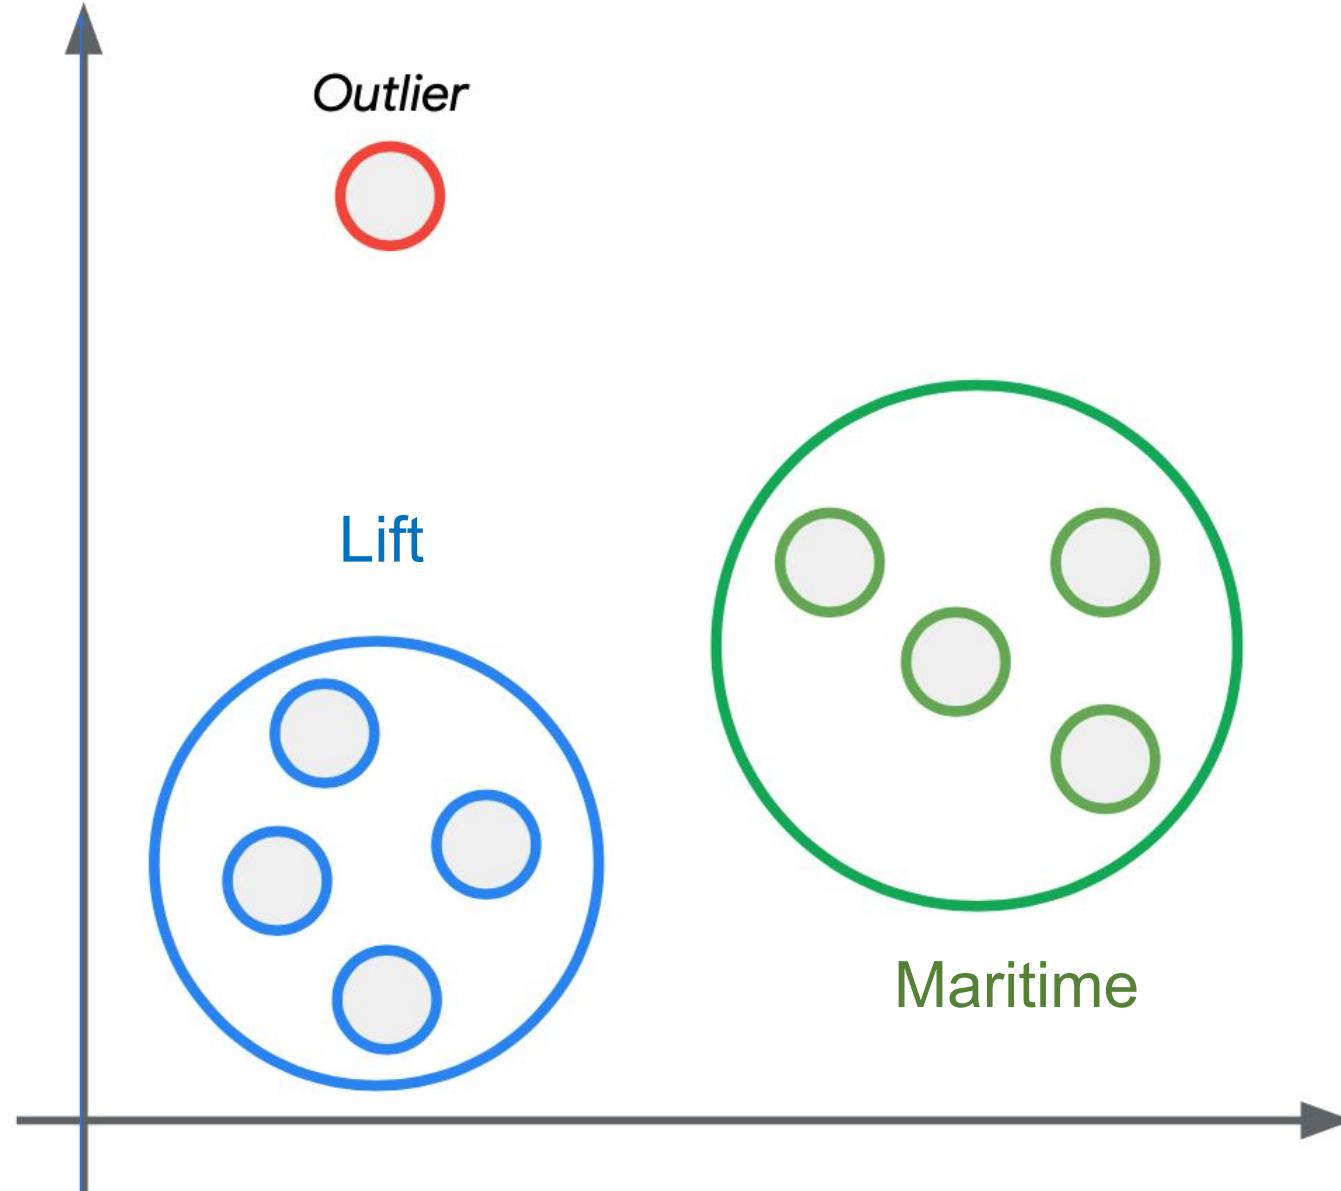

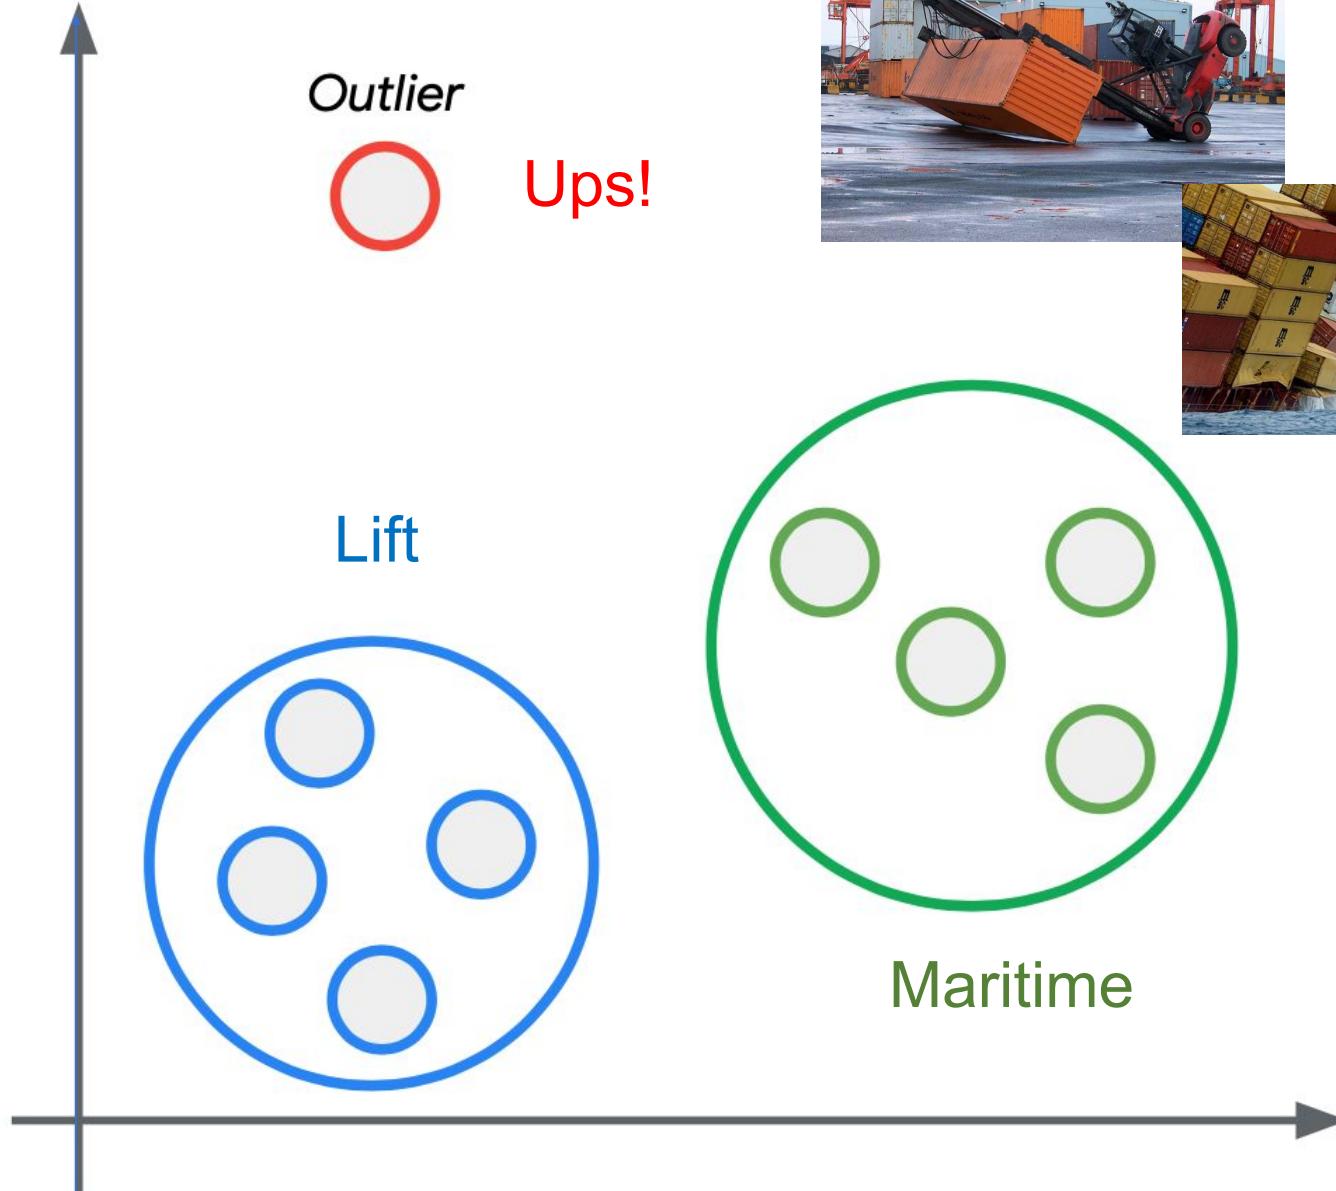

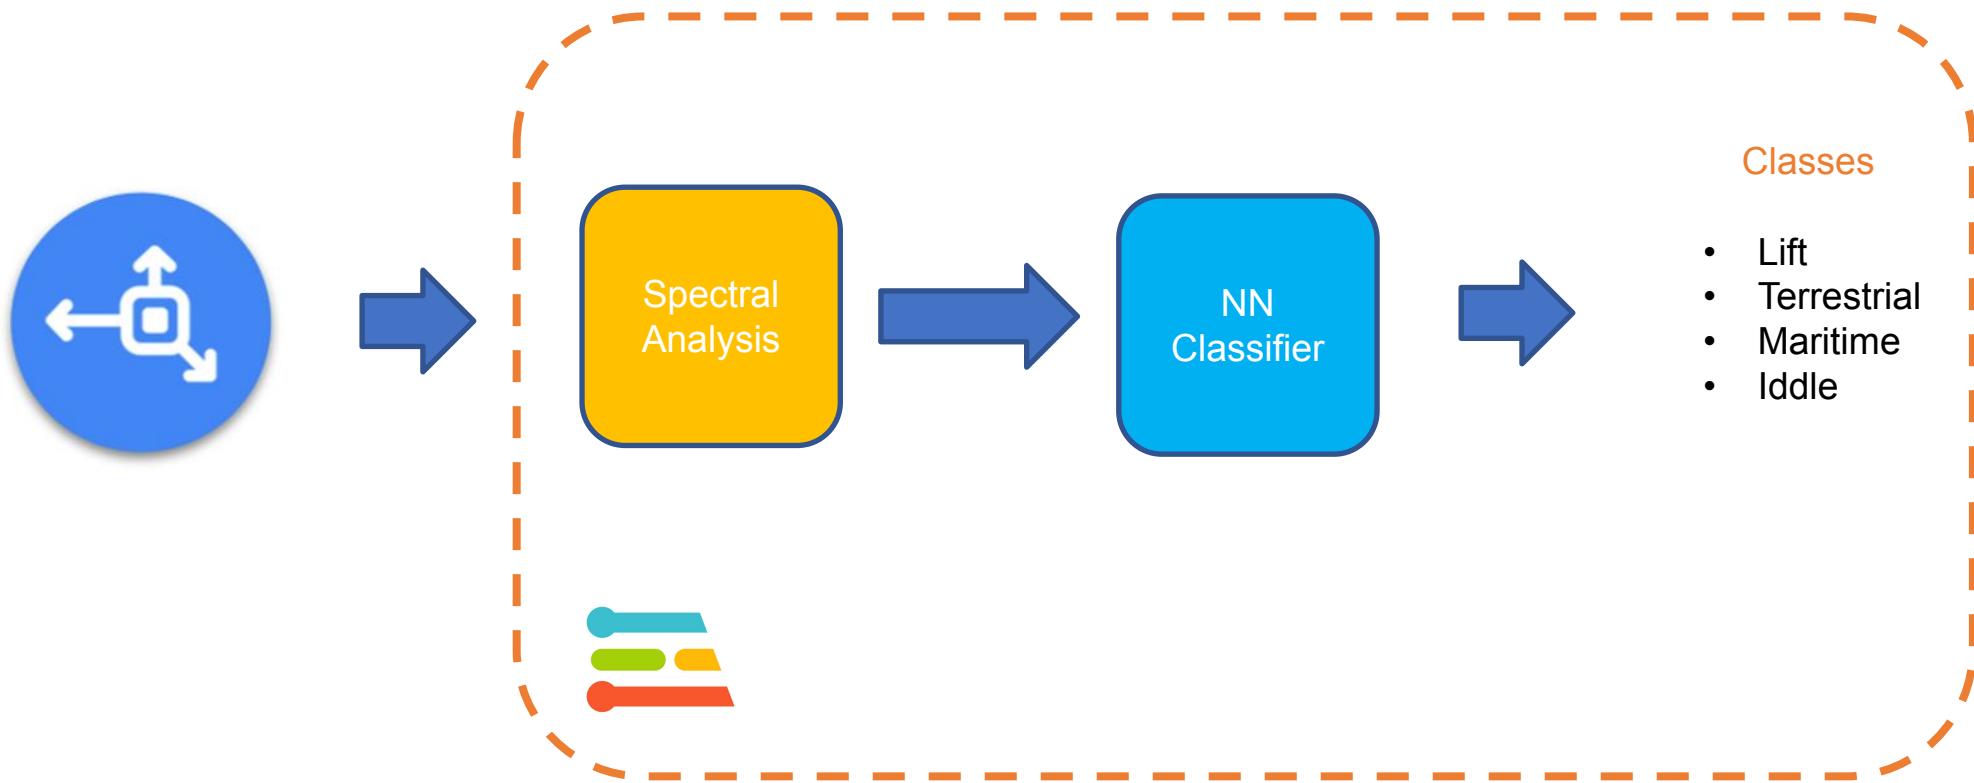

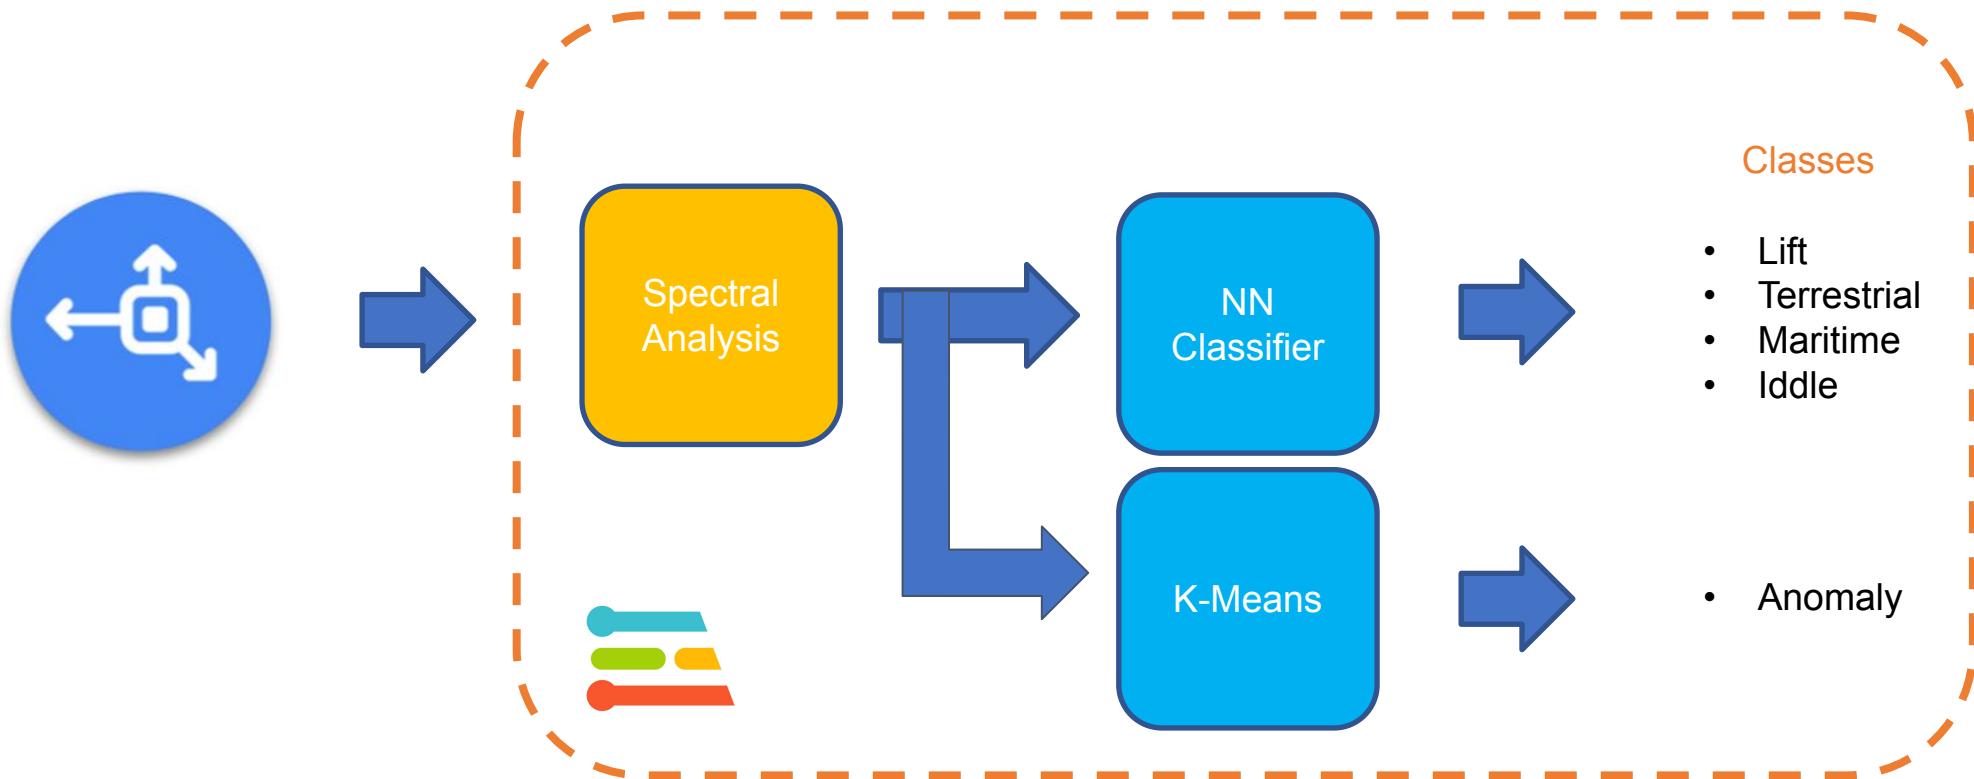

Create impulse - IESTI01 - Nano Motion Classification

studio.edgeimpulse.com/studio/61345/create-impulse

MJRoBot (Marcelo Rovai)

EDGE IMPULSE

CREATE IMPULSE (IESTI01 - NANO MOTION CLASSIFICATION)

An impulse takes raw data, uses signal processing to extract features, and then uses a learning block to classify new data.

Time series data

Spectral Analysis

Classification (Keras)

Output features

Axes
accX, accY, accZ

Window size

Window increase

Frequency (Hz)
100

Zero-pad data

Add a learning block

Some learning blocks have been hidden based on the data in your project.

DESCRIPTION	AUTHOR	RECOMMENDED
Classification (Keras) Learns patterns from data, and can apply these to new data. Great for categorizing movement or recognizing audio.	EdgImpulse Inc.	
Anomaly Detection (K-means) Find outliers in new data. Good for recognizing unknown states, and to complement classifiers.	EdgImpulse Inc.	
Regression (Keras) Learns patterns from data, and can apply these to new data. Great for predicting numeric continuous values.	EdgImpulse Inc.	

Save Impulse

Cancel

GETTING STARTED

Documentation

Forums

© 2021 EdgImpulse Inc. All rights reserved

58

Create impulse - IESTI01 - Nano Motion Classification

studio.edgeimpulse.com/studio/61345/create-impulse

MJRoBot (Marcelo Rovai)

EDGE IMPULSE

An impulse takes raw data, uses signal processing to extract features, and then uses a learning block to classify new data.

Time series data

Axes: accX, accY, accZ

Window size: 2000 ms.

Window increase: 80 ms.

Frequency (Hz): 100

Zero-pad data:

Spectral Analysis

Name: Spectral features

Input axes: accX, accY, accZ

Classification (Keras)

Name: NN Classifier

Input features: Spectral features

Output features: 4 (idle, lift, maritime, terrestrial)

Output features

5 (idle, lift, maritime, terrestrial, Anomaly score)

Anomaly Detection (K-means)

Name: Anomaly detection

Input features: Spectral features

Output features: 1 (Anomaly score)

Add a processing block

Save Impulse

59

Anomaly detection - SciTinyML

studio.edgeimpulse.com/studio/51963/learning/anomaly/52

EDGE IMPULSE

ANOMALY DETECTION (SCITINYML-MOTION-ANOMALY-PROJECT)

#1 ▾ Click to set a description for this version

Anomaly detection settings

Cluster count: 4

Axes: accX RMS ★ accX Peak 1 Freq accX Peak 1 Height accX Peak 2 Freq accX Peak 2 Height accX Peak 3 Freq accX Peak 3 Height accX Spectral Power 0.1 - 0.5 accX Spectral Power 0.5 - 1.0 accX Spectral Power 1.0 - 2.0 accX Spectral Power 2.0 - 5.0 accZ RMS ★ accZ Peak 1 Freq accZ Peak 1 Height accZ Peak 2 Freq accZ Peak 2 Height accZ Peak 3 Freq accZ Peak 3 Height accZ Spectral Power 0.1 - 0.5 accZ Spectral Power 0.5 - 1.0 accZ Spectral Power 1.0 - 2.0 accZ Spectral Power 2.0 - 5.0

Select all axes

Anomaly explorer (3,230 samples)

X Axis: accX RMS Y Axis: accY RMS Test data: -- No test data

trained

Training output

```

Copying features from processing blocks...
Copying features from DSP block...
Copying features from DSP block OK
Copying features from processing blocks OK

Training model
Job started
scaler scale [1.23777729 1.02773968 1.10088427] mean [0.95382248 0.94990646 1.12868147] var [1.53209261 1.05624885 1.21194617]
trained_clusters [{"center": [-0.5379795432090759, -0.30185389518737793, -0.8996922373771667], "max_error": 1.80506750641951}, {"center": [-0.2765962481498718, -0.5444689393043518, 0.5496397018432617], "max_error": 1.4696349225868046}, {"center": [0.4085573256015776, 2.168626173019409, 1.249598737182617], "max_error": 2.7492433102802676}, {"center": [2.1753463745117188, 0.555717945098877, 1.3917098804534912], "max_error": 2.6628344654985634}]

```

Job completed

© 2021 EdgeImpulse Inc. All rights reserved

Anomaly detection - SciTinyML

studio.edgeimpulse.com/studio/51963/learning/anomaly/52

EDGE IMPULSE

ANOMALY DETECTION (SCITINYML-MOTION-ANOMALY-PROJECT)

#1 ▾ Click to set a description for this version

Anomaly detection settings

Cluster count: 32

Axes: accX RMS ★ accX Peak 1 Freq accX Peak 1 Height accX Peak 2 Freq accX Peak 2 Height accX Peak 3 Freq accX Peak 3 Height accX Spectral Power 0.1 - 0.5 accX Spectral Power 0.5 - 1.0 accX Spectral Power 1.0 - 2.0 accX Spectral Power 2.0 - 5.0 accZ RMS ★ accZ Peak 1 Freq accZ Peak 1 Height accZ Peak 2 Freq accZ Peak 2 Height accZ Peak 3 Freq accZ Peak 3 Height accZ Spectral Power 0.1 - 0.5 accZ Spectral Power 0.5 - 1.0 accZ Spectral Power 1.0 - 2.0 accZ Spectral Power 2.0 - 5.0 accY RMS ★ accY Peak 1 Freq accY Peak 1 Height accY Peak 2 Freq accY Peak 2 Height accY Peak 3 Freq accY Peak 3 Height accY Spectral Power 0.1 - 0.5 accY Spectral Power 0.5 - 1.0 accY Spectral Power 1.0 - 2.0 accY Spectral Power 2.0 - 5.0

Select all axes

Anomaly explorer (3,230 samples)

X Axis: accX RMS Y Axis: accY RMS Test data: -- No test data

● trained

Training output


```

0.6358923488456604}, {"center": [0.2331821322441101, -0.44085508584976196, 1.193619966506958], "max_error": 0.43379442394199896}, {"center": [-0.84211855307221413, 1.622160792350769, 1.563327550888615], "max_error": 0.7400662371471811}, {"center": [2.5153045654296875, 0.10167547315359116, 1.1958473920822144], "max_error": 0.6889784598589724}, {"center": [0.6476534008979797, 2.6941537857055664, 1.7468148469924927], "max_error": 0.6253048107657685}, {"center": [-0.09443876147270203, 3.532026529312134, 1.4222177267074585], "max_error": 0.6722667084735653}, {"center": [2.1073172092437744, -2.99822887184143, 0.9732017517089844], "max_error": 0.5098888571637854}, {"center": [1.360011339187622, 2.0014262199401855, 0.6398685574531555], "max_error": 0.75014806960636}, {"center": [1.362937688275146, 0.8849844336509785, 1.6627943515777588], "max_error": 0.5872878607683915}, {"center": [1.6086387634277344, 0.635323166847229, 0.2745974659919739], "max_error": 0.7719379326342638}, {"center": [2.882452487945566, 0.21148265898227692, 1.768933892250061], "max_error": 0.5465858786758827}, {"center": [3.2645251750946045, 1.6626498699188232, 1.3556557893753852], "max_error": 0.7446547869773675}, {"center": [1.2767698420158757, 3.724461978643799, 1.3416912555694581], "max_error": 0.91880358736727107}, {"center": [3.0170180797576904, 3.0672569274902344, 0.8234216570854187], "max_error": 0.9686505165548877}]

```

Job completed

© 2021 EdgeImpulse Inc. All rights reserved

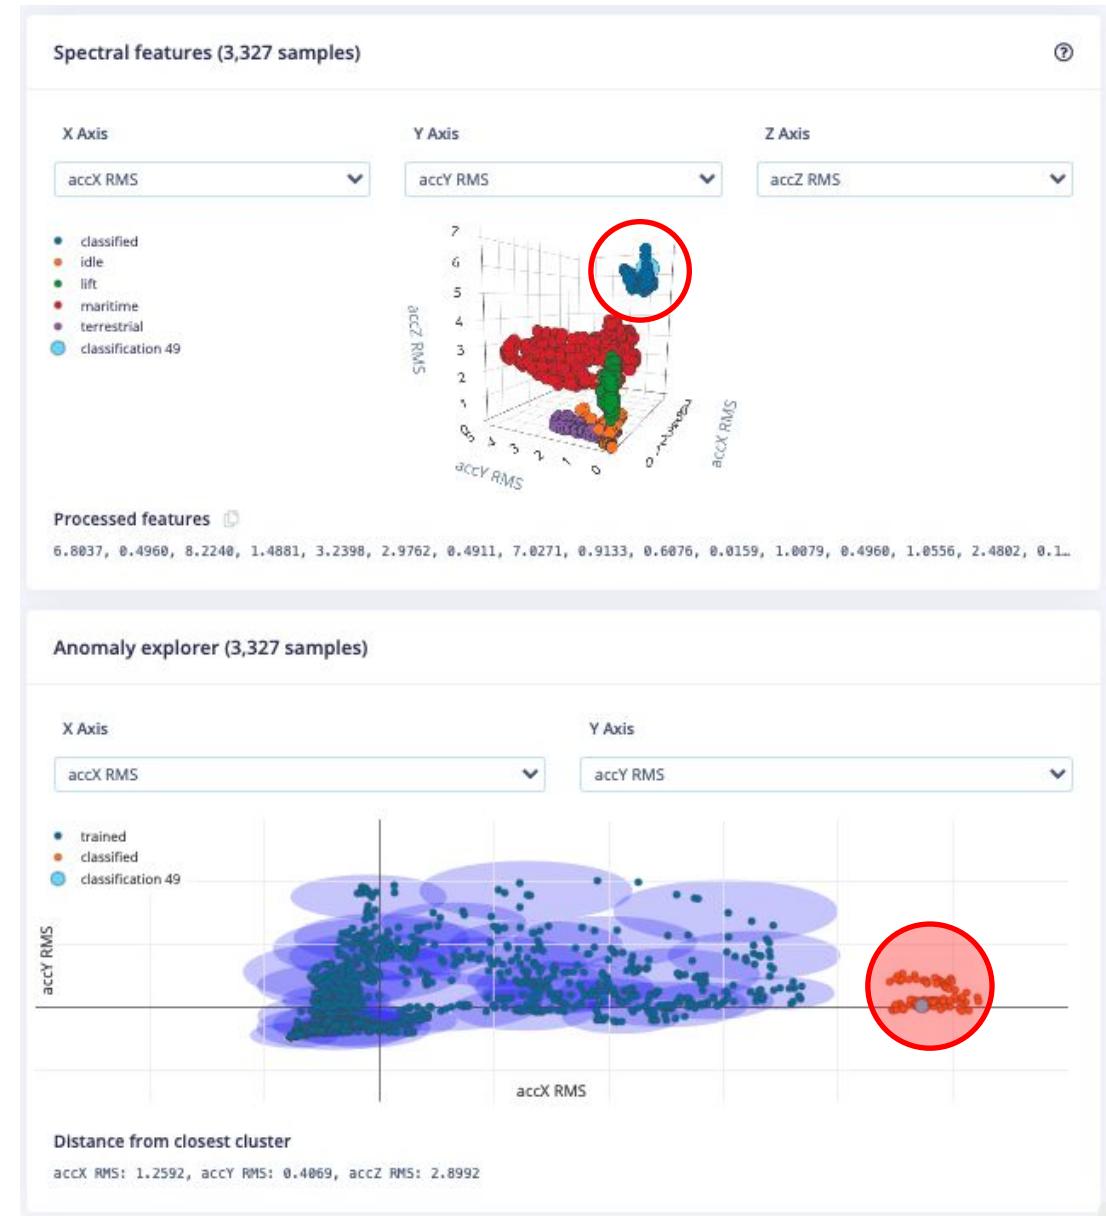

CNMAC_Motion_Anomaly - De X +

studio.edgeimpulse.com/studio/139905/deployment

Edge Impulse Imagine! Join us for the latest innovations in edge machine learning for the real world, Sept 28-30. [Learn more.](#)

EDGE IMPULSE

- Dashboard
- Devices
- Data sources
- Data acquisition
- Impulse design
 - Create impulse
 - Spectral features
 - NN Classifier
 - Anomaly detection
- EON Tuner
- Retrain model
- Live classification
- Model testing
- Versioning
- Deployment

Scan this QR code

To run your impulse on your mobile phone, click [here](#) or scan the QR code.



© 2022 EdgeImpulse Inc. All rights reserved

15:49 AA 39

phone.edgeimpulse.com

Classifier

Sampling... 6s

	IDLE	LIFT	MARITIME	TERRESTRIAL	ANOMALY
4	0.00	0.00	1.00	0.00	2.00
3	0.01	0.00	0.16	0.83	-0.10

< >  

63

To learn more about Edge AI

- UNIFEI - IESTI01 TinyML - Machine Learning for Embedding Devices
- Professional Certificate in Tiny Machine Learning (TinyML) – edX/Harvard
- Introduction to Embedded Machine Learning - Coursera/Edge Impulse
- Computer Vision with Embedded Machine Learning - Coursera/Edge Impulse
- "Deep Learning with Python" book by François Chollet
- "TinyML" book by Pete Warden, Daniel Situnayake
- "TinyML Cookbook" by Gian Marco Iodice
- "AI at the Edge" book by Daniel Situnayake, Jenny Plunkett

Thanks



UNIFEI

